


MODEL 219.3

Shown on left outer door handle

- 1 Outer door handle
- 2 Electrical connector
(with code (889) Keyless go)
- 3 Gasket
- 4 Connection
(with code (889) Keyless go)
- 5 Bearing bracket

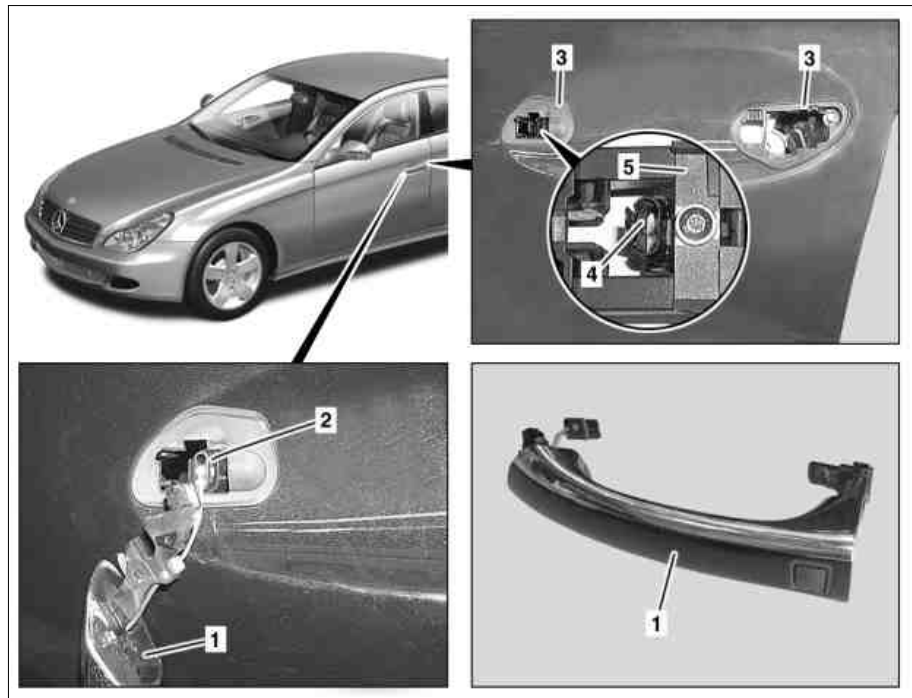

P72.10-3005-06

☒ ☒	Removing, installing		
1.1	Remove front door lock cylinder	When removing left outer door handle (1) on driver's door	AR72.10-P-4015TX
1.2	Remove outer door handle guide from front door	When removing right outer door handle (1) on passenger door	AR72.10-P-2410TX
2.1	Pull outer door handle (1) out of bearing bracket (5) toward rear and remove	On vehicles without code (889) Keyless go. i Installation: Ensure that seals (3) are seated correctly on front door and outer door handle (1) in bearing bracket.	
2.2	Pull outer door handle (1) out of bearing bracket (5) toward rear, disconnect electrical connector (2) and remove outer door handle (1)	On vehicles with code (889) Keyless go. i Arrest connection (4) of electrical connector (2) on bearing bracket (5) in assembly position i Installation: After connecting electrical connector (2), unlock connection (4) on bearing bracket (5) and press inward. Ensure that seals (3) are seated correctly on front door and outer door handle (1) in bearing bracket	
3	Install in the reverse order		
4	Check lock system for proper function		