


**MODEL 219.3**

- 1**      *Electrical connector*
- 2**      *Wiring harness*
- 3**      *Bolts*
- 4**      *Blower base*
- 5**      *Bolts*

- A32m1**    *Blower motor*
- A32n1**    *Blower regulator*

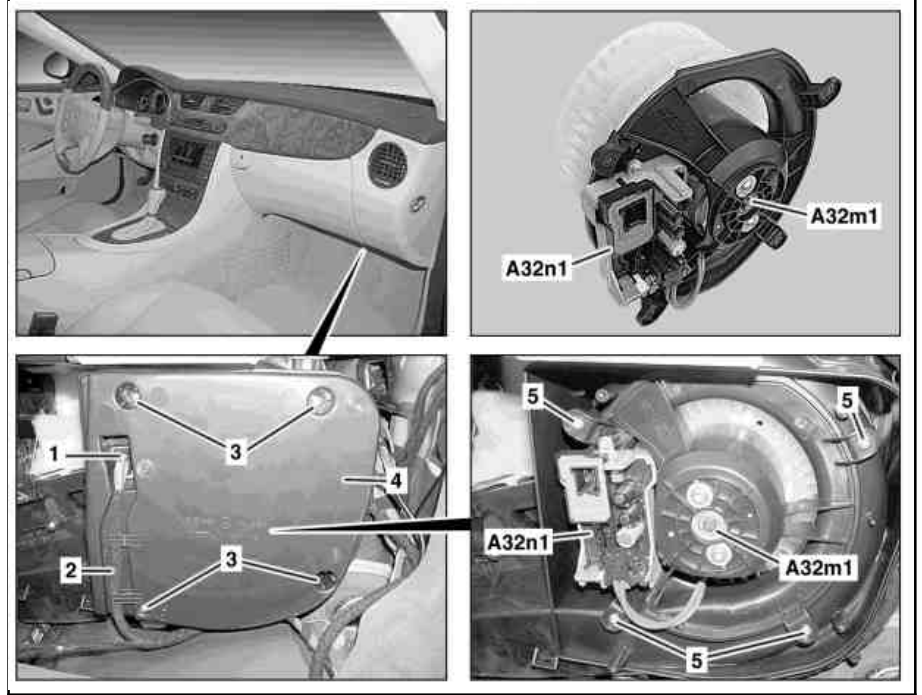

P83.25-2247-06

**Modification notes**

|        |  |  |
|--------|--|--|
| 5.7.06 | "Disconnect/connect battery ground line" removed |  |
|--------|--|--|

|  |     | Remove/install   |   |
|--|-----|--|---|
|  | 1   | Remove cover below instrument panel on right   | AR68.10-P-1520TX  |
|  | 2   | Disconnect electrical connector (1) and expose electrical wiring harness (2)                                 |   |
|  | 3   | Remove bolts (3) using a cordless drill/driver and remove blower base (4)                                    | Cordless drill/driver<br><br>*WH58.30-Z-1007-20A  |
|  | 4   | Remove bolts (5) using a cordless drill/driver and remove blower motor (A32m1) with blower regulator (A32n1) | ⚠ Do not place blower motor (A32m1) onto fan wheel, otherwise the fan wheel may become distorted, which will cause blower motor (A32m1) imbalance.<br><br>*WH58.30-Z-1007-20A |
|  | 5.1 | Remove blower regulator (A32n1) from blower motor (A32m1)  | Only when replacing the blower motor (A32m1).<br><b>i</b> See: ↓<br>Remove and install electronic blower control unit<br><br>AR83.25-P-1220TX                                 |
|  | 6   | Install in the reverse order   |   |
|  | 7   | Perform a function test  |   |

**Commercially available tools**

| Number             | Designation           |
|--------------------|-----------------------|
| WH58.30-Z-1007-20A | Cordless drill/driver |