



P88.50-2665-09

- | | | |
|------------------|------------------------|---------------------------------|
| 1 Trunk lid | 5 Screw | 9 Locking eye cover |
| 2 Bowden cable | 6 Trunk lid lock | 10 Rear center section paneling |
| 3 Lock actuation | 7 Electrical connector | 11 Locking eye |
| 4 Seal | 8 Trunk lid lock | 12 Bolts |

	Remove/Install		
⚠ Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/ rear-end door or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Remove paneling from trunk lid (1)		AR68.30-P-8150TX
2	Remove Bowden cable (2) from lock actuation (3)		
3	Remove seal (4)		
4	Unscrew bolts (5)	i Installation: Align trunk lid lock (6) in center in relation to recess in trunk lid (1) and tighten bolts (5) Nm	*BA88.50-P-1002-01D
5	Unplug electrical connector (7)		
6	Remove trunk lid lock (6) from trunk lid (1)		
7	Unclip locking eye cover (9) from rear center section paneling (10)	i Installation: Clip in locking eye cover (9) after adjusting trunk lid (1)	
8	Unscrew bolts (12) and remove locking eye (11) from rear center section	i Installation: Align locking eye (11) in center in relation to trunk lid lock (8) and tighten bolts (12) Nm	*BA88.50-P-1001-01D
9	Install in the reverse order		
10	Check whether trunk lid lock (6) locks and unlocks correctly.	i Lock trunk lid lock (8) with a screwdriver, then unlock trunk lid lock (6) manually via lock actuation (3)	
11	Check height of trunk lid (1)	i Trunk lid (1) should be flush with rear fenders i If necessary: ↓ Adjust trunk lid	AR88.50-P-5200TX

Nm Trunk lid

Number	Designation	Model
		219

BA88.50-P-1001-01D	Bolt to locking eye	Nm	9
BA88.50-P-1002-01D	Screw, trunk lid lock to trunk lid	Nm	9