


## MODEL 219.3 with CODE (881) Remote trunk closing (RTC)

- 1 Power closing
- 2 Rear end panel
- 3 Locking eye
- 4 Bolts
- 5 Electrical connector
- 6 Pin
- 7 Actuation lever for locking eye
- 8 Locking eye cover
- 9 Rear center section paneling
- 10 Trunk lid

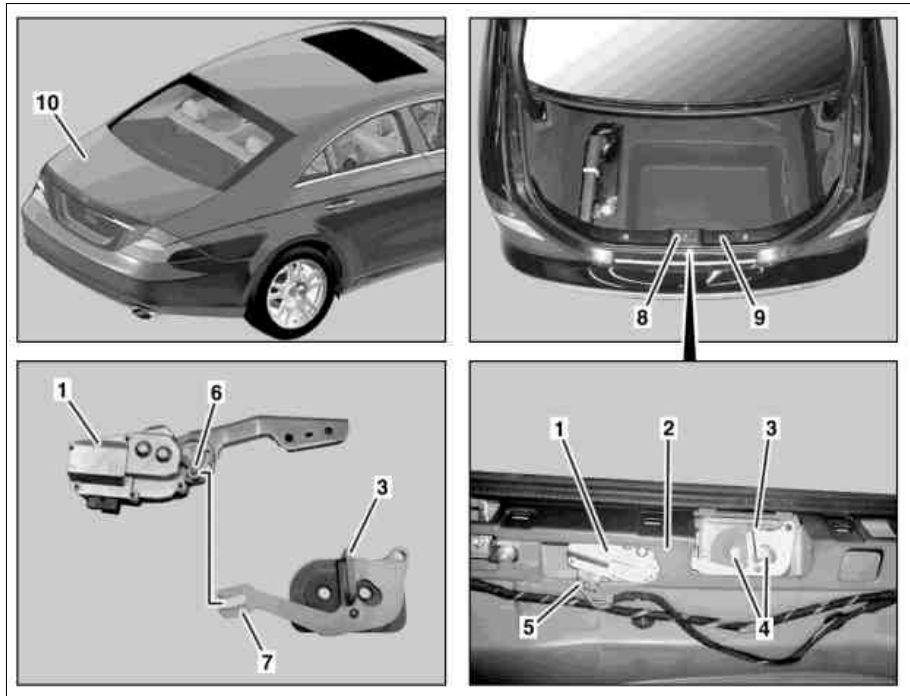

P80.40-2011-06

	<b>Remove</b>		
1	Open trunk lid (10)		
2	Unclip locking eye cover (8)		
3	Remove rear center section paneling (9)		AR68.30-P-4785TX
4	Mark installation position of locking eye (3) on rear end panel (2)		
5	Disconnect electrical connector (5)		
6	Remove bolts (4)		
7	Remove locking eye (3)		
8	Remove power closing (1)		
	<b>Install</b>		
9	Install power closing (1) in rear end panel (2)		
10	Insert locking eye operating lever (7) into bolts (6) of power closing (1) and position locking eye (3) on rear end panel (2)		
11	Loosely screw screws (4) into power closing (1) through locking eye (3)		
12	Align locking eye (3) according to marking and tighten bolts (4)	Top edge of carrier plate for locking eye (3) should be parallel to upper edge of rear end panel (2)	
13	Connect electrical connector (5)		
14	Install rear center section paneling (9)	Do not install locking eye cover (8).	AR68.30-P-4785TX
15	Check height of trunk lid (10)	Closed trunk lid (10) should be flush with rear fenders If necessary, adjust height of trunk lid (10) Refer to: ↓ Adjust trunk lid	AR88.50-P-5200TX
16	Tighten bolts (4)		*BA88.50-P-1001-01D
17	Install locking eye cover (8)		
18	Check remote trunk closing (RTC) for proper function	Open and close trunk lid (10) with various actuation possibilities. See owner's manual	

## Trunk lid

Number	Designation	Model
		219

BA88.50-P-1001-01D	Bolt to locking eye	Nm 9