

MODEL 219.3

except CODE (404) Left multicontour seat

except CODE (405) Right multicontour seat


except CODE (433) Left dynamic seat, incl. multicontour seat

except CODE (434) Right dynamic seat, incl. multicontour seat

- 1 Backrest upholstery
- 2 Terminal strips
- 3 Retaining hook
- 4 Electrical line
(with code (873) Heated seats for left and right front seats, or code (401) Front deluxe seats, incl. seat heating and seat ventilation)

M27m4 Head restraint up/down motor
(with code (275) Memory package (driver seat, steering column, mirror)

M28m4 Head restraint up/down motor
(with code (242) Electrically adjustable front passenger seat with memory)

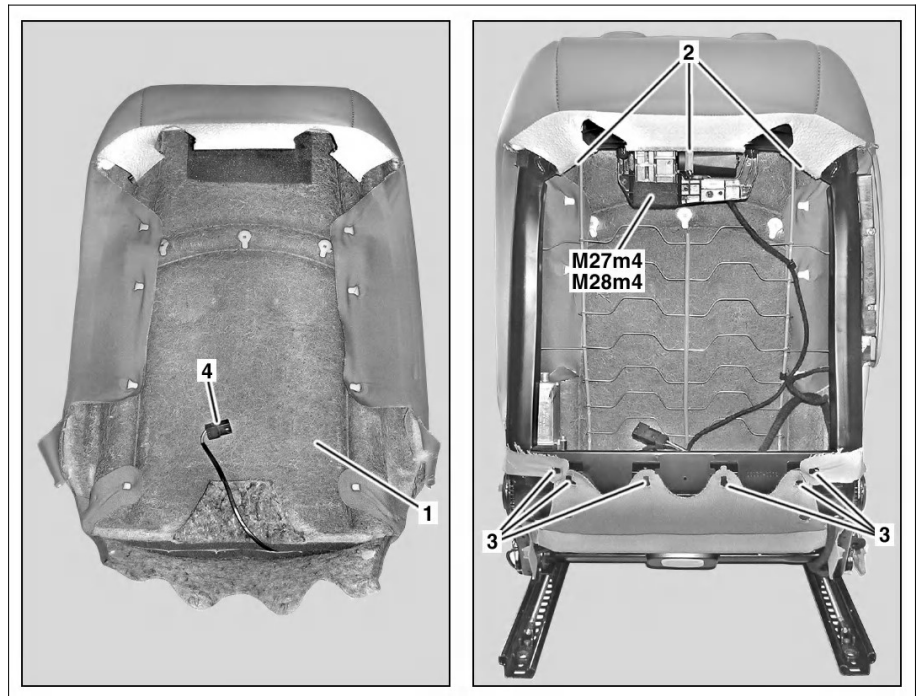

P91.10-2794-06

	Remove/Install		
1	Remove head restraint guide		AR91.16-P-0050TX
2	Remove tensioning element from front seat backrest		AR91.10-P-1910TX
3.1	Remove head restraint up/down motor (M27m4) or head restraint up/down motor (M28m4)	Only on front seats with code (275) Memory package (driver seat, steering column, mirror) or with code (242) Electrically adjustable front passenger seat with memory	AR91.29-P-1432TX
4	Unhook lower backrest padding (1) from retaining hooks (3) on backrest frame		
5	Unclip terminal strips (2) from backrest padding (1) at backrest frame		
6.1	Disconnect electrical line (4) of heated seats and expose electrical line (4)	Only on front seats with code (873) Heated seats for left and right front seats, or with code (401) Front deluxe seats, incl. seat heating and seat ventilation	
7.1	Disconnect electrical connector of seat ventilation motors from front seat backrest	Only on front seats with code (401a) Front deluxe seats incl. seat heater and seat ventilation	
8	Push rear seat cushion down and remove lower backrest padding (1) towards front		
9	Pry off backrest padding (1) and remove	Installation: Align backrest padding (1).	
10	Install in the reverse order		