


MODEL 219.3

Shown on left front seat

- 1 Tensioning element
- 2 Bolts
- 3 Cover
- 4 Hand wheel

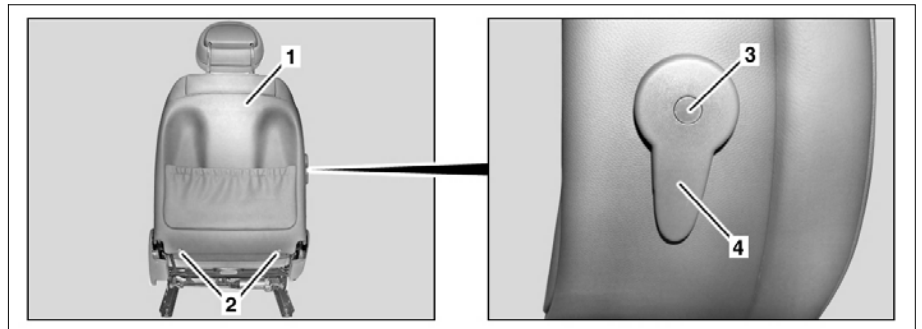

P91.10-2768-04

☒ ☒	Remove/Install		
1	Move the left or right front seat forward and move the backrest to the vertical position	i See Operating Instructions	
2.1	Unclip cover (3) with suitable screwdriver and remove screw beneath it	Only with driver seat without code (404) left multicontour seat or without code (433) left dynamic seat, incl. multicontour seat	
3.1	Remove hand wheel (4) for lumbar support	Only with driver seat without code (404) left multicontour seat or without code (433) left dynamic seat, incl. multicontour seat	
4	Remove screws (2)		
5	Slide seat-back lining (1) at front seat backrest downward out of guides and remove	⚠ Remove front seat backrest seat-back lining (1) carefully to prevent damage to guides on seat-back lining (1).	
6	Install in the reverse order		