

- 1) To raise the backrest contour
- (2) To soften the backrest contour
- (3) To lower the backrest contour
- (4) To harden the backrest contour

Adjusting the AMG Performance Seat

General notes


To adjust the contour of the seat and for improved lateral support, you can individually adjust the front seats.

The AMG Performance seat is designed for the standard three-point seat belt. If you install another multi-point seat belt, e.g. sport or racing seat belts, the restraint system cannot provide the best level of protection.

For further information about the seat belt (⊳ page 41)

Adjusting the side bolsters of the seat cushion and the seat backrest

Driver's seat

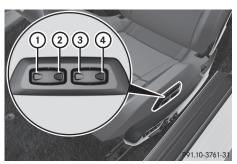

Side bolsters of the seat cushion

► To narrow: press button (1).


▶ To broaden: press button ②.

Side bolsters of the seat backrest

▶ To narrow: press button ③.

▶ To broaden: press button (4).

Front-passenger seat

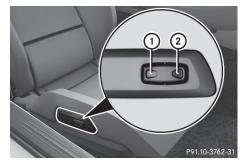

Side bolsters of the seat backrest

▶ To narrow: press button (1).

▶ To broaden: press button ②.

1 The side bolsters of the front-passenger seat cushion cannot be adjusted.

Switching the seat heating on/off

Switching on/off

↑ WARNING

Repeatedly switching on the seat heating can cause the seat cushion and backrest pads to become very hot. The health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries. There is a risk of injury.

Therefore, do not switch the seat heating on repeatedly.