


## MODEL 190


- 1 Vehicle lift support point  
 2 Vehicle lift support arm  
 3 Support plate  
 4 Vehicle lift safety device  
 5 Lever  
 6 Rubber pad

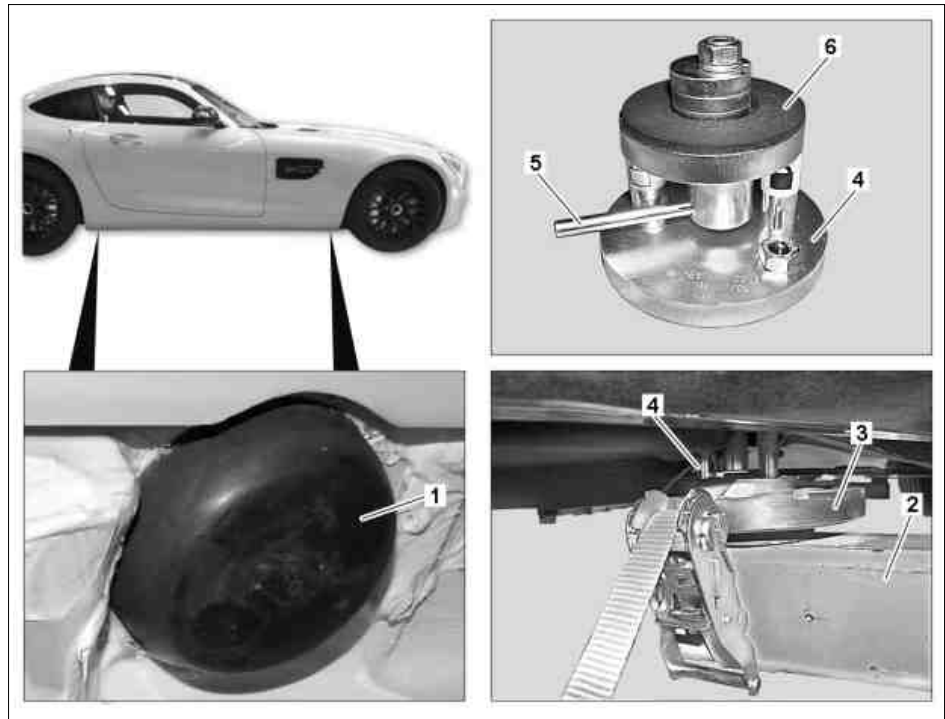

P00.60-2202-06


	<b>Risk of death</b> caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between vehicle lift columns and position the four support plates at the vehicle lift support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
	<b>Mount/detach</b>		
1	Pry vehicle lift support point (1) out of longitudinal members	⚠ Do not use sharp-edged tools. This can result in damage to the longitudinal member.	
2	Install rubber plates (6) on vehicle lift safety devices (4)	<p><b>i</b> If no rubber plates (6) are installed on the vehicle lift safety devices (4).</p> <p><b>i</b> Check rubber plate (6) and replace if necessary.</p> <p><input checked="" type="checkbox"/> Vehicle hoist securing tool</p> <p><input checked="" type="checkbox"/> Rubber pad</p>	<p>*169589023100</p> <p>*169589023110</p>
3	Insert vehicle lift safety devices (4) into longitudinal members	<p><b>i</b> The vehicle lift safety devices (4) must <b>always</b> be mounted in pairs (i.e. at two positions) into the longitudinal members of the vehicle. The vehicle lift safety devices (4) can be mounted both at the front or at the rear, they may not be mounted on one side of the vehicle or diagonally on it.</p> <p><input checked="" type="checkbox"/> Vehicle hoist securing tool</p>	*169589023100
4	Swivel levers (5) of vehicle lift safety devices (4) to the right until the levers (5) are secured	<b>i</b> Thus, the vehicle lift safety devices (4) are locked onto the longitudinal members. Check that vehicle lift safety devices (4) are firmly seated.	
5	Turn support plates (3) of vehicle lift support arms (2) far enough until they make contact with the vehicle lift safety devices (4) or vehicle lift support points (1) of the longitudinal members		
6	Raise vehicle with vehicle lift		AR00.60-P-1000RG

7	Secure vehicle lift safety devices (4) using tensioning straps on the vehicle lift support arms (2)		
8	Dismantle in reverse order		

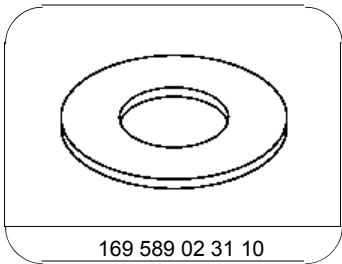

169 589 02 31 10

Rubber pad

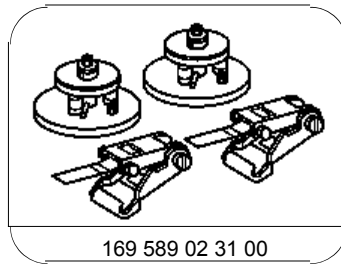

169 589 02 31 00

Vehicle hoist securing tool

← **Costs >\$500!**