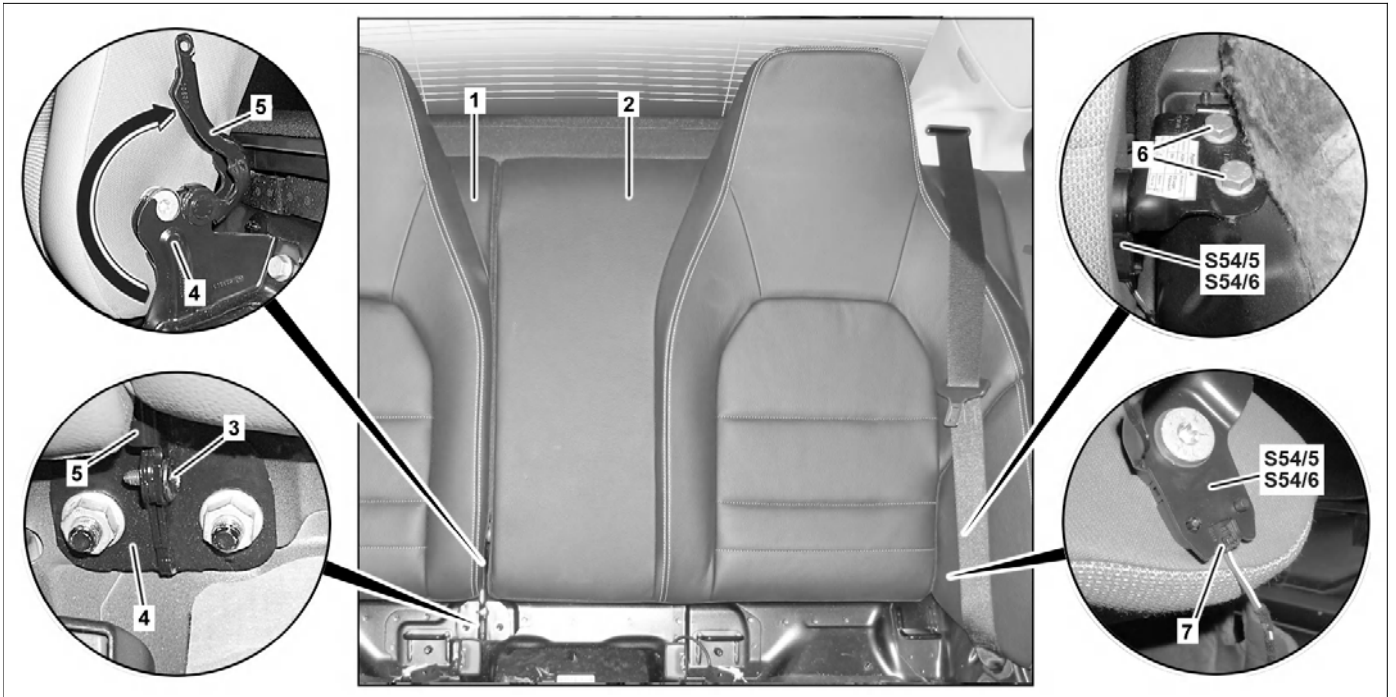


**MODEL 204.3**

with CODE (287) Through-loading feature  
except CODE (P98) Black Series

MODEL 204.3 with CODE (224) Design individual seats in rear

**MODEL 207.3**



 

P91.12-3459-09


**Shown on model 207.3**

- 1 Right rear backrest  
2 Left rear backrest  
3 Screw

- 4 Center pivot bearing  
5 Bearing bracket  
6 Bolts  
7 Electrical connector

- S54/5 Left rear backrest inclination switch  
S54/6 Right rear backrest inclination switch

 	Remove/install		
1	Remove left or right side bolster		AR91.12-P-1710EC
2	Remove bolt (3) from center pivot bearing (4)		
3	Swivel bearing bracket (5) through approx. 180° upwards		
4	Release right rear backrest (1) or left rear backrest (2) and fold forward		
5	Remove bolts (6) on outer pivot bearing		*BA91.12-P-1006-03I
6	Lift right rear backrest (1) or left rear backrest (2) and disconnect electrical connector (7) from left rear backrest inclination switch (S54/5) or right rear backrest inclination switch (S54/6)		
7	Pull outer seat belt to one side and remove right rear backrest (1) or left rear backrest (2) from the vehicle		Remove right rear backrest (1) or left rear backrest (2) from vehicle carefully to prevent damage to trim parts in interior.
8	Install in the reverse order		

** Rear seats**

Number	Designation		Model 204	Model 207
BA91.12-P-1006-03I	Bolt, outer pivot bearing to body	Nm	40	40