
AP09.10-P-0980MM Replace air filter element 17.6.11


ENGINE 157, 278 in MODEL 216
ENGINE 157, 276, 278 in MODEL 221
ENGINE 157, 276, 278 in MODEL 218
ENGINE 276 in MODEL 172, 204
ENGINE 276, 278 in MODEL 207
ENGINE 276, 278, 157 in MODEL 212
ENGINE 276 in MODEL 166, 251

Shown on engine 157

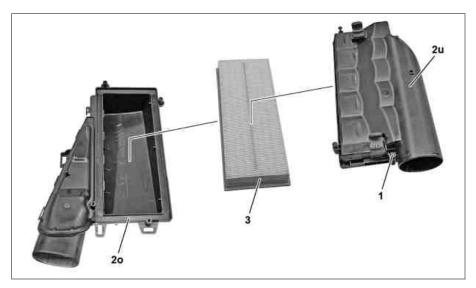

P09.10-2251-05

Shown on engine 276

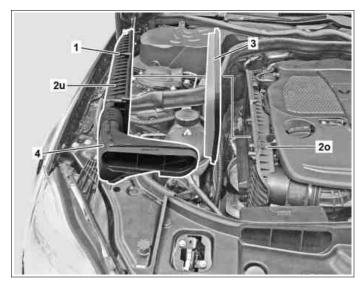

P09.10-2255-11

XX	Remove/install		
⚠ Danger!	Risk of injury to skin and eyes caused by handling hot or glowing objects.	Wear safety gloves, protective clothing and safety glasses, if necessary.	AS00.00-Z-0002-01A
(1)	Notes on avoiding damage through contamination and foreign objects		AH00.00-P-5000-01A
1	Switch off ignition		
2	Open engine hood	Model 166	AR88.40-P-1000GQ
		Model 207, 212	AR88.40-P-1000EW
		Model 251	AR88.40-P-1000RT
		Model 172, 204, 218, 216, 221	
3.1	Remove both air filter housings (2o)	Engine 157, 278	
		Place air filter housing (2o) onto padded	
		base. Damage can otherwise occur.	
3.2	Remove air filter housing (2o).	Model 166, 251 with engine 276	
		Place air filter housing (20) onto padded	
		base. Damage can otherwise occur.	
		Nm	*BA09.10-P-1001-01M
		Nm	*BA09.10-P-1002-01M

5	Loosen bolts (1)	i Bolts (1) remain in housing cover (2u).	
6	Remove housing cover (2u) and remove air	i Installation: Replace air filter element	
	filter element (3)	(3), do not clean.	
	Clean		
7	Clean insides of housing cover (2u) and air filter housing (2o)	Cleaner from package	*BR00.45-Z-1028-04A
8	Install in the reverse order		

Nm Air filter

Number	Designation	Engine 276
BA09.10-P-1001-01M	Bolt, air filter to cylinder head cover	9
BA09.10-P-1002-01M	Bolt, air filter to air intake pipe support brace Nn	9

Repair materials

Number	Designation	Order number
BR00.45-Z-1028-04A	Cleaner from package	Adolf Würth GmbH & Co. KG Reinhold-Würth-Str. 12-17 74653 Künzelsau-Gaisbach Germany Tel. +49 7940 15-0 Fax +49 7940 15-1000 www.wuerth.de