

MODEL 207.4

Shown on left side of vehicle


- 1 Seat belt
- 2 Screw
- 3 Belt end fitting
- 4 Automatic belt retractor
- 5 Bracket
- 6 Screw
- 7 Seat belt guide bracket
- 8 Seat belt guide
- 9 Screw
- 10 Guide
- 11 Screw

R12/6 Left rear emergency tensioning retractor squib





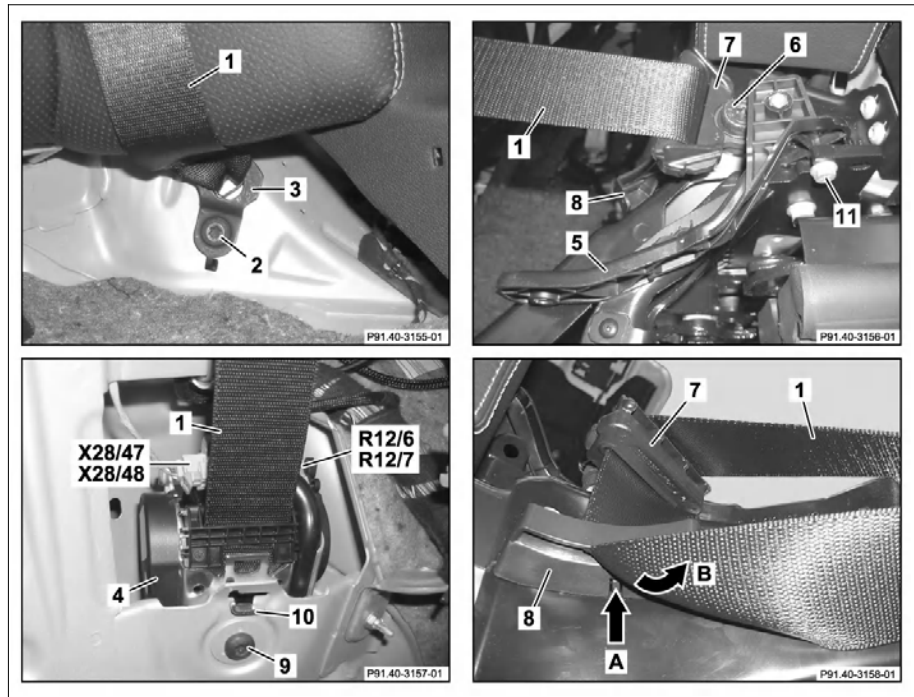

 
 
 

R12/7 Right rear emergency tensioning retractor squib




X28/47 Left rear emergency tensioning retractor squib electrical connector

 
X28/48 Right rear emergency tensioning retractor squib electrical connector



P91.40-3159-06

 	Remove/install		
	Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply.	AS91.00-Z-0001-01A
	Risk of injury caused by release of spring in the automatic belt retractor is released.	Never disassemble automatic belt retractors.	AS91.00-Z-0002-01A
	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases, even sever extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
	Notes on performing repair, body work and welding on vehicles with airbags and ETR units		AH91.00-P-0002-01M
	Legal requirements on handling and storing airbags and emergency tensioning retractor units		AH91.00-P-0004-01A
	Assessment of airbag and belt tensioner units in accident vehicles		AH91.00-P-0006-01B
1	Open soft top		
2	Open soft top compartment cover		
3	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit	 KEYLESS-GO start/stop button only with code (889) Keyless-Go	
4	Disconnect battery ground line		AR54.10-P-0003EW
5	Remove rear seat backrest		AR91.12-P-1620EA
6	Remove screw/bolt (11) and remove bracket (5)		
7	Remove screw/bolt (6) at guide fitting (7)		*BA91.40-P-1014-01P
8	Unclip belt guide (8)	 Press catch hook (arrow A), remove belt guide (8) by means of pivoting movement (arrow B).	
9	Disconnect left rear emergency tensioning retractor squib electrical connector (X28/47) at left rear emergency tensioning retractor squib (R12/6) or right rear emergency tensioning retractor squib electrical connector (X28/48) at right rear emergency tensioning retractor squib (R12/7)		
10	Remove screw/bolt (9) at automatic belt retractor (4)		*BA91.40-P-1013-01P
11	Remove seat belt (1) with automatic belt retractor (4)	 Installation: Insert and position automatic belt retractor (4) in guide (7).	

 OS		 If the automatic belt retractor (4) is replaced, the faulty automatic belt retractor (4) must be disposed of properly. Refer to: ↓ Notes on disposing of airbag and emergency tensioning retractor units	OS91.00-P-0001-01A
12	Install in the reverse order		
 AD	Check supplemental restraint system (SRS) with STAR DIAGNOSIS Connect STAR DIAGNOSIS and read out fault memory	After replacing the automatic belt retractors (4) with seat belt (1).	AD00.00-P-2000-04A

 **Seat belts/emergency tensioning retractors**

Number	Designation	Model 207
BA91.40-P-1013-01P	Bolt to rear inertia reel	Nm 35
BA91.40-P-1014-01P	Screw/bolt, rear belt guide bracket to rear panel	Nm 35