


## Illustrated on model 207.3


- Rear seat cushion 2
- 3 Rear seat belt
- Screw

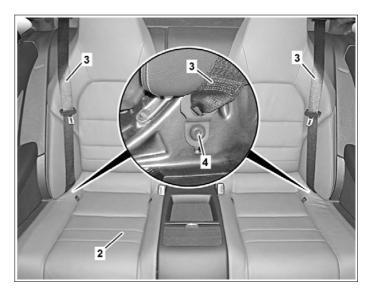



P68.30-3458-11

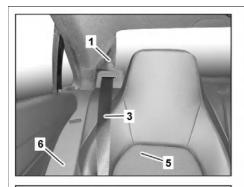


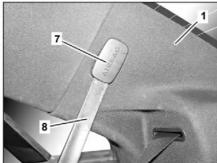

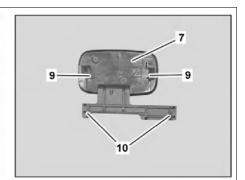

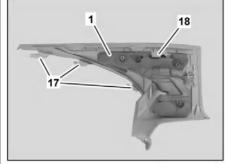

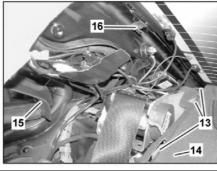

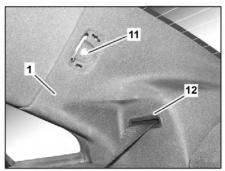

P68.30-3457-09

## Shown on model 207.3, right side of vehicle

- C-pillar paneling Rear seat belt
- 3 5 Rear seat backrest
- Bottom rear side paneling 6
- Cover

- 3 Assembly wedge 8
- Catch hook
- 10 Lugs
- Screw 11
- Trim ring


- Supports 13
- Rear shelf 14
- 15 Edge guard Clamp 16
- Guides 17
- Catch hook

XX	Remove/install		
1	Remove rear seat cushion (2)	Model 204.3, 207	AR91.12-P-1020EC
2	Unscrew screw (4) from belt end fitting	Nm	*BA91.40-P-1006-01P
3	Detach rear bottom side paneling (6) in rear area	i Detach rear bottom side paneling (6) only until C-pillar paneling (1) is accessible and can be removed	AR68.30-P-4780ED
4	Release rear seat backrest (5) and fold forward		
5	Unclip catch hook (9) from the cover (7) with assembly wedge (8)	S Assembly wedge	*110589035900

6	Lift cover (7), guide out of the C-pillar paneling (1) in the lower area and remove downwards	<b>i</b> Installation: Insert lugs (10) into the top of the C-pillar paneling (1) first and then position cover (7) on the C-pillar paneling (1).	
7	Remove bolt (11)		
8	Unclip catch hook (18) of C-pillar paneling (1) at clamp (16)	i Installation: Check clamp (16) for correct fit in body, align if necessary. Align edge guard (15) to C-pillar paneling (1).	
9	Pull out C-pillar paneling (1) forwards on the guides (17) from the rear shelf (14) supports (13)		
10	Unclip rosette (12) at the C-pillar paneling (1)	Assembly wedge	*110589035900
11	Remove rear seat belt (3) from C-pillar paneling (1) and remove C-pillar paneling (1)		
12	Install in the reverse order		

## Nm Seat belts/emergency tensioning retractors

Number	Designation		Model 204.3	Model 207
BA91.40-P-1006-01P	Bolt at rear belt end fitting N	m	35	35

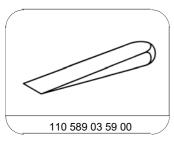

Mounting wedge