


## MODEL 207

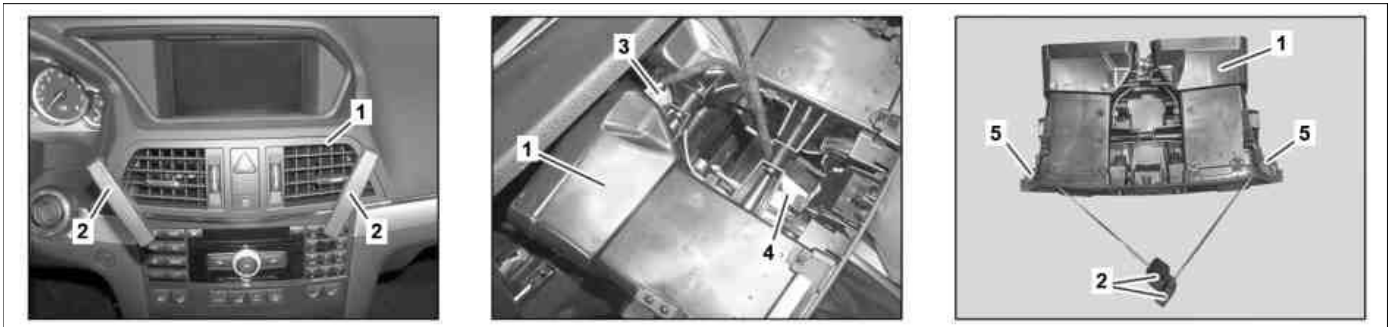

P83.10-2698-07

## Shown on model 207 up to model year 2014


- 1 Center air vent  
2 Extraction hook

- 3 Electrical connector  
4 Electrical connector


- 5 Catch hook

## Shown on model 207 as of model year 2014

- 1 Center air vent  
2 Extraction hook  
8 Spring  
A70/1 Analog clock

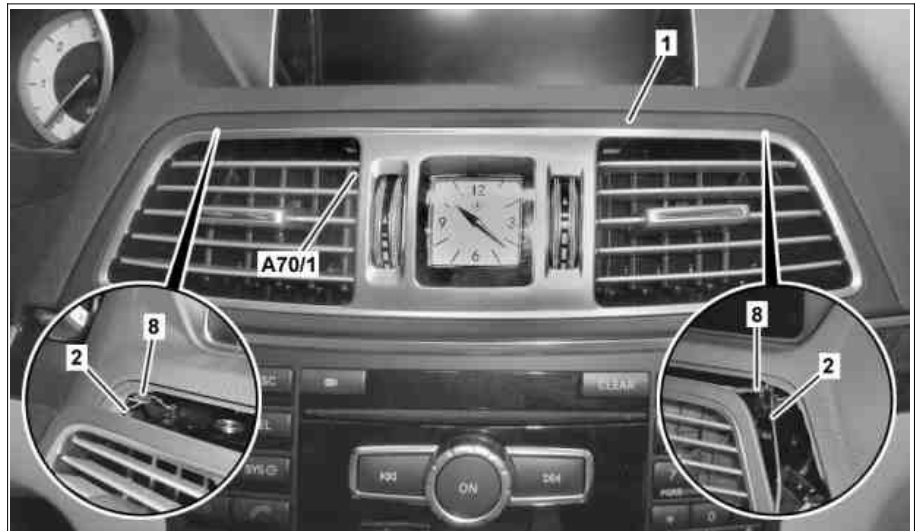

P83.10-2877-05

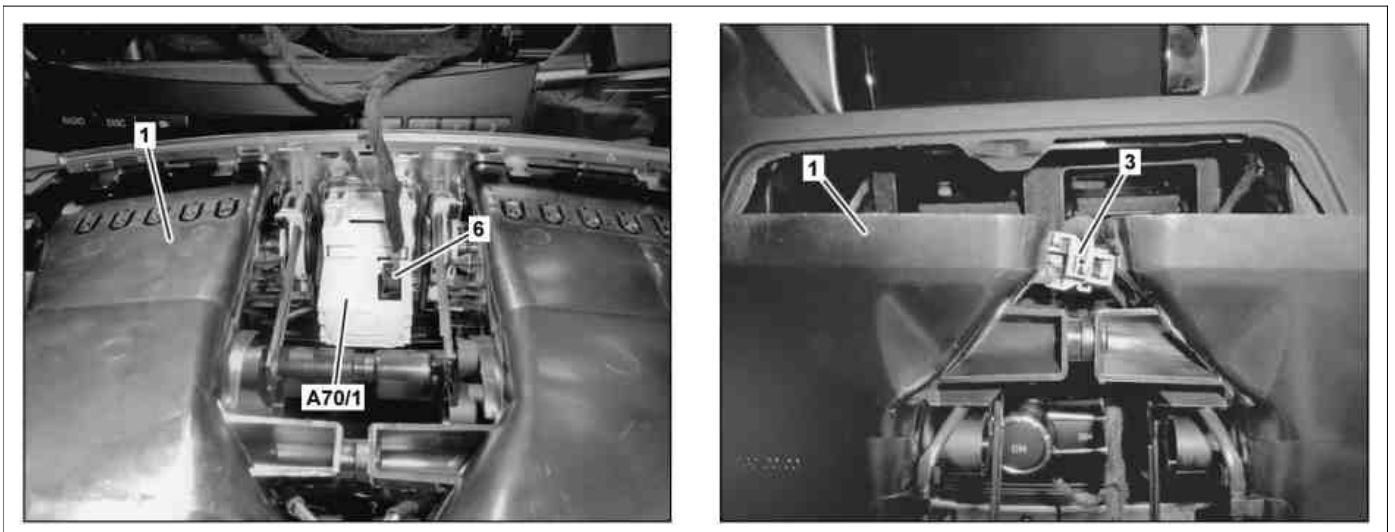
 

 
 



P83.10-2878-08

## Shown on model 207 as of model year 2014

1 Center air vent  
3 Electrical connector

6 Electrical connector  
A70/1 Analog clock

	Remove/install		
1	Insert extraction hooks (2) with tip pointing upwards as shown into openings in upper area of center air vent (1) and release catch hooks (5)	<b>i</b> <b>Removal:</b> Swiveling  extraction hooks (2) outwards releases catch hooks (5).   Extraction hook	*140589023300
2	Pull center air vent (1) out of instrument panel until electrical connectors (3, 4) are accessible	<b>i</b> <b>Removal:</b> On vehicles as of model year 2014 it may be necessary to press down spring (8) with  extraction hooks (2).   Extraction hook	*140589023300
3.1	Disconnect electrical connectors (3, 4) and remove center air vent (1)	MODEL 207 up to model year 2014	
3.2	Disconnect electrical connectors (3, 6) and remove center air vent (1)	MODEL 207 as of model year 2014	
4	Remove analog clock (A70/1)	MODEL 207 as of model year 2014 When replacing center air vent (1).	AR54.30-P-1000ECM
5	Install in the reverse order		

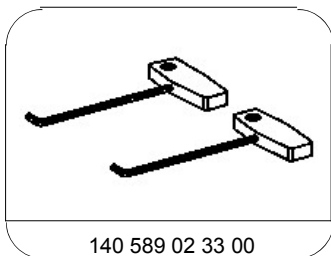

140 589 02 33 00

Extraction hook