
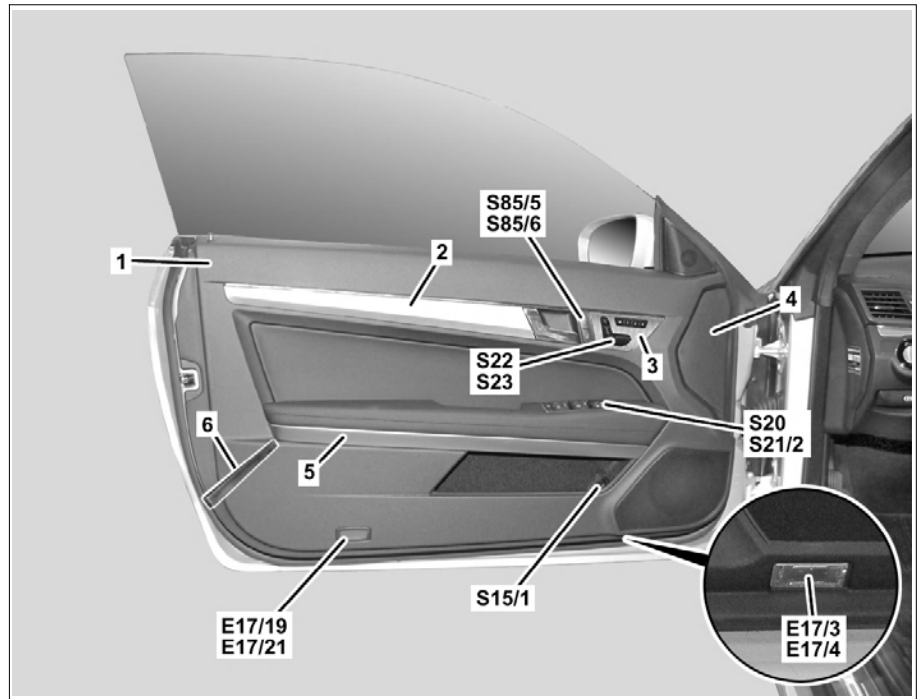


MODEL 207

Shown on door lining (1), cab, model 207.3

- 1 Door lining
- 2 Trim strip
- 3 Panel
- 4 Cover
- 5 Trim strip
- 6  Mounting wedge

- E17/3 Left front door exit and warning lamp
- E17/4 Right front door exit and warning lamp
- E17/19 Left front door warning lamp
- E17/21 Right front door warning lamp




P72.10-3746-06

- S15/1 Trunk lid release button
- S20 Driver-side power window and outside mirror adjustment switch group
- S21/2 Passenger-side power window switch

- S22 Left front seat adjustment switch group (with code (275) Memory package (driver seat, steering column, mirrors))
- S23 Right front seat adjustment switch group (with code (242) Electrically adjustable front passenger seat with memory)

- S85/5 Left front door central locking interior switch
- S85/6 Right front door central locking interior switch

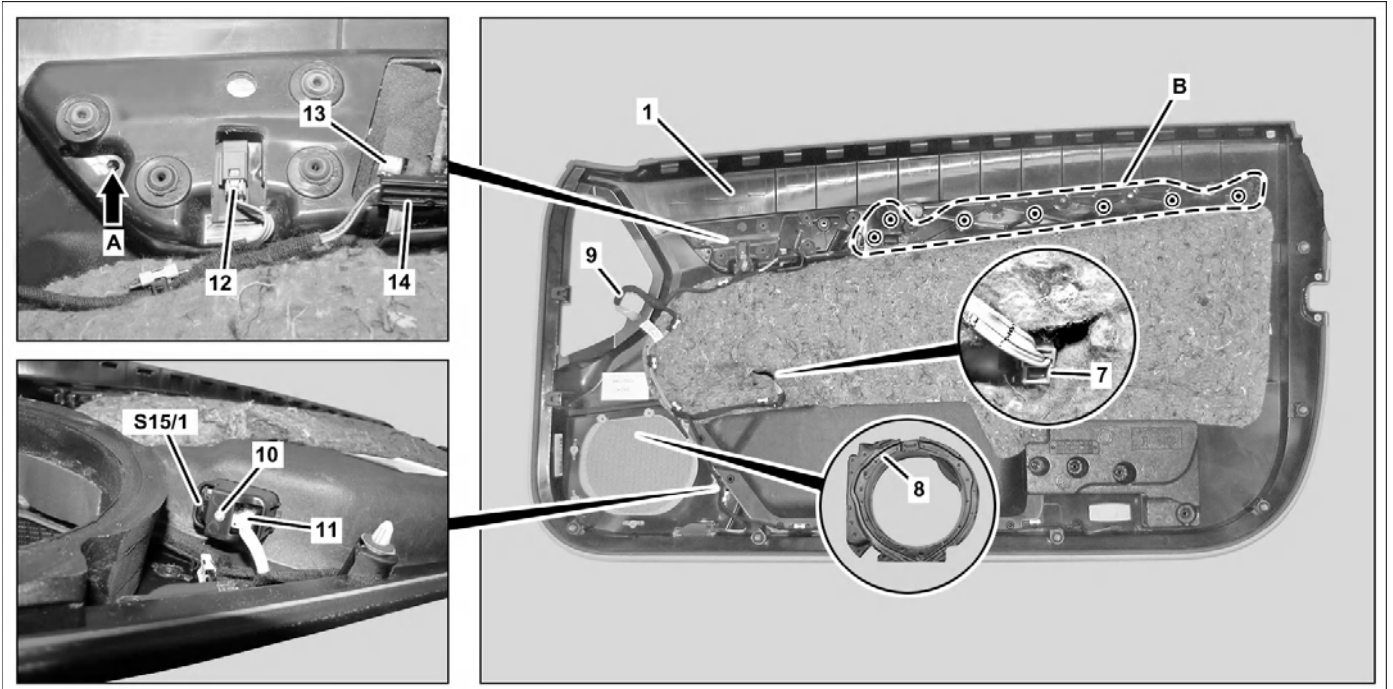

P72.10-3748-09


Shown on door lining (1), cab, driver door, model 207.3

- 1 Door lining

- 7 Electrical connector
- 8 Acoustic ring
(with code (413)) Panoramic glass sunroof with top sliding sunroof)
- 9 Wiring harness
- 10 Screw





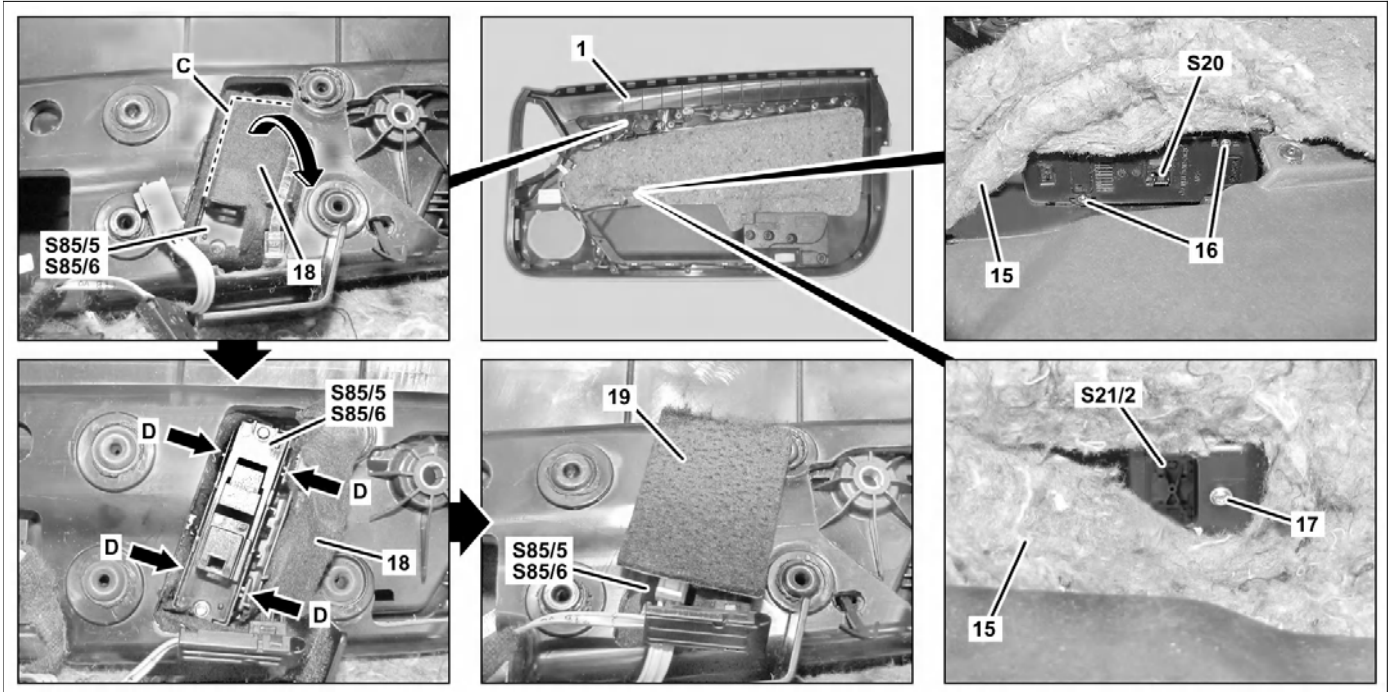



- 11 Electrical connector
- 12 Electrical connector (with code (242) Electrically adjustable passenger seat with memory) or code (275) Memory package (driver seat, steering column, mirror))
- 13 Electrical connector

- 14 Electrical connector
- S15/1 Trunk lid release button




P72.10-3749-09

- 1 Door lining
- 15 Mat cover
- 16 Bolts (driver side)
- 17 Bolt (passenger side)
- 18 Felt strip
- 19 Felt strip
- S20 Driver-side power window and outside mirror adjustment switch group
- S21/2 Passenger-side power window switch
- S85/5 Left front door central locking interior switch
- S85/6 Right front door central locking interior switch

 	Disassemble/assemble		
1	Unclip cover (4) from door lining (1) with assembly wedge (6)	When replacing cover (4).	 *110589035900
2	Unclip trim strip (5) from door lining (1) with assembly wedge (6) starting at rear.	When replacing trim strip (5).	 *110589035900
3	Unclip left front door exit and warning lamp (E17/3) or right front door exit and warning lamp (E17/4) from door lining (1) and disconnect electrical connector	When replacing left front door exit and warning lamp (E17/3) or right front door exit and warning lamp (E17/4).	 *110589035900
4	Unclip left front door warning lamp (E17/19) or right front door warning lamp (E17/21) from door lining (1) and disconnect electrical connector	When replacing left front door warning lamp (E17/19) or right front door warning lamp (E17/21).	 *110589035900
5	Remove door lining (1) and place on suitable subsurface with front side down	 Installation: On vehicles with code (413) Panoramic glass sunroof with top sliding sunroof, ensure that acoustic ring (8) is seated properly.	AR72.10-P-1000EC
6	Remove acoustic ring (8)	With code (413) Panoramic glass sunroof with top sliding sunroof	
7	Bend open clamping plate in area "B" with suitable screwdriver and remove	 Installation: Carefully press new clamping plates onto pins on trim strip (2).	
8	Remove trim strip (2)		
9	Disconnect electrical connector (12)	When removing cover (3) on vehicles with code (242) Electrically adjustable passenger seat with memory or code (275) Memory package (driver seat, steering column, mirror).	

10	Unclip cover (3) through opening (arrow A) and remove from door lining (1)	<p>i Use blunt pin (e.g. pin punch) with a diameter of 2 - 3 mm.</p> <p>i Installation: Insert cover (3) into door lining (1) and arrest. Ensure correct seating.</p>	
11	Unclip left front seat adjustment switch group (S22) or right front seat adjustment switch group (S23) from cover (3)	When replacing cover (3) or left front seat adjustment switch group (S22) or right front seat adjustment switch group (S23) on vehicles with code (242) Electrically adjustable passenger seat with memory or code (275) Memory package (driver seat, steering column, mirror).	
12	Disconnect electrical connectors (13, 14)		
13	Disconnect electrical connector (11)	When disassembling door lining (1) on driver door.	
14	Unscrew bolts (10) and remove trunk release button (S15/1) from door lining (1)	When disassembling door lining (1) on driver door.	
15	Disconnect electrical connector (7)	When removing driver side power window and outside mirror adjustment switch group (S20) or passenger side power window switch (S21/2).	
16	Unscrew bolts (16) and remove driver side power window and outside mirror adjustment switch group (S20) from door lining (1)	When removing driver side power window and outside mirror adjustment switch group (S20).	
17	Unscrew bolt (17) and remove passenger side power window switch (S21/2) from door lining (1)	When removing passenger side power window switch (S21/2).	
18	Cut felt strip (18) at cutting line "C" and move to side	When removing left front door central locking inside door handle switch (S85/5) right front door central locking inside door handle switch (S85/6). i Assembling: Glue new felt strips (19) onto door lining (1) as shown.	
19	Unclip left front door central locking inside door handle switch (S85/5) or right front door central locking inside door handle switch (S85/6) from catch hook (arrows D) and remove from door lining (1)	When removing left front door central locking inside door handle switch (S85/5) right front door central locking inside door handle switch (S85/6).	
20	Remove electrical wiring harness (9)		
21	Assemble in the reverse order		

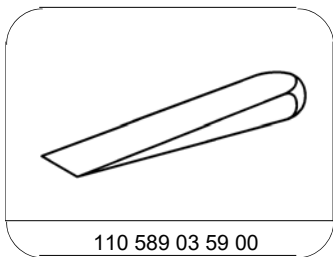

110 589 03 59 00

Mounting wedge