


P91.10-3488-09

**Shown on right front seat**

- |                  |                       |         |
|------------------|-----------------------|---------|
| 1 Back shell     | 4 Sidebag guide plate | 7 Screw |
| 2 Backrest frame | 5 Bolts               | 8 Cover |
| 3 Screw          | 6 Sidebag             |         |

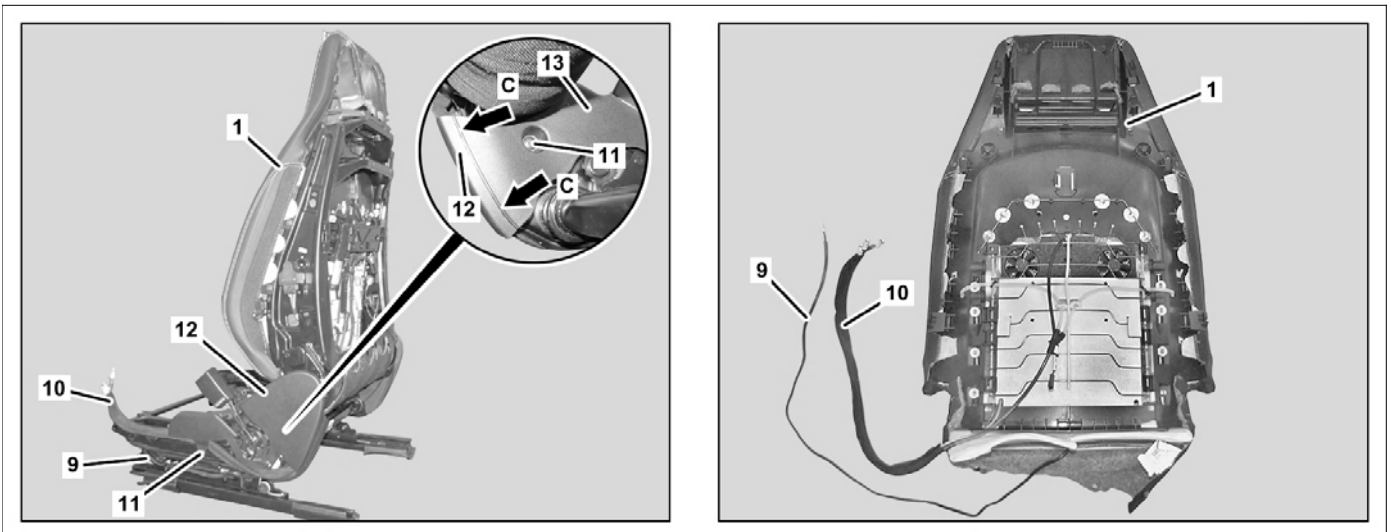

P91.10-3489-08

**Shown on right front seat with code (409)**

**Left/right front multicontour seats and code (873) Seat heater for left and right front seats**

- |  |   |                   |
|--|---|-------------------|
| 1 Back shell   | 10 Multicontour seat pneumatic wiring harness                           | 11 Screw          |
| 9 Electrical wiring harness for seat heater (with code (873) Seat heater for left and right front seats) | 12 Outer cover  | 13 Inner paneling |
|  | 13 Inner paneling (with code (409) Left/right front multicontour seats) |                   |

**Modification notes**

9.6.09	Work procedure optimized		
--------	--------------------------	--	--

	<b>Remove/install</b>		
1	Remove front seat	On vehicles with code (873) Seat heater for right and left front seats	AR91.10-P-1000CW

2	Remove seat cushion	On vehicles with code (873) Seat heater for right and left front seats	AR91.10-P-3310CW
3	Remove front backrest cover frame		AR91.10-P-1911EC
4	Remove screws/bolts (5) at sidebag guide plate (4)	Nm	*BA91.60-P-1015-01M
5	Remove sidebag guide plate (4)		
6	Remove screws/bolts (3) at backrest frame (2)		
7	Unhook cover (8) from hooks (arrows A)		
8	Remove screws/bolts (7) at top of backrest frame (2)		
9	Guide cover (8) through below backrest frame (2) toward front		
10	Swivel back shell (1) forward until electrical wiring harnesses are accessible	<p>⚠ Do not swivel back shell (1) too far forward, as otherwise the electrical wiring harnesses may be damaged.</p> <p><b>i</b> <b>Installation:</b> Ensure that guide (arrow B) is seated correctly in backrest frame (2).</p>	
11	Unclip NECK-PRO head restraint electrical wiring harness at spring frame		
12	Expose backrest inclination seat adjustment motor electrical wiring harness at spring frame		
13	Disconnect driver seat lumbar support pneumatic pump electrical connector or front passenger seat lumbar support pneumatic pump electrical connector at backrest frame (2)	On vehicles with code (242) Electrically adjustable front passenger seat with memory or with code (275) Memory package (driver seat, steering column, mirrors)	
14	Disconnect front backrest seat ventilation motors electrical connector	On vehicles with code (401) Front comfort seats, incl. seat heating and seat ventilation	
15	Remove bolts (11)	On vehicles with code (873) Seat heater for right and left front seats	
16	Unclip outer paneling (12) from inner paneling (13) at catch hooks (arrows C)	On vehicles with code (873) Seat heater for right and left front seats	
17	Pull outer paneling (12) apart from inner paneling (13) until seat heater electrical wiring harness (9) can be guided through	<p>On vehicles with code (873) Seat heater for right and left front seats</p> <p>⚠ Risk of breakage of outer paneling (12) or inner paneling (13).</p>	
18	Expose seat heater electrical wiring harness (9) at seat frame and guide through backrest frame (2)	On vehicles with code (873) Seat heater for right and left front seats	
19	Cut through multicontour seat pneumatic wiring harness (10) at an easily accessible location and guide through backrest frame (2)	<p>On vehicles with code (409) Left/right front multicontour seats</p> <p>⚠ Danger of kinking multicontour seat pneumatic wiring harness (10).</p> <p><b>i</b> <b>Installation:</b> Connect pneumatic lines with terminal block. Pay attention to correct color assignment of pneumatic lines to one another.</p>	
20	Disconnect front backrest seat ventilation motors electrical connector	On vehicles with code (401) Front comfort seats, incl. seat heating and seat ventilation	
21	Remove backrest shell (1)		
22	Install in the reverse order		

**Nm** Airbag

Number	Designation		Model 204.3	Model 207
BA91.60-P-1015-01M	Bolt, sidebag guide plate on backrest frame	Nm	4	4