
MODEL 204.3, 207

Shown on model 207 right front seat with code (242) Electrically adjustable front passenger seat with memory function

Head restraint
 Head restraint guide
 Wiring harness

M27/4

Head restraint adjustment seat adjustment motor, driver seat (with code (275) Memory package (driver seat, steering column, mirrors))

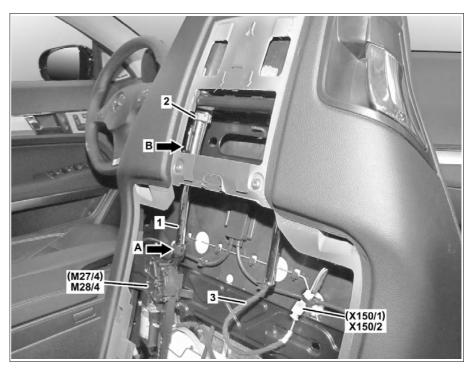

P91.16-2819-06

M28/4

Head restraint adjustment seat adjustment motor, front passenger seat (with code (242) Electrically adjustable front passenger seat with memory) X150/1 X150/2 Driver NECK-PRO head restraint electrical connector Front passenger NECK-PRO head restraint electrical connector

XX	Remove/install		
⚠ Danger!	Risk of injury caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	AS00.00-Z-0017-01A
(D)	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove seat-back lining from left or right from seat backrest		AR91.10-P-1910CW
2	Disconnect battery ground line	Model 207 Model 204	AR54.10-P-0003EW AR54.10-P-0003CW
3	Disconnect driver NECK-PRO head restraint electrical connector (X150/1) or front passenger NECK-PRO head restraint electrical connector (X150/2)		
4	Unclip head restraint (1) from support (arrow A) of driver seat head restraint adjustment seat adjustment motor, (M27/4) or the front passenger seat head restraint adjustment seat adjustment motor (M28/4)	With code (242) Electrically adjustable front passenger seat with memory or code (275) Memory package (driver seat, steering column, mirrors) i Installation: Ensure that head restraint	
5	Lift spring U-bolt (arrow B) of left head restraint guide (2), pull out head restraint (1) and route electrical wiring harness (3) through the right head restraint guide (2)	(1) is seated correctly in support (arrow A). i For vehicles without code (242) Electrically adjustable front passenger seat with memory or code (275) Memory package (driver seat, steering column, mirrors), the adjusting button on the grab handle of the front seat backrest must also be released to remove the head restraint (1).	
6	Remove head restraint (1)		
7	Install in the reverse order		