

Item	Designation	Coordinates
<u>A0</u>	Color code key	105L
<u>A86/1b2</u>	Left inner radar sensor, front bumper	30L
<u>A90</u>	COLLISION PREVENTION ASSIST controller unit	34L
<u>B29/2</u>	DISTRONIC sensor (DTR) / left front bumper	33L
<u>B29/5</u>	Right rear bumper intelligent radar sensor	27L
<u>Code 233</u>	DISTRONIC PLUS	32G
<u>Code 237</u>	Active Blind Spot Assist	32G
<u>Code 238</u>	Active Lane Keeping Assist	32G
<u>Code 427</u>	7-speed automatic transmission	92H
<u>Code 889</u>	KEYLESS-GO	35G
<u>Code B03</u>	ECO start/stop function	2K 7H 12H 92H
<u>Code U77</u>	BLUETEC (SCR) diesel exhaust treatment	79G
<u>E19/1</u>	Left license plate lamp	55L 68L
<u>E19/2</u>	Right license plate lamp	57L 69L
<u>E21</u>	Center stop lamp	47L 64L
<u>E21x1</u>	Center brake lamp electrical connector	46K 64K
<u>E40</u>	Trunk lid ambient lamp	43L 61L
<u>F32</u>	Front electrical prefuse box	5L
<u>F37</u>	AdBlue® fuse block	86L
<u>F97</u>	Rear SAM control unit with fuse and relay module circuit 30 fuse	9L
<u>K57/2</u>	Additional battery relay	13L
<u>K60</u>	Coolant circulation pump relay	90L
<u>K61</u>	Charge air cooler circulation pump relay	98L
<u>K114</u>	ECO start/stop function additional battery relay	13L
<u>M14/7</u>	Trunk lid central locking motor	49L 66L
<u>M40</u>	Multicontour seat pneumatic pump	17L
<u>N10/2</u>	Rear SAM control unit with fuse and relay module	5A 12A 18A 28A 37A 44A 52A 58A 67A 77A 85A 92A
<u>N10/2f38</u>	Fuse 38	35A
<u>N10/2f52</u>	Fuse 52	82A
<u>N10/2f53</u>	Fuse 53	75A
<u>N10/2f54</u>	Fuse 54	72A
<u>N10/2f55</u>	Fuse 55	81A
<u>N10/2f56</u>	Fuse 56	74A
<u>N10/2f57</u>	Fuse 57	71A
<u>N10/2f58</u>	Fuse 58	70A
<u>N10/2f59</u>	Fuse 59	30A
<u>N10/2f60</u>	Fuse 60	17A
<u>N10/2f61</u>	Fuse 61	24A
<u>N10/2f62</u>	Fuse 62	22A
<u>N10/2f63</u>	Fuse 63	21A

Item	Designation	Coordinates
<u>N10/2f64</u>	Fuse 64	25A
<u>N10/2f65</u>	Fuse 65	19A
<u>N10/2f66</u>	Fuse 66	93A
<u>N10/2f88</u>	Fuse 88	61A
<u>N10/2f89</u>	Fuse 89	68A
<u>N10/2f90</u>	Fuse 90	86A
<u>N10/2f91</u>	Fuse 91	64A
<u>N10/2f92</u>	Fuse 92	65A
<u>N10/2kA</u>	Circuit 15 relay	31A
<u>N22/6</u>	Rear control unit	24L 52L
<u>N28/1</u>	Trailer recognition control unit	73L
<u>N51/5</u>	Adaptive damping system control unit	20L
<u>N118/5</u>	AdBlue® control unit	81L
<u>S62/21</u>	Trunk lid KEYLESS GO button	37L
<u>S62/36</u>	Trunk lid control button	39L
<u>S88/6</u>	Trunk lid contact switch	44L 62L
<u>S88/8</u>	Trunk lid external operation switch	41L 59L
<u>U23</u>	Valid for convertibles	23H 24H 40G
<u>U86</u>	Valid for adaptive damping system and ESP	18G
<u>U1019</u>	Valid for gasoline engine 278	88G
<u>U240</u>	Valid for all except ECO start/stop function	2K 6J
<u>U362</u>	Valid for gasoline engine 274	95G
<u>U533</u>	Valid for trailer hitch	70G
<u>U611</u>	Valid for Coupe	58G
<u>U664</u>	Valid for automatic trunk lid	37G
<u>U749</u>	Valid for multicontour seat	15G
<u>U896</u>	Valid for City Assist System	29G
<u>U910</u>	Valid for Blind Spot Assist	26G
<u>U948</u>	Valid for diesel engine 651	92G
<u>W7</u>	Right wheelhouse trunk ground point	4H 37G 38G 42L 45L 60L 63L
<u>W18/3</u>	Left front seat crossmember ground point 2	15L
<u>X8/19</u>	Trunk lid electrical connector	40J 54J
<u>X35/6</u>	Instrument panel and module box electrical connector	89H 96J
<u>X58</u>	Trailer socket	77L
<u>X58/33</u>	Interior/trailer hitch electrical connector	77J
<u>Z6/1</u>	Circuit 31 connector sleeve	42L 49J 56L 60H 68H
<u>Z120/1</u>	AdBlue® terminal 30 connector sleeve	84H