


P91.10-3484-09

Shown on right front seat

- 1 Cover
- 2 Bolts
- 3 Cover frame
- 4.1 Top Bowden cable
- 4.2 Right control cable
- 4.3 Left control cable
- 4.4 Housing
- 5 Backrest
- 6 Backrest release
- 7 Assembly wedge
- 8 Release handle

 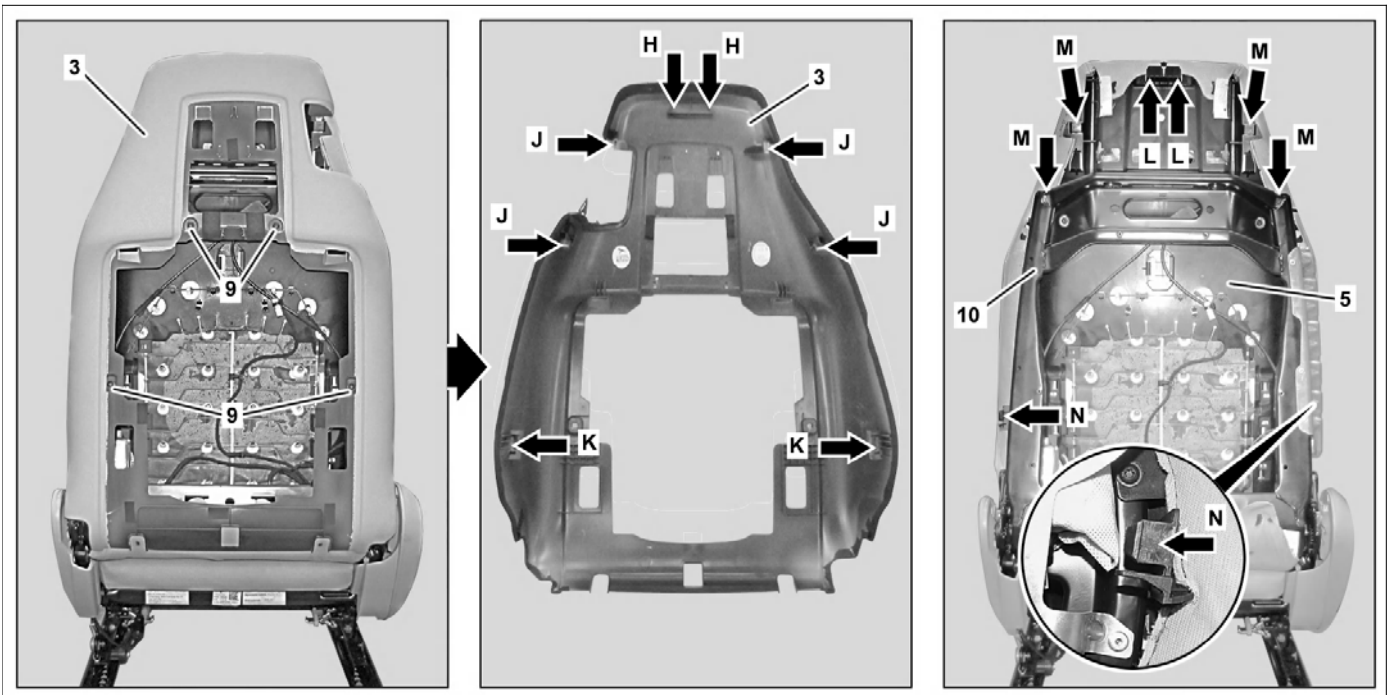



P91.10-3485-09

Shown on right front seat

- 3 Cover frame
- 5 Backrest
- 9 Bolts
- 10 Backrest frame

	Remove/install		
1	Remove front seat head restraint guide		AR91.16-P-0050EC
2	Unhook cover (1) out of hooks (arrows A) in area of head restraint		
3	Carefully pull cover (1) to one side		
4	Remove bolts (2)		

5	Unclip housing (4.4) from backrest (5) (arrow B) and remove		
6	Unclip left Bowden cable (4.3) from backrest (5) (arrow C)		
7	Unclip right Bowden cable (4.2) from backrest (5) (arrow D)		
8	Unclip backrest release (6) using assembly wedge (7), as shown, at catch hook (arrow E) and pull out of cover frame (3)	 Assembly wedge	*110589035900
9	Unhook top Bowden cable (4.1) out of backrest release (6) (arrow F)		
10	Swing out release handle (8) and unhook top Bowden cable (4.1) (arrow G)		
11	Remove backrest release (6)		
12	Unclip driver seat lumbar support pneumatic pump or front passenger seat lumbar support pneumatic pump at cover frame (3)	On vehicles with code (241) Electrically adjustable front passenger seat with memory function or with code (275) Memory package (driver seat, steering column, mirrors) i Installation: Observe installation position of driver seat lumbar support pneumatic pump or front passenger seat lumbar support pneumatic pump.	
13	Remove screws/bolts (9) from backrest frame (10)		
14	Release mounts (arrows K) from catch hooks (arrows N)	i Installation: Ensure that catch hooks (arrows N) are seated correctly in mounts (arrows K).	
15	Pull out cover frame (3) at bottom far enough that cover frame (3) can be slid upward past catch hooks (arrows N)		
16	Slide cover frame (3) upward and remove	i Installation: Ensure that hooks (H, J) are seated correctly in respective mounts (L, M).	
17	Install in the reverse order		

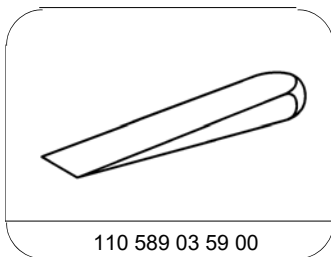

Mounting wedge