
MODEL 207

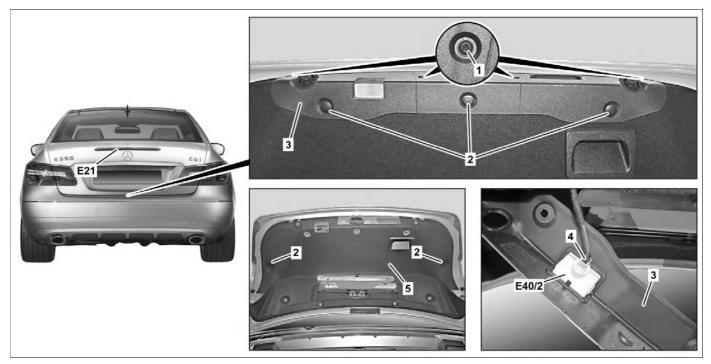


P82.10-5848-09

## Shown on model 207.3


- 1 Bolts
- 2 Expansion clips
- 3 Cover

- 4 Electrical connector
- 5 Trim

E21 Center stop lamp
E40/2 Surroundings and left trunk lid
warning lamp

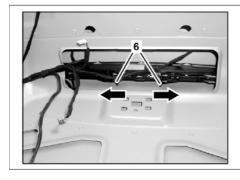



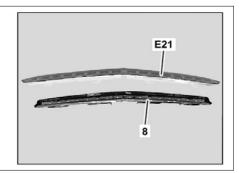

P82.10-5847-07

## Shown with removed trunk lid lining

6 Locks

7 Electrical connector

B Housing

E21 Center stop lamp

## Modification notes

8.12.09	Information on bonded center brake lamp (E21) inserted	Operation step 7	

X	Remove/install		
1	Remove screws (1) at cover (3)		
2	Remove expansion clips (2)		
3	Remove cover (3) and detach electrical connector (4)		
4	Swivel trim (5) far enough until the center brake lamp (E21) is accessible		
5	Press locks (6) in direction of the arrow and remove housing (8) of center brake lamp (E21) from trunk lid until the electrical connector (7) is accessible		
6	Disconnect electrical connector (7)		
7	Carefully detach center brake lamp (E21) from trunk lid and remove outwards	i The center brake lamp (E21) is bonded to the seal on the trunk lid and must be replaced.	
8	Install in the reverse order		