



MODEL 204.3, 207

- 1 Front seat backrest
- 2 Cover

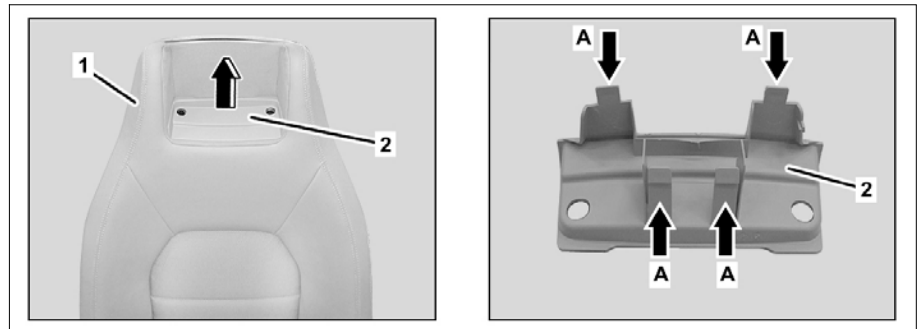

P91.16-2826-04

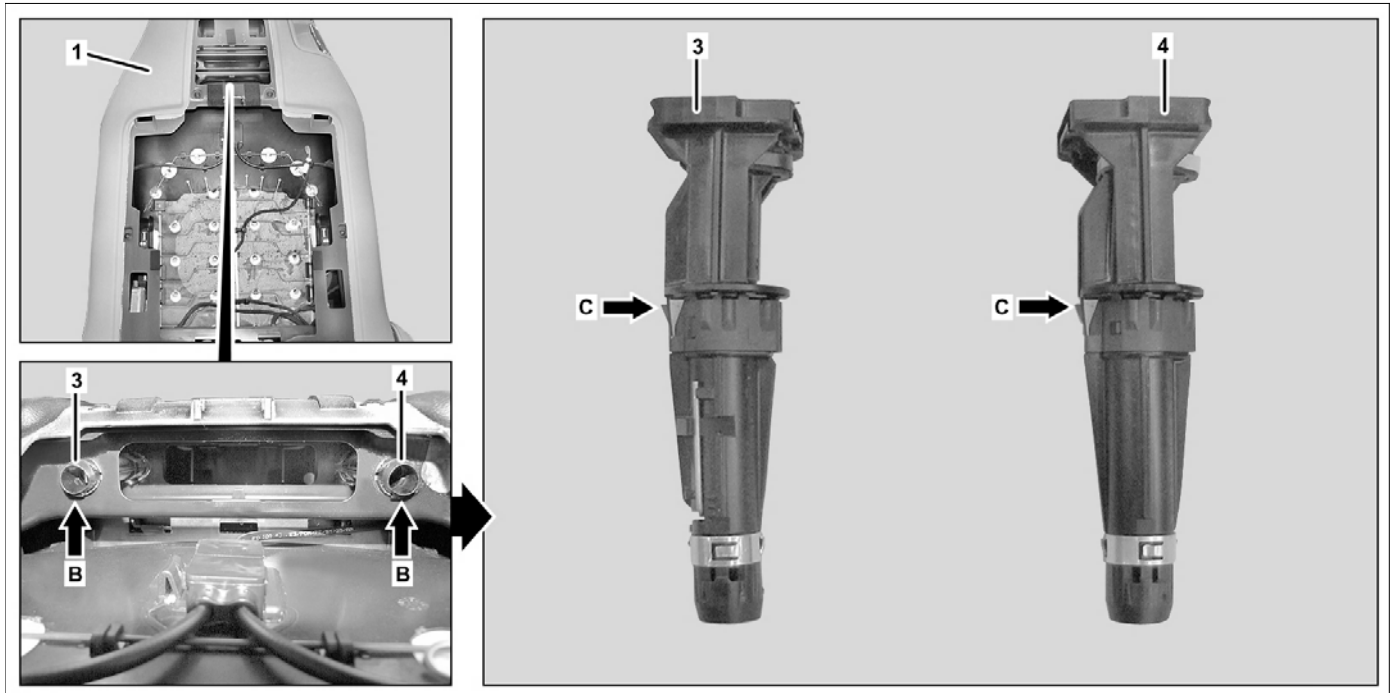


P91.16-2827-09

1 Front seat backrest

3 Left head restraint guide

4 Right head restraint guide

☒			
Removing			
1	Remove left or right head restraint		AR91.16-P-0040EC
2	Unclip cover (2) from behind through backrest frame upward out of front seat backrest (1)	☑ Assembly wedge	*110589035900
3	Break out catch hook (arrow B) at left head restraint guide (3) and right head restraint guide (4)	ⓘ Left head restraint guide (3) and right head restraint guide (4) must be replaced.	
4	Press catch hook (arrow C) at left head restraint guide (3) from above using a screwdriver through opening and pull out left head restraint guide (3) toward top		
5	Press catch hook (arrow C) at right head restraint guide (4) from above using a screwdriver through opening and pull out right head restraint guide (4) toward top		
☒			
Install			
6	Insert left head restraint guide (3) into backrest frame from above and engage in backrest frame.	ⓘ The left head restraint guide (3) can be identified on the U-shaped fastening spring below the catch hook (arrow C). Position left head restraint guide (3) so that catch hook (arrow C) points to the left.	
7	Insert right head restraint guide (4) into backrest frame from above and engage in backrest frame.	ⓘ No fastening spring is installed at the right head restraint guide (4). Position right head restraint guide (4) so that catch hook (arrow C) points to the left	
8	Clip cover (2) into front seat backrest (1)	ⓘ Ensure that catch hooks (arrows A) of cover (2) are seated correctly.	

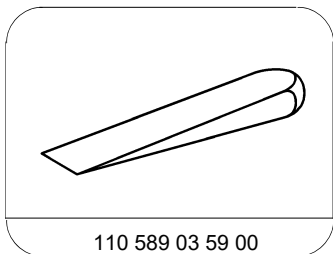

Mounting wedge