



P82.62-3498-09

- 1 Rear center section paneling  
 2 Left side paneling  
 3 Nut  
 4 Electrical connector

- 5 Electrical connector with fiber optic cable  
 6 Nut  
 7 Bracket  
 8 Clip

- N40/3 Sound system amplifier control unit

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on avoiding damage to fiber optic cables during repair work		AH82.60-P-0001-05AK
1	Buffer basic data of sound system amplifier control unit (N40/3) in STAR DIAGNOSIS	When replacing the sound system amplifier control unit (N40/3). <b>i</b> <b>Installation:</b> Transmit buffered basic data to new sound system amplifier control unit (N40/3).	
AD	Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A
2	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit	<b>i</b> KEYLESS-GO start/stop button only on vehicles with code (889) Keyless-Go.	
3	Remove rear center section paneling (1)		AR68.30-P-4785EC
4	Detach left side paneling (2) far enough to enable the sound system amplifier control unit (N40/3) to be removed		AR68.30-P-4600EC
5	Unscrew nuts (3)		
6	Slacken off nut (6) until the bracket (7) is accessible		
7	Unclip clips (8) on bracket (7)		
8	Separate electrical connectors (4)		
9	Disconnect electrical connector with fiber optic cable (5)		
	Notes on avoiding damage to fiber optic cables during repair work	With Media Oriented System Transport (MOST)	AH82.60-P-0001-05AK
10	Remove sound system amplifier control unit (N40/3) with bracket (7)		
11	Remove bracket (7) of sound system amplifier control unit (N40/3)	When replacing bracket (7) or sound system amplifier control unit (N40/3).	
12	Install in the reverse order		