

Model 166, 172, 190, 197, 201, 204, 207, 212, 217, 218, 221, 231, 292


Model 205 (except 205.012/013/047/053/054/147/212/213/247/253)
except code B01 (48V technology)

Model 213 (except 213.016/050/053/054/216)
except code B01 (48V technology)

Model 222 (except 222.004/057/104/157/163)
except code B01 (48V technology)

Model 253 (except 253.311/353/354/911/953/954)
except code B01 (48V technology)

- 1 Cover
- 2 Bracket
- 3 Brake pedal
- 4 Stop lamp switch

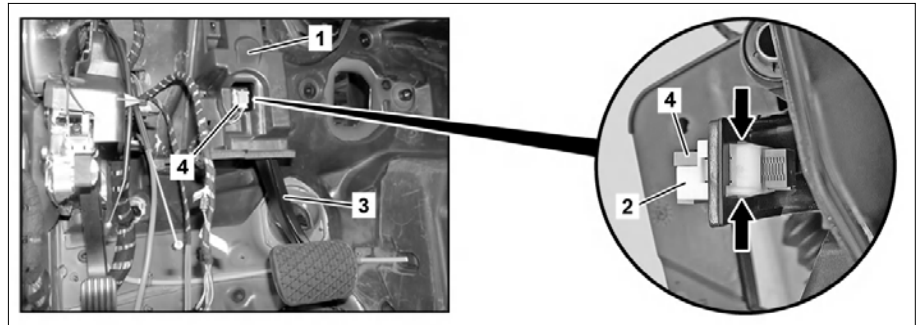

P42.10-3093-04

	Notes on safety-relevant components		AH00.00-Z-0019-01A
	Remove		
1	Remove cover below instrument panel on driver's side.	Model 221.0/1 Model 166, 292 Model 217 Model 222.0 (except 222.004/057), 222.1 (except 222.104/157/163), 222.9 except code B01 (48V technology) Model 231 Model 205 (except 205.012/013/047/053/054/147/212/213/247/253) except code B01 (48V technology) Model 253 (except 253.311/353/354/911/953/954) except code B01 (48V technology) Model 213 (except 213.016/050/053/054/216) except code B01 (48V technology) Model 190, 197	AR68.10-P-1500SX AR68.10-P-1500GQ AR68.10-P-1500LF AR68.10-P-1500RK AR68.10-P-1500LW AR68.10-P-1501LWE AR68.10-P-1501RQ
2	Disconnect electrical connector from brake light switch (4).		
3	Remove cover (1).		
4	Pull out brake light switch (4).		
5	Squeeze catches (arrows) together and detach bracket (2).		
	Install		
6	Fully depress brake pedal (3) and insert brake light switch (4) with bracket (2).		
7	Fully depress brake light switch (4).		
8	Release brake pedal (3) and pull back.		
9	Install cover (1).		
10	Connect electrical connector to brake light switch (4).		
11	Install cover below instrument panel on driver's side.	Model 221.0/1 Model 166, 292 Model 217 Model 222.0 (except 222.004/057), 222.1 (except 222.104/157/163), 222.9 except code B01 (48V technology) Model 231	AR68.10-P-1500SX AR68.10-P-1500GQ AR68.10-P-1500LF AR68.10-P-1500RK

	Model 205 (except 205.012/013/047/053/054/147/212/213/247/253) except code B01 (48V technology)	AR68.10-P-1500LW
	Model 253 (except 253.311/353/354/911/953/954) except code B01 (48V technology)	
	Model 213 (except 213.016/050/053/054/216) except code B01 (48V technology)	AR68.10-P-1501LWE
	Model 190, 197	AR68.10-P-1501RQ