


Model 204, 207

Modification notes

17.05.2017 Initial startup added.

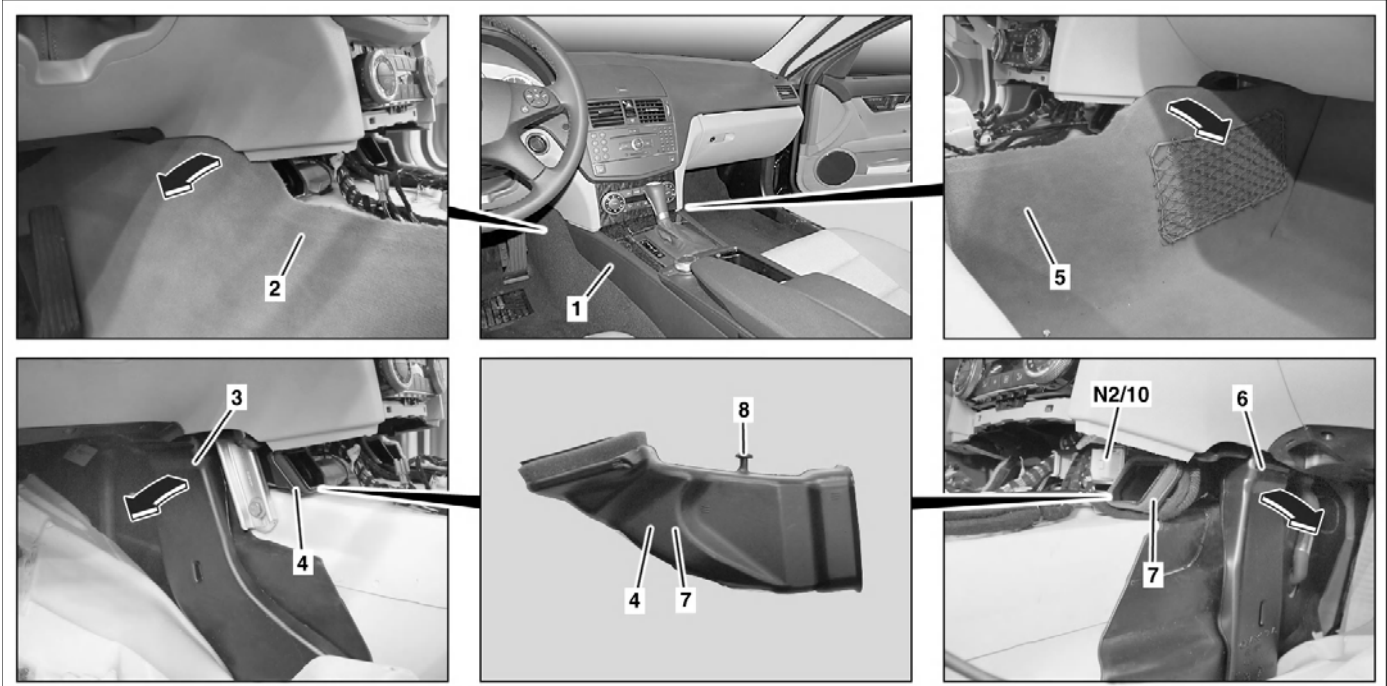

P91.60-3403-09

Shown with model 204.0


- 1 Center console
- 2 Floor covering
- 3 Air duct

- 4 Air duct
- 5 Floor covering
- 6 Air duct




 

- 7 Air duct
- N2/10 Supplemental restraint system control unit

Shown with model 204.0

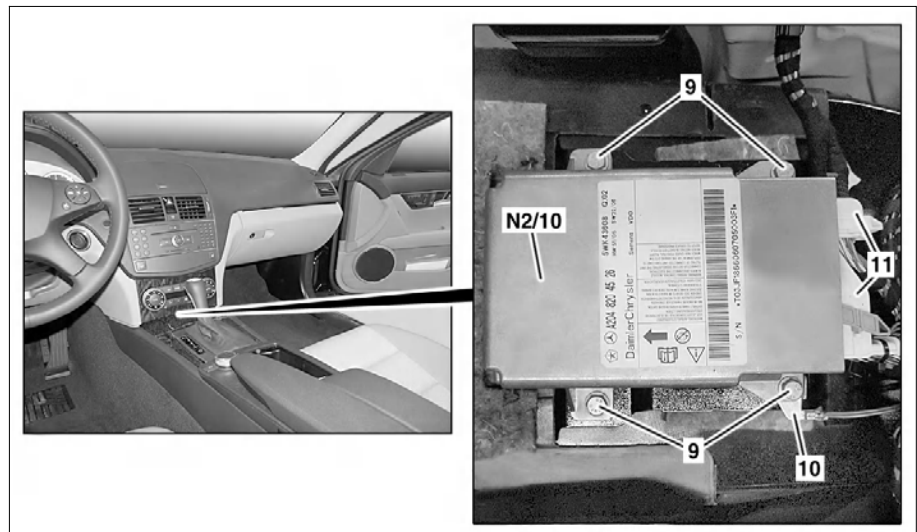- 9 Bolts
- 10 Ground cable
- 11 Electrical connectors
- N2/10 Supplemental restraint system control unit



P91.60-3404-05

 Warning	Risk of injury during testing and repair operations related to pyrotechnical components	Do not expose pyrotechnical component parts to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such component parts.	AS91.00-Z-0008-01A
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Information, assessment and legal requirements when working with, handling and storing pyrotechnical components		AH91.00-Z-0000-10A
	Remove/install		
1	Switch off ignition and store transmitter key outside of transmission range (min. 2 m)		
2	Detach ground line of on-board electrical system battery	Model 207 Model 204	AR54.10-P-0003EW AR54.10-P-0003CW
3	Remove center console (1)		AR68.20-P-2000CW
4	Maneuver floor coverings (2, 5) out beneath the instrument panel		
5	Detach air ducts (3, 6) from air conditioner housing and swivel to side		
6	Detach air ducts (4, 7) from air conditioner housing and remove		
7	Disconnect electrical connectors (11)		
8	Lift insulation above supplemental restraint system control unit (N2/10) at side until screw/bolt (9) is accessible		
9	Remove screws/bolts (9) and remove supplemental restraint system control unit (N2/10) Notes on self-locking nuts and bolts	 Installation: Make sure that the ground line (10) is secured properly to the supplemental restraint system (SRS) control unit ground point (W26) on the supplemental restraint system control unit (N2/10) with a screw/bolt (9). Otherwise correct operation of the supplemental restraint system control unit (N2/10) cannot be guaranteed.  Bolt/nut, restraint systems control unit to vehicle floor	AH00.00-N-0001-01A *BA91.60-P-1009-01M
10	Install in the reverse order		
	Initial startup		
 AD	Perform initial startup of Supplemental Restraint System control unit (N2/10)	When replacing the supplemental restraint system control unit (N2/10).	AD00.00-P-2000-04A

 Airbag

Number	Designation		Model 204.0/2/9	Model 204.3
BA91.60-P-1009-01M	Bolt/nut, restraint systems control unit to vehicle floor	Nm	10	10

 Airbag

Number	Designation		Model 207
BA91.60-P-1009-01M	Bolt/nut, restraint systems control unit to vehicle floor	Nm	10