


Model 207.3/4

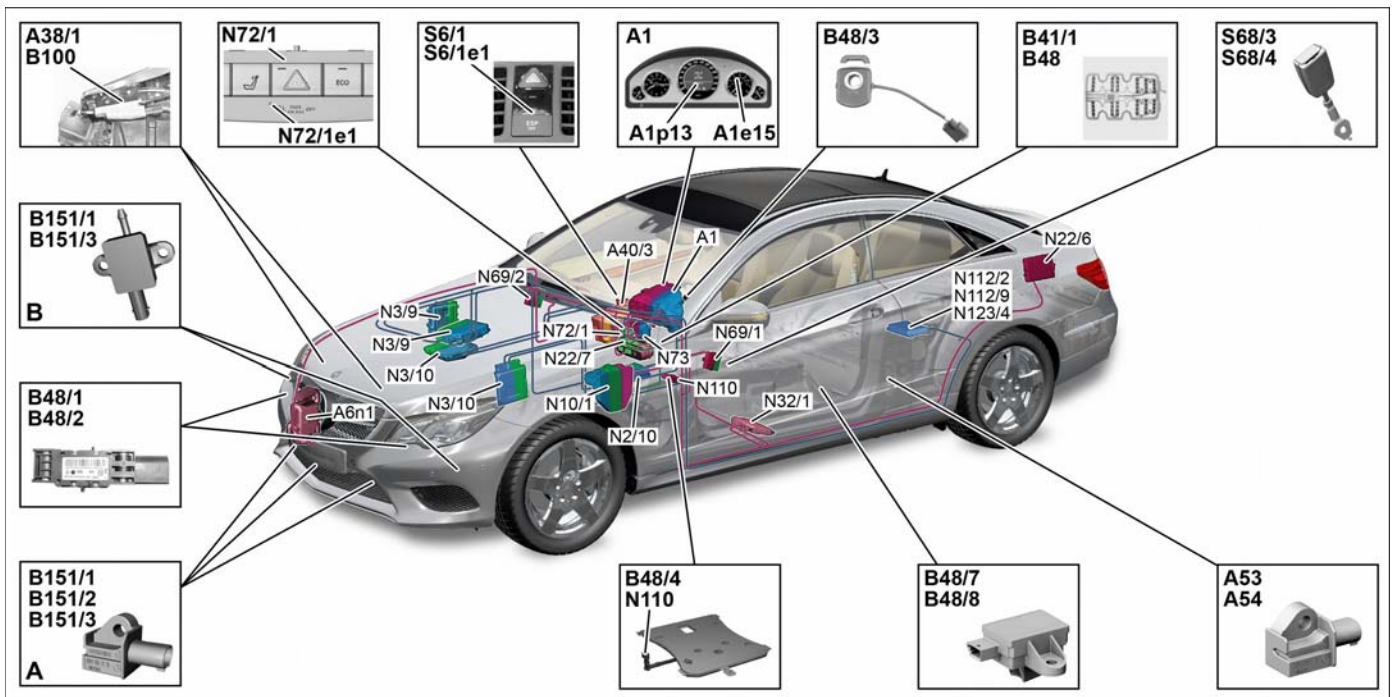

P91.60-5078-79

Shown here is model 207.3

A1	Instrument cluster	N3/9	CDI control unit (with diesel engine, with engine 642 positioned on right, with engine 651 positioned at center)
A1e15	Supplemental restraint system indicator lamp	N3/10	ME-SFI [ME] control unit (with gasoline engine, with engine 271, 274, 276 located at left, with engine 272, 273, 278 located at center)
A1p13	Multifunction display	N10/1	Front SAM control unit with fuse and relay module
A6n1	Stationary heater control unit (with CODE 228 (Stationary heater))	N22/6	Rear control unit
A38/1	Pedestrian protection Hall sensor + ATA [EDW] engine hood switch (with CODE U60 (Active engine hood (Pedestrian protection)))	N22/7	Automatic air conditioning control and operating unit
A40/3	COMAND controller unit (with code 347 (Mercedes-Benz emergency call system))	N32/1	Driver seat control unit (with code (275) Memory package)
A53	Left sidebag sensor	N69/1	Left front door control unit
A54	Right sidebag sensor	N69/2	Right front door control unit
B41/1	Front passenger seat occupancy recognition (except CODE U18 (Automatic child seat recognition ACSR [AKSE]) and except CODE U10 (Automatic front passenger airbag shutoff))	N72/1	Upper control panel control unit
B48	Front passenger seat occupied recognition and ACSR [AKSE] (with CODE U18 (Automatic child seat recognition (ACSR [AKSE])))	N72/1e1	Automatic child seat recognition warning lamp (as of 01.06.2013)
B48/1	Left frontal acceleration sensor	N73	Electronic ignition switch control unit
B48/2	Right frontal acceleration sensor	N110	Weight sensing system (WSS) control unit (with CODE U10 (Automatic front passenger airbag shutoff))
B48/3	Belt tension sensor (with code U10 (Automatic front passenger airbag shutoff))	N112/2	Telematics services communications module (with CODE 350 (eCall Europe emergency call system))
B48/4	Seat occupied recognition pressure sensor (with code U10 (Automatic front passenger airbag shutoff)) (up to 31.05.2013)	N112/9	HERMES control unit (with code 360 (HERMES UMTS) or with code 362 (HERMES LTE))
B48/7	Left front door pressure sensor	N123/4	Emergency call system control unit (with code 359 (TELEAID emergency call system) (up to 31.05.2013) or code 348 (Emergency call/assist system))
B48/8	Right front door pressure sensor	S6/1	Instrument panel switch group (up to 31.05.2013)
B100	Pedestrian protection Hall sensor (with CODE U60 (Active engine hood (Pedestrian protection)))	S6/1e1	Automatic child seat recognition warning lamp (up to 31.05.2013)
B151/1	Left front bumper pedestrian protection sensor (with CODE U60 (Active engine hood (Pedestrian protection)))	S68/3	Driver seat belt buckle restraint system switch

B151/2 Center front bumper pedestrian protection sensor (with code U60 (Active engine hood (Pedestrian protection))) (up to 31.05.2013)


B151/3 Right front bumper pedestrian protection sensor (with CODE U60 (Active engine hood (Pedestrian protection)))

N2/10 Supplemental restraint system control unit

S68/4 Front passenger seat belt buckle restraint system switch

A With code U60 (Active engine hood (pedestrian protection)) up to 31.05.2013

B With code U60 (Active engine hood (pedestrian protection)) as of 01.06.2013

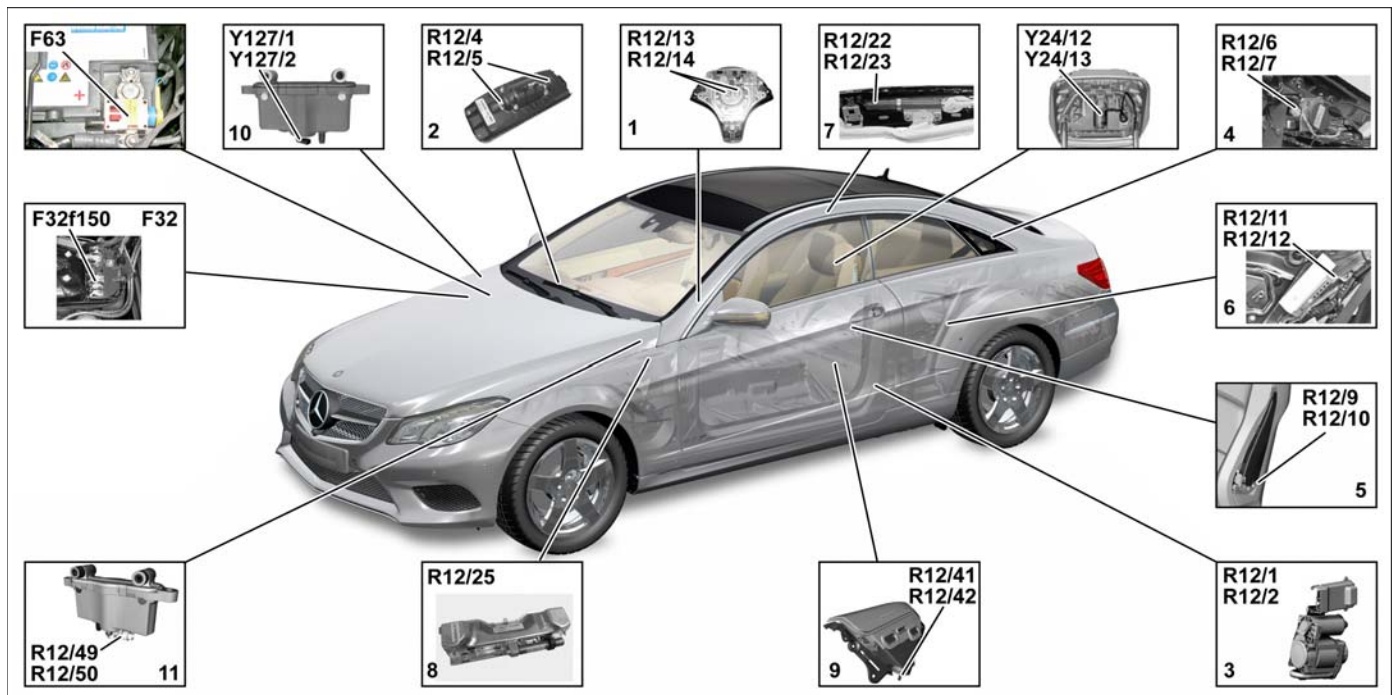


P91.60-4450-79

Shown here is model 207.3

1	Driver airbag	R12/7	Right rear emergency tensioning retractor squib
2	Front passenger airbag	R12/9	Driver sidebag squib (model 207.3)
3	Front ETR	R12/10	Front passenger sidebag squib (model 207.3)
4	Rear emergency tensioning retractor	R12/11	Left rear sidebag squib (with code 293 (Sidebags in rear))
5	Sidebag (model 207.3)	R12/12	Right rear sidebag squib (with code 293 (Sidebags in rear))
6	Rear sidebag unit (with code 293 (Sidebags in rear))	R12/13	Driver airbag squib 1
7	Windowbag unit (model 207.3)	R12/14	Driver airbag squib 2
8	Kneebag unit	R12/22	Left windowbag squib (model 207.3)
9	Pelvis airbag unit (with code 291 (PELVIS AIRBAG (PELVISBAG)))	R12/23	Right windowbag squib (model 207.3)
10	Engine hood lifter unit (with code U60 (Active engine hood (pedestrian protection)) up to 31.05.2013)	R12/25	Driver kneebag squib
11	Engine hood lifter unit (with code U60 (Active engine hood (pedestrian protection)) as of 01.06.2013)	R12/41	Driver pelvis airbag squib (with code 291 (PELVIS AIRBAG (PELVISBAG)))
F32	Front electrical prefuse box	R12/42	Front passenger pelvis airbag squib (with code 291 (PELVIS AIRBAG (PELVISBAG)))
F32f150	Pyrofuse 150 (except code B03 (ECO start/stop function))	R12/49	Left active engine hood squib (with code U60 (Active engine hood (Pedestrian protection)) as of 01.06.2013)
F63	Pyrofuse (with CODE B03 (ECO start/stop function))	R12/50	Right active engine hood squib (with code U60 (Active engine hood (Pedestrian protection)) as of 01.06.2013)
R12/1	Driver ETR [GUS] squib	Y24/12	Driver seat NECK-PRO head restraint solenoid
R12/2	Front passenger ETR [GUS] squib	Y24/13	Front passenger seat NECK-PRO head restraint solenoid
R12/4	Front passenger airbag squib 1	Y127/1	Left rear engine hood lifter (with code U60 (Active engine hood (pedestrian protection)) up to 31.05.2013)
R12/5	Front passenger airbag squib 2	Y127/2	Right rear engine hood lifter (with code U60 (Active engine hood (pedestrian protection)) up to 31.05.2013)
R12/6	Left rear emergency tensioning retractor squib		

i Model 207.4

Instead of the sidebag units and the windowbag units, the head/thoraxbag units are installed with the left head/thoraxbag squib (R12/39) and the right head/thoraxbag squib (R12/40). Roll bars are integrated into the rear head restraints. These are extended by the ignition of the left roll bar airbag squib (R12/45) and right roll bar airbag squib (R12/46).

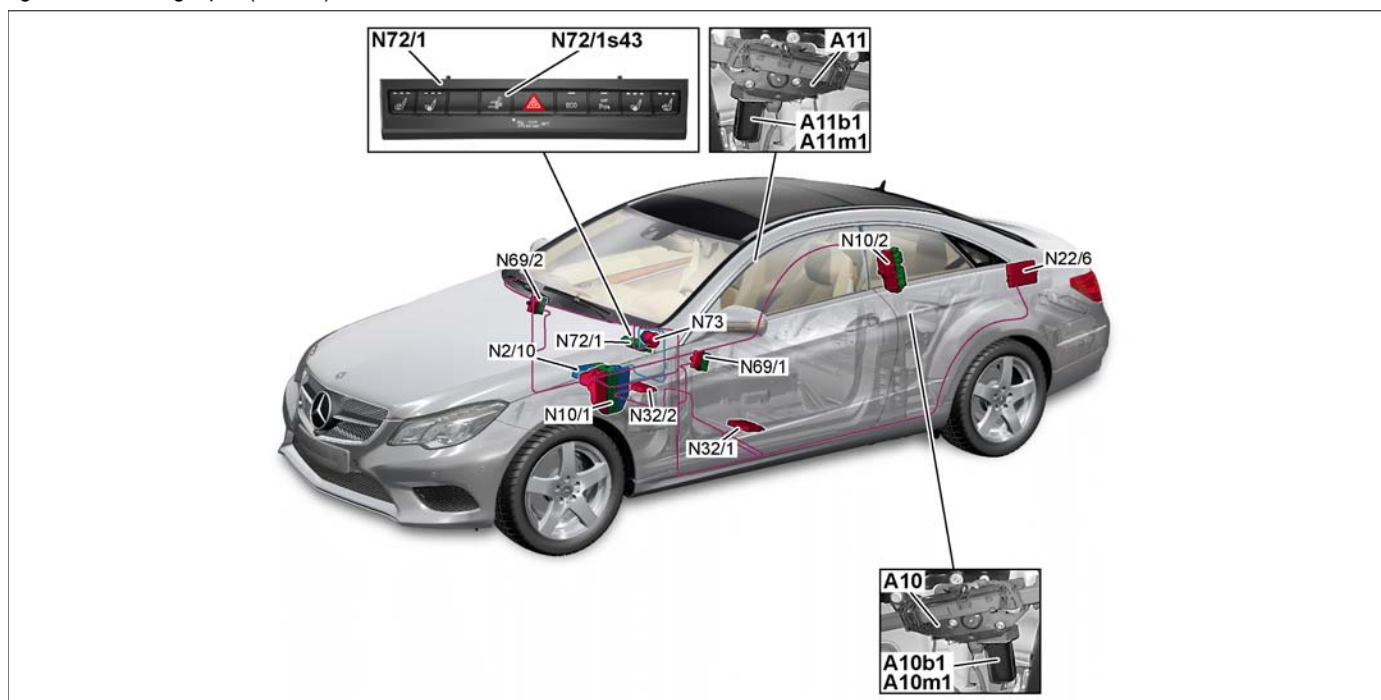

P91.45-2032-79

Belt extender, shown on model 207.3

- | | | | |
|-------|---|----------|---|
| A10 | Seat belt extender on left | N22/6 | Rear control unit |
| A10b1 | Left belt extender Hall sensor | N32/1 | Driver seat control unit |
| A10m1 | Left belt extender electric motor | N32/2 | Front passenger seat control unit |
| A11 | Seat belt extender on right | N69/1 | Left front door control unit |
| A11b1 | Right belt extender Hall sensor | N69/2 | Right front door control unit |
| A11m1 | Right belt extender electric motor | N72/1 | Upper control panel control unit |
| N2/10 | Supplemental restraint system control unit | N72/1s43 | Belt extender button |
| N10/1 | Front SAM control unit with fuse and relay module | N73 | Electronic ignition switch control unit |
| N10/2 | Rear SAM control unit with fuse and relay module | | |

	Component description for instrument cluster	A1	GF54.30-P-6000CA
	Stationary heater control unit, component description	Model 207.3/4 with code 228 (Auxiliary heater) A6n1	GF83.70-P-4066CA

	Component description for COMAND controller unit	<p>Model 207 as of 9/1/14 up to 3/1/15 up to model year 2016 with code 347 (Mercedes-Benz emergency call system) with code 526 (COMAND with single DVD drive (without navigation))</p> <p>Model 207 up to 3/1/15 as of model year 2013 up to model year 2016 with code 347 (Mercedes-Benz emergency call system) with code 512 (COMAND APS with DVD changer)</p> <p>Model 207 up to 3/1/15 as of model year 2013 up to model year 2016 with code 347 (Mercedes-Benz emergency call system) with code 527 (COMAND APS with single DVD drive (with navigation))</p> <p>Model 207 up to 8/31/14 as of model year 2013 with code 347 (Mercedes-Benz emergency call system) with code 528 (COMAND with DVD changer)</p> <p>A40/3</p> <p>Model 207 as of 3/2/15 as of model year 2016 with code 347 (Mercedes-Benz emergency call system) with code 531 (COMAND APS)</p> <p>A40/3</p>	<p>GF82.85-P-3136CAB</p> <p>GF82.85-P-3136CAC</p>
	Supplemental restraint system control unit, component description	N2/10	GF91.60-P-4080CAM
	Component description for CDI control unit	<p>Model 207.3/4 with engine 642.8 N3/9</p> <p>Model 207.3/4 with engine 651.9 N3/9</p>	<p>GF07.16-P-6000OG</p> <p>GF07.16-P-6000OM</p>
	Component description for ME-SFI (ME) control unit	<p>Model 207.3/4 with engine 271.8 N3/10</p> <p>Model 207.3/4 with engine 272.9 (except 272.984) N3/10</p> <p>Model 207.3/4 with engine 272.984 N3/10</p> <p>Model 207.3/4 with engine 273.9 N3/10</p> <p>Model 207.3/4 with engine 274.9 N3/10</p> <p>Model 207.3/4 with engine 276.8 as of model year 2014 N3/10</p> <p>Model 207.3/4 with engine 276.9 N3/10</p> <p>Model 207.3/4 with engine 278.9 N3/10</p>	<p>GF07.61-P-6000MG</p> <p>GF07.61-P-6000MI</p> <p>GF07.61-P-6000MIE</p> <p>GF07.61-P-6000ML</p> <p>GF07.61-P-6000MRB</p> <p>GF07.61-P-6000MMP</p> <p>GF07.61-P-6000MM</p> <p>GF07.61-P-6000MMA</p>
	Component description for front SAM control unit with fuse and relay module	N10/1	GF54.21-P-6070CA
	Component description for rear SAM control unit with fuse and relay module	N10/2	GF54.21-P-6030CA
	Rear control unit, component description	N22/6	GF54.21-P-4134CA
	Component description for automatic air conditioning control and operating unit	<p>Model 207.3/4 except code 581 (Automatic air conditioning) N22/7</p> <p>Model 207.3/4 with code 581 (Automatic air conditioning) N22/7</p>	<p>GF83.40-P-3000CAA</p> <p>GF83.40-P-3000CAB</p>
	Component description for driver seat control unit	Model 207.3/4 with code 275 (Memory package) N32/1	GF91.29-P-5231CA
	Component description for front passenger seat control unit	Model 207.3/4 with code 242 (Front passenger seat, electrically adjustable with memory function) N32/2	GF91.29-P-5241CA
	Component description for left front door control unit	N69/1	GF72.29-P-6001CA
	Component description for right front door control unit	N69/2	GF72.29-P-6009CA
	Upper control panel control unit, component description	N72/1	GF54.21-P-6040CA
	Component description for the electronic ignition lock control unit	N73	GF80.57-P-6001CA

	Component description for Weight Sensing System (WSS) control unit	Model 207.3/4 with code U10 (Automatic seat occupancy recognition and child seat recognition) N110	GF91.60-P-4069CAU
	Telematics services communications module, component description	Model 207 up to model year 2017 with code 350 (Ecall emergency call system, Europe) N112/2	GF82.85-P-0220CAM
	HERMES control unit, component description	Model 207 with code 360 (HERMES UMTS) Model 207 with code 362 (HERMES LTE) N112/9	GF82.85-P-0221CA
	Component description for emergency call system control unit	Model 207 up to model year 2013 with code 359 (TELE AID emergency call system) N123/4 Model 207 as of model year 2013 up to model year 2017 with code 348 (Emergency call/assistant system) N123/4	GF82.95-P-3212CAU GF82.95-P-3212CAV
	Table of contents for function description of supplemental restraint system function		GF91.60-P-0996CAM