

MODEL 207



P83.10-2700-07

Shown on vehicle with code (581)
Comfort automatic air conditioning

- 1 Rear air nozzle
- 2 Armrest
- 3 Center console
- 4 Pop rivets

- 5 Catch hook
- 6 Electrical connector
- 7 Electrical connector

- N22/4 Rear automatic air conditioning operating unit (with code (581) Comfort automatic air conditioning)

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit	KEYLESS-GO start/stop button only on vehicles with code (889) Keyless-Go.	
2	Open armrest (2) and release catch hooks (5) on rear air vent (1)	The unlocking of the catch hooks (5) is shown here by way of an example with a blind rivet (4) of approx. 2 mm. It is also possible to use other suitable tools or objects with a diameter of approx. 2 mm.	
3	Remove rear air vent (1) upwards from the center console (3) and detach electrical connector (6)		
4	Detach electrical connector (7) from rear automatic air conditioning operating unit (N22/4)	On vehicles with code (581) Comfort automatic air conditioning	
5	Install in the reverse order		