


**MODEL 208.4, 209.4**

**Shown on model 209**

- A Soft top seals
- D Soft top seals on side at C-pillar

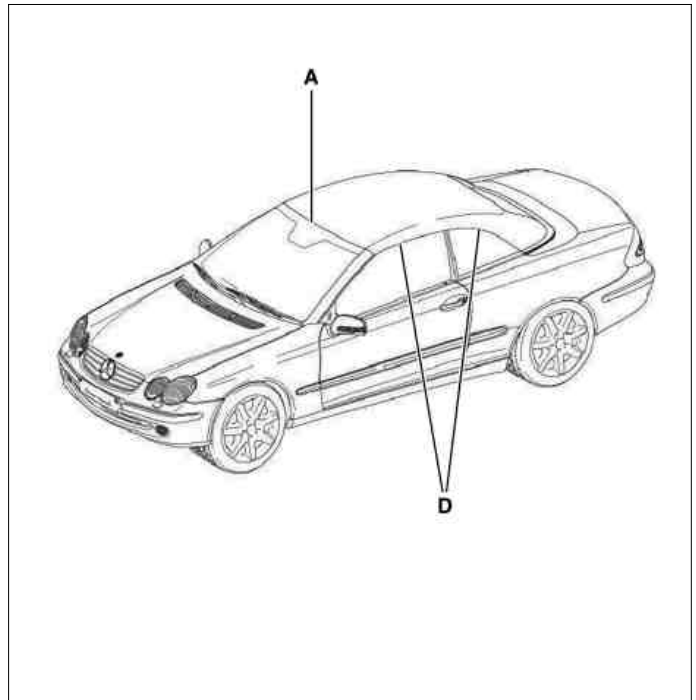

P77.30-2308-12

**Operation no. of operation texts or standard texts and flat rates**

Category	Op. no.	Operation text	Time	Acc. no.	Code
P	024727	Rectify noises at soft top seal	006 WU	---	---

		Remove/install		
⚠	<b>Danger!</b>	<b>Risk of injury</b> caused by moving parts that can <b>pinch, crush</b> or, in extreme cases, even <b>sever</b> extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
1		Take off soft top and open side windows.		
2		Clean seal contact points (A, D)	Cleaner	*BR00.45-Z-1025-04A
3		Apply special antifriction oil on dry seal (picture)	<p><b>i</b> On seal at windshield frame (A), apply only at paint contact area and at side soft top seals at C-pillar (D) (apply antifriction agent at upper edge of side windows).</p> <p><b>i</b> Reaction time 20 min.</p> <p>Special antifriction oil</p> <p><b>i</b> Please ensure that you have enough special antifriction oil for at least 10 vehicles.</p>	*BR00.45-Z-1055-06A
4		Completely open and close soft top several times	<b>i</b> Remove any excess antifriction oil.	

**Repair materials**

Number	Designation	Order number
BR00.45-Z-1025-04A	Cleaner	A 005 989 19 71
BR00.45-Z-1055-06A	Special sliding compound	A 000 989 36 60