



Model 207.3/4

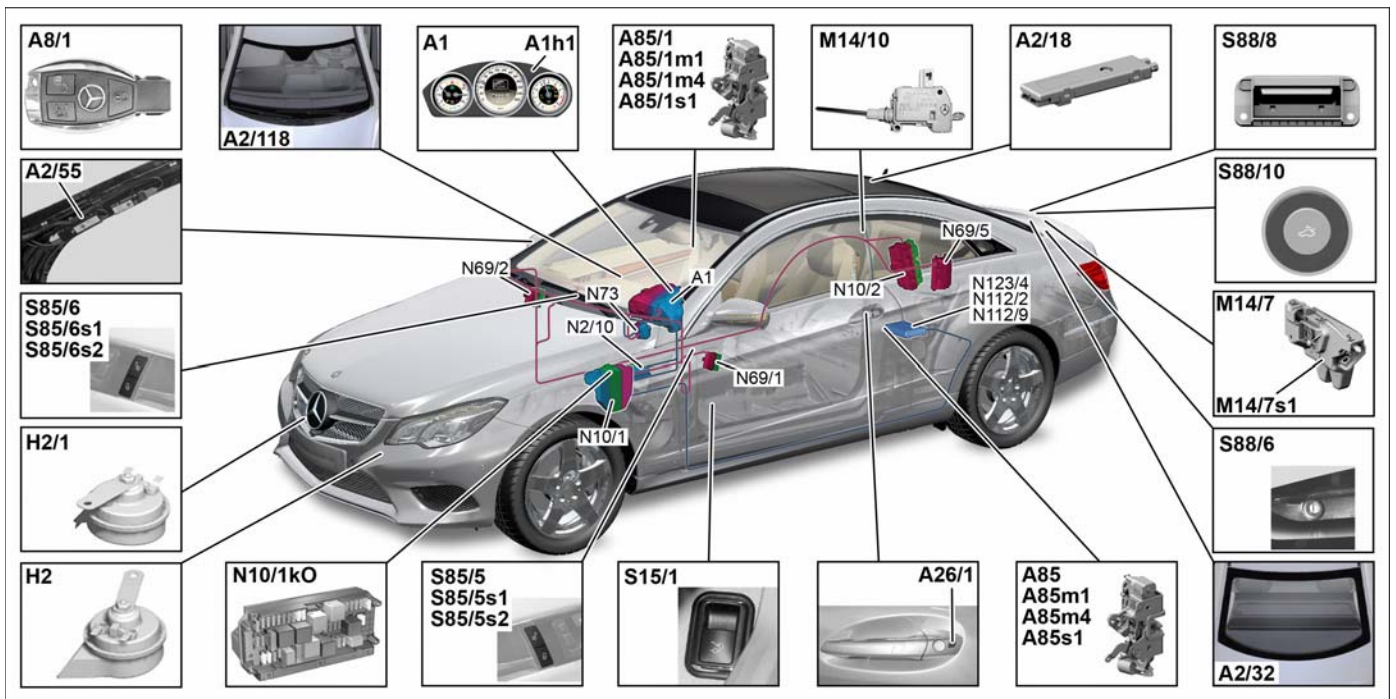

P80.20-3984-79

**Central locking (CL), shown on model 207.3**

A1	Instrument cluster	N2/10	Supplemental restraint system control unit
A1h1	Warning buzzer	N10/1	Front SAM control unit with fuse and relay module
A2/18	FM, AM and CL antenna amplifier (model 207.3)	N10/1kO	Fanfare horn relay
A2/32	Rear window antenna (model 207.3)	N10/2	Rear SAM control unit with fuse and relay module
A2/55	FM, AM and CL antenna amplifier (model 207.4)	N69/1	Left front door control unit
A2/118	Windshield antenna (model 207.4)	N69/2	Right front door control unit
A8/1	Transmitter key	N69/5	KEYLESS-GO control unit (with CODE 889 (KEYLESS-GO))
A26/1	Driver-side front door infrared remote control receiver	N73	Electronic ignition switch control unit
A85	Left front door lock	N112/2	Telematics services communications module (with code 05U (Remote Online))
A85m1	Left front door central locking motor	N112/9	HERMES control unit (with code 360 (HERMES UMTS) and with code 11U (Remote Online) or code 362 (HERMES LTE))
A85m4	Left front door additional door lock actuator motor (with code (885) Extended theft protection)	N123/4	Emergency call system control unit (with code (359) TELEAID emergency call system or code (348) Emergency call/assist system)
A85s1	Left front door rotary tumbler switch	S15/1	Trunk lid release button
A85/1	Right front door lock	S85/5	Left front door central locking interior switch
A85/1m1	Right front door central locking motor	S85/5s1	'Open' central locking switch
A85/1m4	Right front door additional door lock actuator motor (with code (885) Extended theft protection)	S85/5s2	'Close' central locking switch
A85/1s1	Right front door rotary tumbler switch	S85/6	Right front door central locking interior switch
H2	Left fanfare horn	S86/6s1	'Open' central locking switch
H2/1	Right fanfare horn	S86/6s2	'Close' central locking switch
M14/7	Trunk lid central locking motor	S88/6	Trunk lid contact switch (with code (887) Valet Parking)
M14/7s1	Trunk lid rotary tumbler switch	S88/8	Trunk lid external operation switch
M14/10	Tank cap central locking motor	S88/10	Trunk lid emergency opening switch (with code (494) USA version)

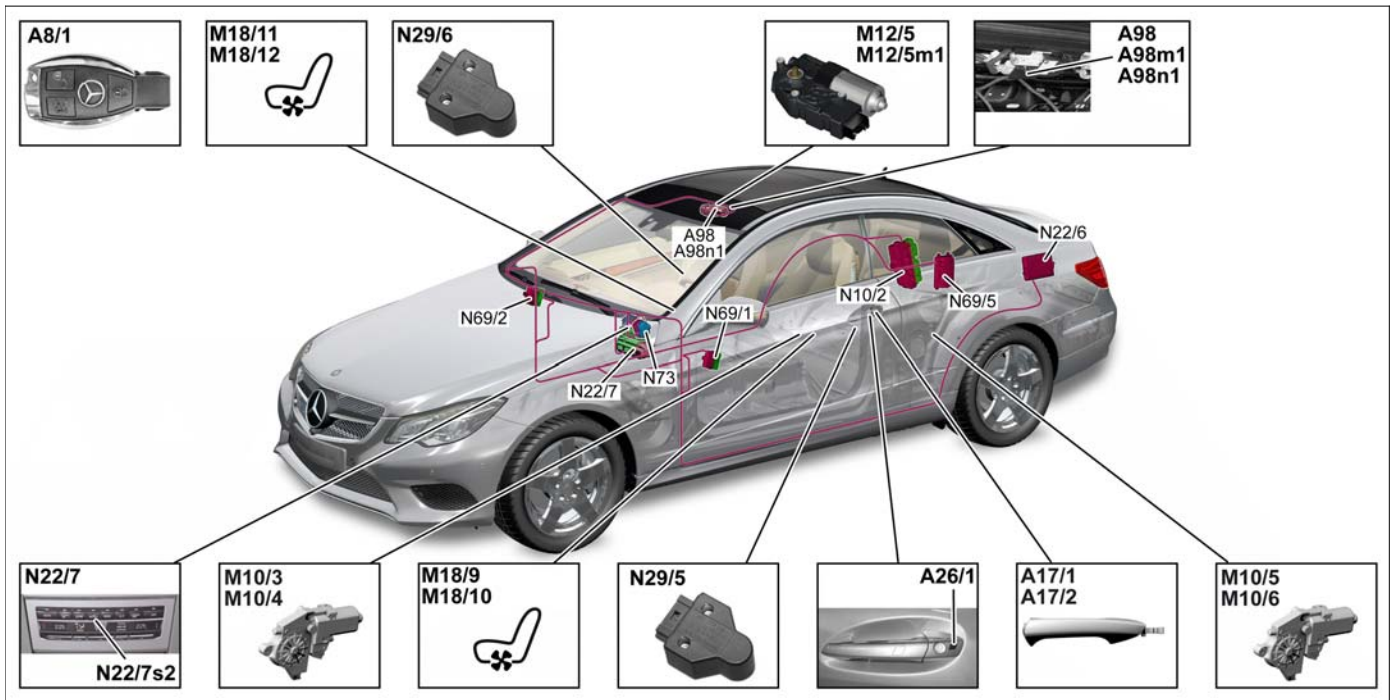


P80.45-2137-79

**Convenience feature (CF), shown on model 207.3**


A8/1	Transmitter key	M18/10	Left front backrest seat ventilation motors (with CODE 401 (Seat climate control for driver and front passenger))
A17/1	Left front door KEYLESS-GO door handle (with code (889) KEYLESS-GO)	M18/11	Right front seat cushion seat ventilation motors (with CODE 401 (Seat climate control for driver and front passenger))
A17/2	Right front door KEYLESS-GO door handle (with code (889) KEYLESS-GO)	M18/12	Right front backrest seat ventilation motors (with CODE 401 (Seat climate control for driver and front passenger))
A26/1	Driver-side front door infrared remote control receiver	N10/2	Rear SAM control unit with fuse and relay module
A98	Panoramic sliding sunroof control module (with CODE 413 (Panoramic sliding sunroof))	N22/6	Rear control unit
A98m1	Panoramic sliding sunroof motor (with CODE 413 (Panoramic sliding sunroof))	N22/7	Automatic air conditioning control and operating unit
A98n1	Panoramic sliding sunroof control unit (with CODE 413 (Panoramic sliding sunroof))	N22/7s2	Air recirculation mode button
M10/3	Left front door power window motor	N29/5	Left front seat ventilation blower regulator (with CODE 401 (Seat climate control for driver and front passenger))
M10/4	Right front door power window motor	N29/6	Right front seat ventilation blower regulator (with CODE 401 (Seat climate control for driver and front passenger))
M10/5	Left rear power window motor	N69/1	Left front door control unit
M10/6	Right rear power window motor	N69/2	Right front door control unit
M12/5	Drive unit for panoramic sliding sunroof roller sun blind (with CODE 413 (Panoramic sliding sunroof))	N69/5	KEYLESS-GO control unit (with CODE 889 (KEYLESS-GO))
M12/5m1	Panoramic sliding sunroof roller sun blind motor (with CODE 413 (Panoramic sliding sunroof))	N73	Electronic ignition switch control unit
M18/9	Left front seat cushion seat ventilation motors (with CODE 401 (Seat climate control for driver and front passenger))		

**Drive authorization system stage 3 (DAS 3) (up to 31.05.2013), Drive authorization system stage 4 (DAS 4) (as of 01.06.2013), shown on model 207.3**

- A1 Instrument cluster
- A1p13 Multifunction display
- A8/1 Transmitter key
- N3/9 CDI control unit (diesel engine, with engine 642 located on right, with engine 651 located at center)
- N3/10 ME-SFI [ME] control unit (gasoline engine, with engine 271, 274, 276 located at left, with engine 272, 273, 278 located at center)
- N26/5 Electric steering lock control unit
- N73 Electronic ignition switch control unit
- Y3/8n4 Fully integrated transmission control unit (with transmission 722.9, 725)

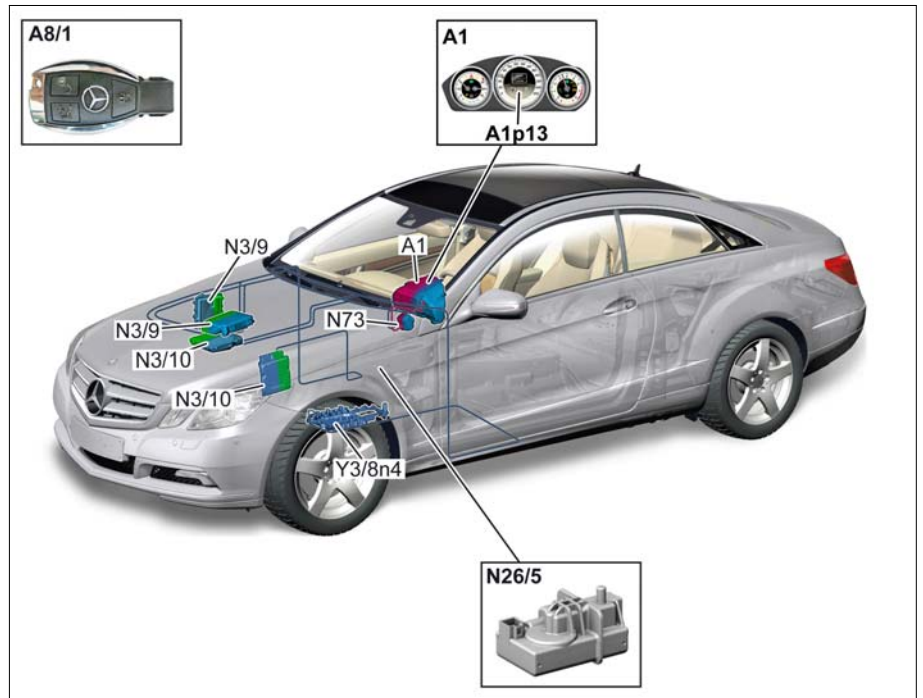

P80.57-2195-76

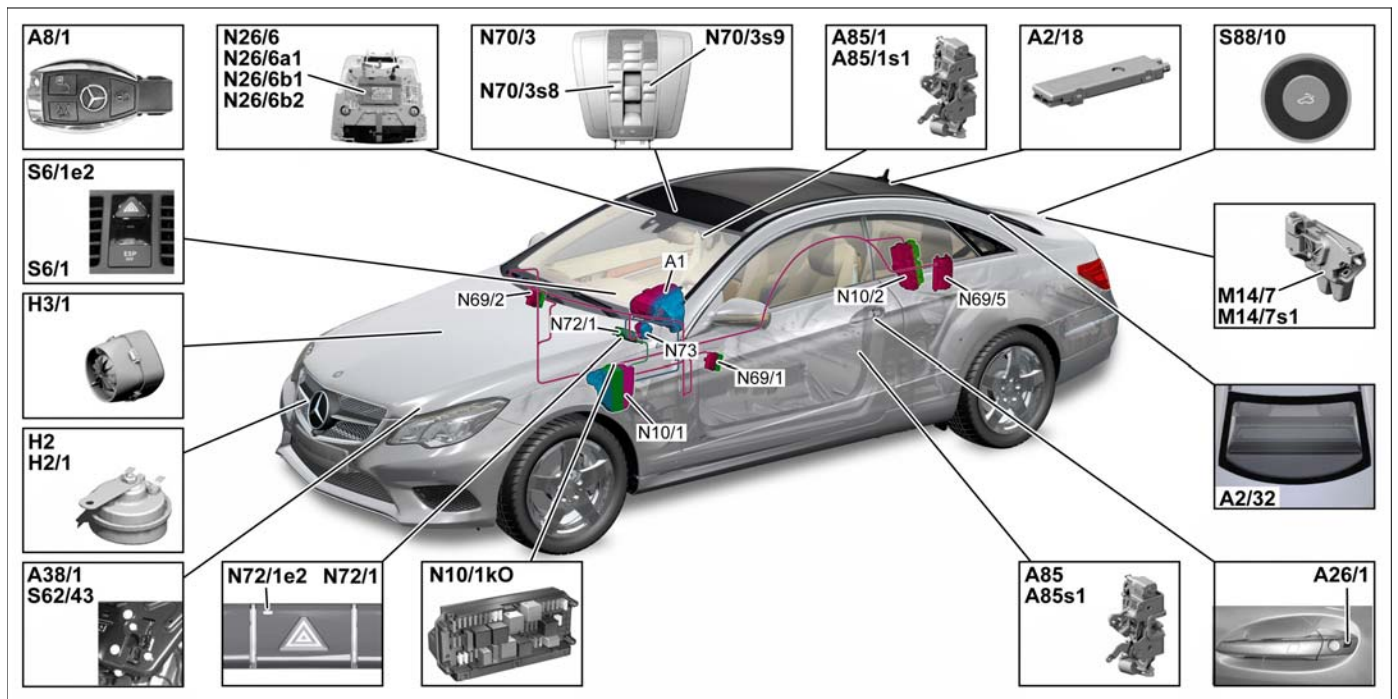


P80.50-2851-79

**Anti-theft alarm system (ATA), model 207.3**

- |       |   |         |  |
|-------|---|---------|--|
| A1    | Instrument cluster  | N26/6   | Interior protection and tow-away protection control unit (with CODE 882 (Interior monitoring)) |
| A2/18 | FM, AM and CL [ZV] antenna amplifier  | N26/6a1 | Interior protection receiver (with CODE 882 (Interior monitoring))                             |
| A2/32 | Rear window antenna   | N26/6b1 | Left interior protection transmitter (with CODE 882 (Interior monitoring))                     |
| A8/1  | Transmitter key   | N26/6b2 | Right interior protection transmitter (with CODE 882 (Interior monitoring))                    |
| A26/1 | Driver-side front door infrared remote control receiver   | N69/1   | Left front door control unit   |
| A38/1 | Pedestrian protection Hall sensor + ATA [EDW] engine hood switch (with CODE U60 (Active engine hood (Pedestrian protection))) | N69/2   | Right front door control unit  |
| A85   | Left front door lock  | N69/5   | KEYLESS-GO control unit (with CODE 889 (KEYLESS-GO))   |
| A85s1 | Left front door rotary tumbler switch   | N70/3   | Overhead control panel electronics   |


A85/1	Right front door lock	N70/3s8	Interior protection button (with CODE 882 (Interior monitoring))
A85/1s1	Right front door rotary tumbler switch	N70/3s9	Tow-away protection button (with CODE 882 (Interior monitoring))
H2	Left fanfare horn	N72/1	Upper control panel control unit
H2/1	Right fanfare horn	N72/1e2	Anti-theft alarm system indicator lamp (as of 01.06.2013)
H3/1	Alarm siren (up to 31.05.2010, as of 01.06.2010 without code (494) USA version)	N73	Electronic ignition switch control unit
M14/7	Trunk lid central locking motor	S6/1	Instrument panel switch group (up to 31.05.2013)
M14/7s1	Trunk lid rotary tumbler switch	S6/1e2	Anti-theft alarm system indicator lamp (up to 31.05.2013)
N10/1	Front SAM control unit with fuse and relay module	S62/43	Left engine hood contact switch (without code U60 (Active engine hood (pedestrian protection)))
N10/1kO	Fanfare horn relay	S88/10	Trunk lid emergency opening switch (with code (494) USA version)
N10/2	Rear SAM control unit with fuse and relay module		

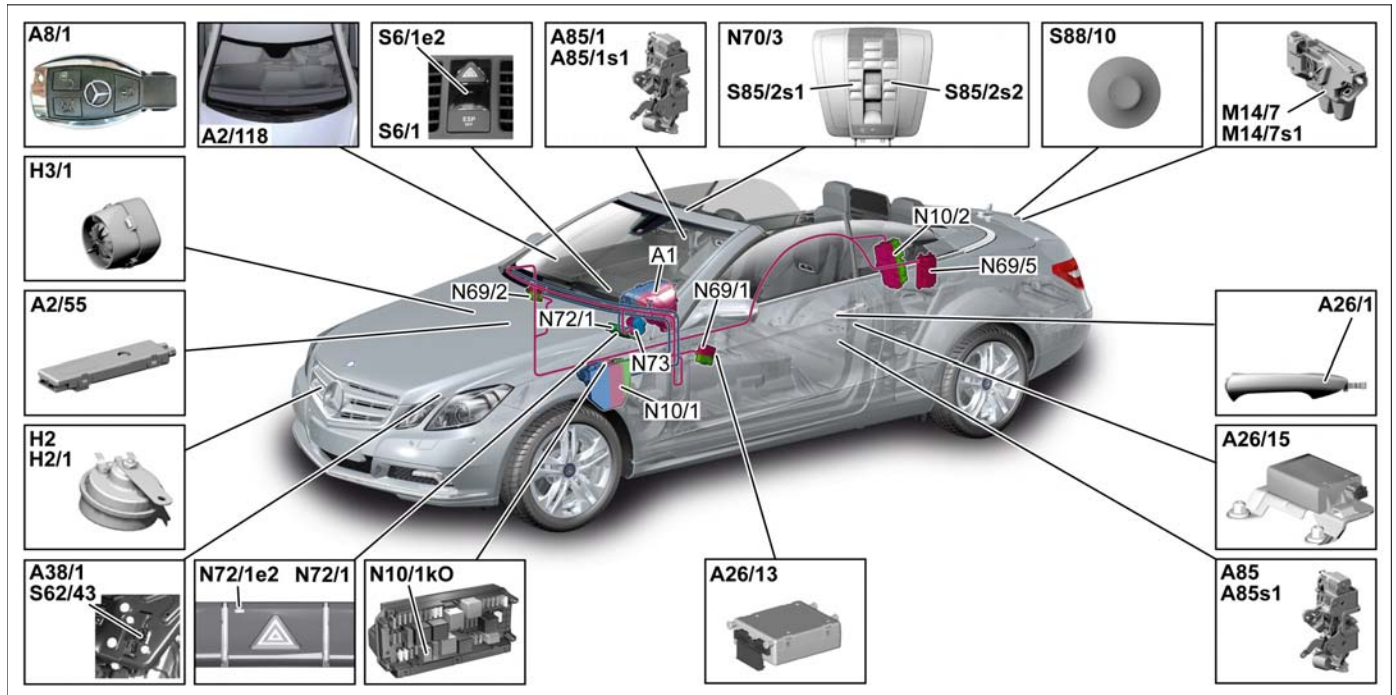

P80.50-2852-79

#### Anti-theft alarm system (ATA), model 207.4

A1	Instrument cluster	N10/1	Front SAM control unit with fuse and relay module
A2/55	FM, AM and CL [ZV] antenna amplifier	N10/1kO	Fanfare horn relay
A2/118	Windshield antenna	N10/2	Rear SAM control unit with fuse and relay module
A8/1	Transmitter key	N69/1	Left front door control unit
A26/1	Driver-side front door infrared remote control receiver	N69/2	Right front door control unit
A26/13	Interior protection sensor (master) (with code 882 (Interior monitoring))	N69/5	KEYLESS-GO control unit (with CODE 889 (KEYLESS-GO))
A26/15	Interior protection sensor (Slave) (with code 882 (Interior monitoring))	N70/3	Overhead control panel electronics
A38/1	Pedestrian protection Hall sensor + ATA [EDW] engine hood switch (with CODE U60 (Active engine hood (Pedestrian protection)))	N72/1	Upper control panel control unit
A85	Left front door lock	N72/1e2	Anti-theft alarm system indicator lamp (as of 01.06.2013)
A85s1	Left front door rotary tumbler switch	N73	Electronic ignition switch control unit
A85/1	Right front door lock	S6/1	Instrument panel switch group (up to 31.05.2013)
A85/1s1	Right front door rotary tumbler switch	S6/1e2	Anti-theft alarm system indicator lamp (up to 31.05.2013)
H2	Left fanfare horn	S62/43	Left engine hood contact switch (without code U60 (Active engine hood (pedestrian protection)))
H2/1	Right fanfare horn	S85/2s1	Interior protection button (with CODE 882 (Interior monitoring))
H3/1	Alarm siren (without code (494) USA version)	S85/2s2	Tow-away protection button (with CODE 882 (Interior monitoring))
M14/7	Trunk lid central locking motor	S88/10	Trunk lid emergency opening switch (with code (494) USA version)

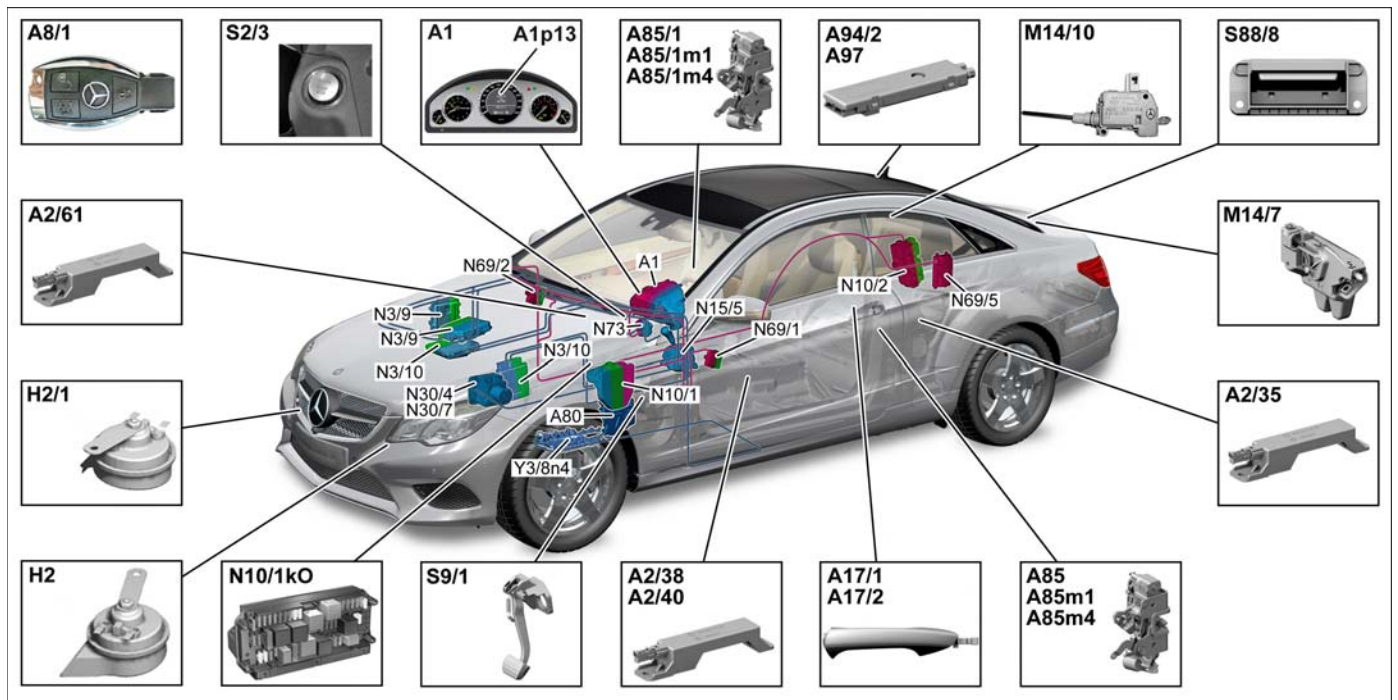

P80.61-2748-79

**KEYLESS-GO (with CODE (889) KEYLESS-GO), shown on model 207.3**

A1	Instrument cluster	H2/1	Right fanfare horn
A1p13	Multifunction display	M14/7	Trunk lid central locking motor
A2/35	Trunk KEYLESS GO antenna	M14/10	Tank cap central locking motor
A2/38	Left front door KEYLESS-GO antenna	N3/9	CDI control unit (diesel engine, with engine 642 located on right, with engine 651 located at center)
A2/40	Right front door KEYLESS-GO antenna	N3/10	ME-SFI [ME] control unit (gasoline engine, with engine 271, 274, 276 located at left, with engine 272, 273, 278 located at center)
A2/61	Interior KEYLESS GO antenna	N10/1	Front SAM control unit with fuse and relay module
A8/1	Transmitter key	N10/1kO	Fanfare horn relay
A17/1	Left front KEYLESS GO door handle	N10/2	Rear SAM control unit with fuse and relay module
A17/2	Right front KEYLESS GO door handle	N15/5	Electronic selector lever module control unit (with transmission 722.6, 722.9 up to 31.05.2013)
A80	Intelligent servo module for DIRECT SELECT (with transmission 722.9)	N30/4	Electronic Stability Program control unit (up to 31.05.2013 without code (233) DISTRONIC PLUS or as of 01.06.2013)
A85	Left front door lock	N30/7	Premium electronic Stability Program control unit (up to 31.05.2013 with code (233) DISTRONIC PLUS)
A85m1	Left front door central locking motor	N69/1	Left front door control unit
A85m4	Left front door additional door lock actuator motor (with code (885) Extended theft protection)	N69/2	Right front door control unit
A85/1	Right front door lock	N69/5	KEYLESS-GO control unit
A85/1m1	Right front door central locking motor	N73	Electronic ignition switch control unit
A85/1m4	Right front door additional door lock actuator motor (with code (885) Extended theft protection)	S2/3	KEYLESS GO start/stop button
A94/2	TV 2 and KEYLESS-GO antenna amplifier (model 207.3)	S9/1	Stop lamp switch
A97	Rear KEYLESS-GO antenna (model 207.4)	S88/8	Trunk lid external operation switch
H2	Left fanfare horn	Y3/8n4	Fully integrated transmission control unit (with transmission 722.9, 725)

	Component description for instrument cluster	A1	GF54.30-P-6000CA
	Component description for intelligent servo module for DIRECT SELECT	Model 207 with transmission 722.9 as of model year 2014 A80	GF27.19-P-4020AHC

	Component description for panoramic sliding roof control module	Model 207.3 with code 413 (Automatic panoramic sliding sunroof) A98	GF77.20-P-4106CA
	Supplemental restraint system control unit, component description	N2/10	GF91.60-P-4080CAM
	Component description for CDI control unit	Model 207 with engine 642.8 N3/9 Model 207 with engine 651.9 N3/9	GF07.16-P-6000OG GF07.16-P-6000OM
	Component description for ME-SFI (ME) control unit	Model 207 with engine 271.8 N3/10 Model 207 with engine 272.9 (except 272.984) N3/10 Model 207.3/4 with engine 272.984 N3/10 Model 207.3/4 with engine 273.9 N3/10 Model 207.3/4 with engine 274.9 N3/10 Model 207.3/4 with engine 276.8 as of model year 2014 N3/10 Model 207 with engine 276.9 N3/10 Model 207 with engine 278.9 N3/10	GF07.61-P-6000MG GF07.61-P-6000MI GF07.61-P-6000MIE GF07.61-P-6000ML GF07.61-P-6000MRB GF07.61-P-6000MMP GF07.61-P-6000MM GF07.61-P-6000MMA
	Component description for front SAM control unit with fuse and relay module	N10/1	GF54.21-P-6070CA
	Component description for rear SAM control unit with fuse and relay module	N10/2	GF54.21-P-6030CA
	Component description for electronic selector lever module control unit	Model 207.3/4 with transmission 722.6/YoM 11 N15/5 Model 207 with transmission 722.9 up to model year 2014 N15/5	GF27.60-P-5163ACL GF27.60-P-5163AHC
	Rear control unit, component description	N22/6	GF54.21-P-4134CA
	Component description for automatic air conditioning control and operating unit	Model 207.3/4 except code 581 (Automatic air conditioning) N22/7 Model 207.3/4 with code 581 (Automatic air conditioning) N22/7	GF83.40-P-3000CAA GF83.40-P-3000CAB
	Component description for Electronic Stability Program control unit	Model 207.3/4 up to model year 2014 N304, N307 Model 207.3/4 as of model year 2014 N30/4	GF42.45-P-5119CA GF42.45-P-5119CAM
	Component description for left front door control unit	N69/1	GF72.29-P-6001CA
	Component description for right front door control unit	N69/2	GF72.29-P-6009CA
	Component description for KEYLESS-GO control unit	Model 207.3/4 with code 889 (KEYLESS-GO) N69/5	GF80.61-P-4204CA
	Component description for the electronic ignition lock control unit	N73	GF80.57-P-6001CA
	Telematics services communications module, component description	Model 207 up to model year 2017 with code 350 (Ecall emergency call system, Europe) N112/2	GF82.85-P-0220CAM
	HERMES control unit, component description	Model 207 with code 360 (HERMES UMTS) Model 207 with code 362 (HERMES LTE) N112/9	GF82.85-P-0221CA
	Component description for emergency call system control unit	Model 207 up to model year 2013 with code 359 (TELE AID emergency call system) N123/4 Model 207 as of model year 2013 up to model year 2017 with code 348 (Emergency call/assistant system) N123/4	GF82.95-P-3212CAU GF82.95-P-3212CAV

	Component description for fully integrated transmission control unit	Model 207 with transmission 722.9 Y38n4 Model 207 with transmission 725.0 Y38n4	GF27.60-P-5165AHC GF27.60-P-5165ANC
	Table of contents for function description of theft protection and locking		GF80.00-P-0999CA