

<b>Item</b>	<b>Designation</b>	<b>Coordinates</b>
<b><u>A0</u></b>	Color code key	32L
<b><u>A26/13</u></b>	Interior protection sensor (master)	21A
<b><u>A26/15</u></b>	Interior protection sensor (slave)	25L
<b><u>N10/2</u></b>	Rear SAM control unit with fuse and relay module	12L 22L
<b><u>N26/6</u></b>	Interior protection and tow-away protection control unit	5A 12A
<b><u>N26/6a1</u></b>	Interior protection receiver	2L
<b><u>N26/6b1</u></b>	Left interior protection transmitter	14L
<b><u>N26/6b2</u></b>	Right interior protection transmitter	15L
<b><u>N70/3</u></b>	Overhead control panel electronics	4L
<b><u>N70/3s8</u></b>	Interior protection switch	4L
<b><u>N70/3s9</u></b>	Towing sensor button	5L
<b><u>S85/2</u></b>	ATA interior protection/tow-away protection switch	19L
<b><u>S85/2s1</u></b>	Interior protection switch	18L
<b><u>S85/2s2</u></b>	Towing sensor button	19L
<b><u>U23</u></b>	Valid for convertibles	16A
<b><u>U611</u></b>	Valid for Coupe	1A
<b><u>W7</u></b>	Right wheelhouse trunk ground point	13H
<b><u>W18/3</u></b>	Left front seat crossmember ground point 2	26H
<b><u>W19</u></b>	Right front seat crossmember ground point	20H
<b><u>X18/2</u></b>	Interior/roof electrical connector	10H
<b><u>X138/1</u></b>	Front center console electrical connector	17E
<b><u>Z20/30z1</u></b>	Tracer wire connector sleeve	12D
<b><u>Z20/30z2</u></b>	Tracer wire connector sleeve	12J
<b><u>Z20/30z7</u></b>	Tracer wire connector sleeve	26C
<b><u>LIN B4</u></b>	Rear SAM LIN	11B 22B