

 
P77.21-2269-09

Shown on model 212.0

- 1 Wind deflector
2 Drip molding
3 Gasket
4 Cover

- 5 Screw
6 Net
7 Spring

- 8 Guide rail
9 Terminal strip
10 Front glass cover

	Remove/install		
⚠ Danger!	Risk of injury caused by fingers being pinched or crushed when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1	Open front glass cover		
2	Remove cover (4) and screws (5)	i Installation: Pull wind deflector (1) downwards and slide until it lies flush with the seal (3). Then tighten the bolts (5).	
3	Check seal (3) for front glass cover (10), replace if necessary.	i Lay wind deflector (1) down toward rear until seal (3) is accessible. Lubricant, rubber assembly 1 l	*BR00.45-Z-1010-06A
4	Lie wind deflector (1) forwards and remove springs (7)	Only when replacing springs (7).	
5	Remove left drip rail (2) on panoramic roof		AR88.80-P-4000EW
6	Pull the terminal strip (9) found on the mesh (6) of the wind deflector (1) out to the left of the guide rail (8) and remove wind deflector (1)		
7	Install in the reverse order		

Repair materials

Number	Designation	Order number
BR00.45-Z-1010-06A	Lubricant, rubber assembly 1 l	A 000 989 03 67