


MODEL 207.3

Shown at right rear lamp unit (E4)

- 1 Nut
- 2 Nut
- 3 Nut
- 4 Electrical connector
- 5 Right side paneling
- 6 Seals
- 7 Cover

- E3 Left rear lamp unit
- E4 Right rear lamp unit
- E18/4 Right luggage compartment lamp

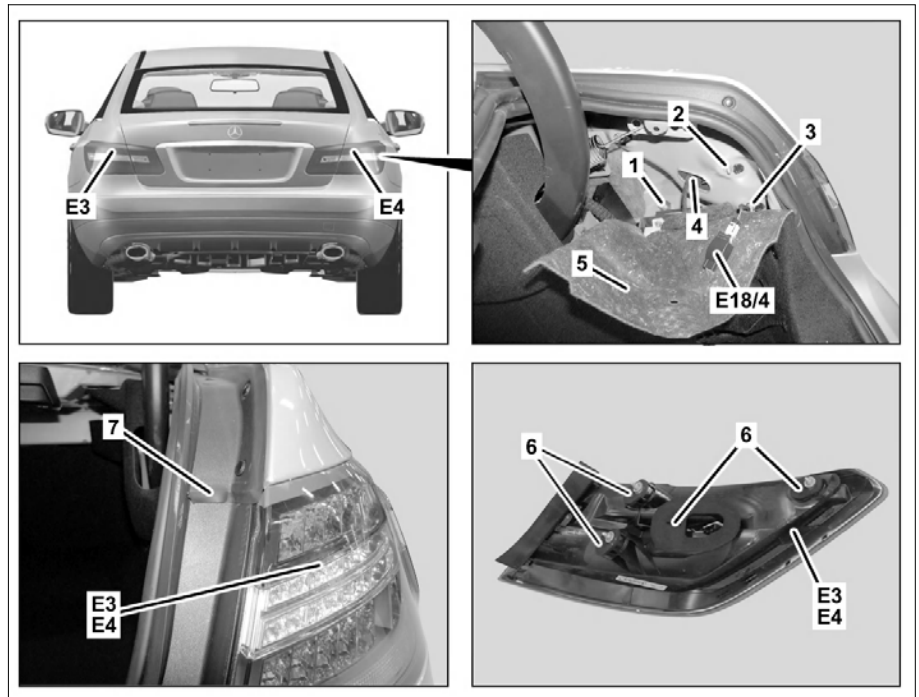

P82.10-5841-06

☒ ☒	Remove/install		
1.1	Open service flap	When removing the left rear lamp unit (E3).	
1.2	Detach right side paneling (5) in area of right rear lamp unit (E4) far enough and swivel inwards until the right rear lamp unit (E4) can be removed	When removing the right rear lamp unit (E4).	AR68.30-P-4600EC
2	Unscrew nuts (1, 2, 3)	<p>i When removing left rear lamp unit (E3) the side paneling at the left must be pushed lightly to one side to enable the nuts (2, 3) to be unscrewed.</p> <p>i Installation: Tighten the nuts (2 and 3) first.</p>	
3	Pull left rear lamp unit (E3) or right rear lamp unit (E4) backwards slightly and remove outwards until the electrical connector (4) is accessible	i Installation: Check seals (6) for damage, replace if necessary. Ensure that cover (7) is seated properly.	
4	Disconnect electrical connector (4)		
5	Install in the reverse order		