

Item	Designation	Coordinates
<u>A0</u>	Color code key	32L
<u>M25/4</u>	Driver seat lumbar support pneumatic pump	3L 9L
<u>M25/4x1</u>	Driver seat lumbar support pneumatic pump electrical connector	3J
<u>M25/5</u>	Front passenger seat lumbar support pneumatic pump	17L 23L
<u>M25/5x1</u>	Front passenger seat lumbar support pneumatic pump electrical connector	22J
<u>N10/2</u>	Rear SAM control unit with fuse and relay module	13L
<u>N10/2f44</u>	Fuse 44	14L
<u>N10/2f45</u>	Fuse 45	12L
<u>N32/1</u>	Driver seat control unit	6L
<u>N32/2</u>	Front passenger seat control unit	20L
<u>N32/23</u>	Driver seat lumbar support adjustment control unit	5A
<u>N32/24</u>	Front passenger seat lumbar support adjustment control unit	21A
<u>S109/2</u>	Driver seat lumbar support adjustment switch	1L
<u>S109/3</u>	Front passenger seat lumbar support adjustment switch	24L
<u>U12</u>	Valid for left-hand drive vehicles	10H 16H
<u>U13</u>	Valid for right-hand drive vehicles	10H 16H
<u>U63</u>	Valid for seat adjustment without memory function	8D
<u>U71</u>	Valid for fully electric seat adjustment with memory function	3D 19D
<u>W18</u>	Left front seat crossmember ground point	10L 16L
<u>W19</u>	Right front seat crossmember ground point	10L 16L
<u>X55/3</u>	Driver seat connector block	10H
<u>X55/4</u>	Front passenger seat connector block	14H
<u>Z6/94</u>	Driver seat circuit 31 connector sleeve	10E
<u>Z6/95</u>	Front passenger seat circuit 31 connector sleeve	16E
<u>Z61/18</u>	Left seat circuit 15R connector sleeve	11E
<u>Z61/19</u>	Right seat circuit 15R connector sleeve	14E