


- 1 Screw
- 2 Rod
- 3 Line fastening
- 4 Seat belt extender
- 5 Electrical connector
- 6 Nut
- 7 Bracket

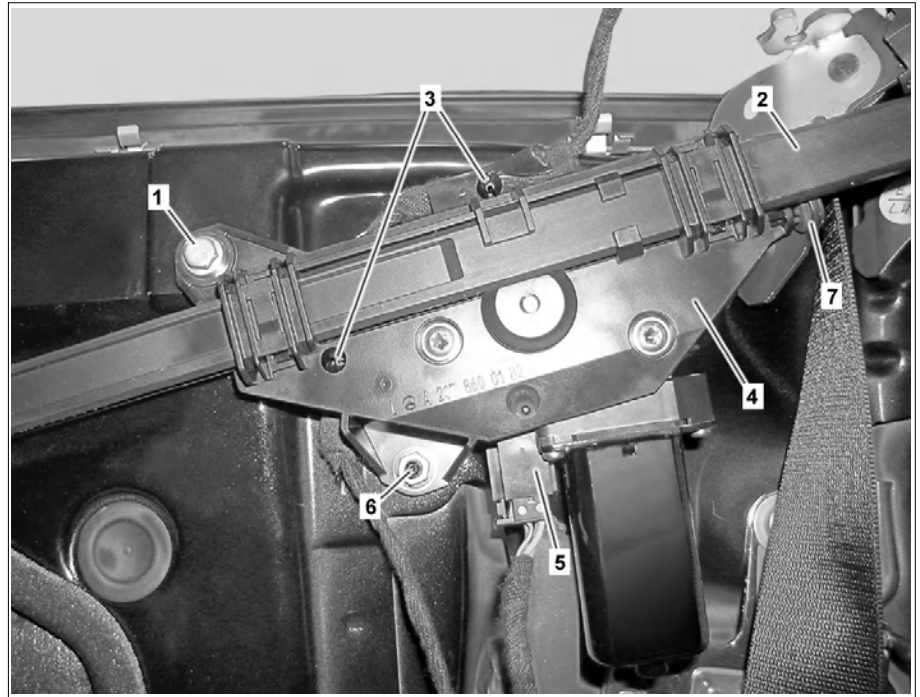

P91.45-2022-06

**Modification notes**

30.4.09	"Remove belt extender rod" added	Step 1	
---------	----------------------------------	--------	--

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove rod (2) from belt extender (4)	<p><b>i</b> The rod (2) must be removed and inserted again against the resistance from the motor and gearing.</p> <p><b>i</b> <b>Installation:</b> Do not twist seat belt.</p>	
2	Remove upper section of side paneling		AR68.30-P-4780EC
3	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit	<b>i</b> KEYLESS-GO start/stop button only with code (889) Keyless-Go	
4	Disconnect electrical connector (5)		
5	Unscrew nut (6)		
6	Unscrew bolt (1)		
7	Extend belt extender (4) out of bracket (7) toward rear		
8	Unclip line fastenings (3) at belt extender (4)		
9	Install in the reverse order		