


Choose **EFS Switch active** or **inactive** depending on position of belt feeder switch.

To **“active”** when belt feeder switch is in switch group, instrument panel (Prod 06/10 →)

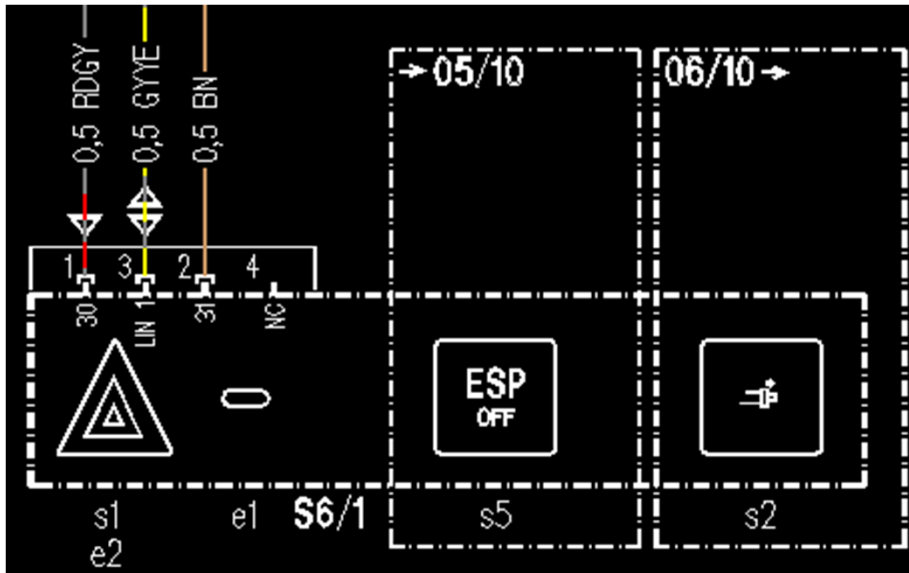

To **“inactive”** when belt feeder switch is in upper control module (Prod → 05/10)

