


MODEL 204, 207, 212, 218

Shown on model 204

- 1 Slide
- 1a Clip
- 2 Activated charcoal dust filter
- 3 AC housing
- A32m1 Blower motor

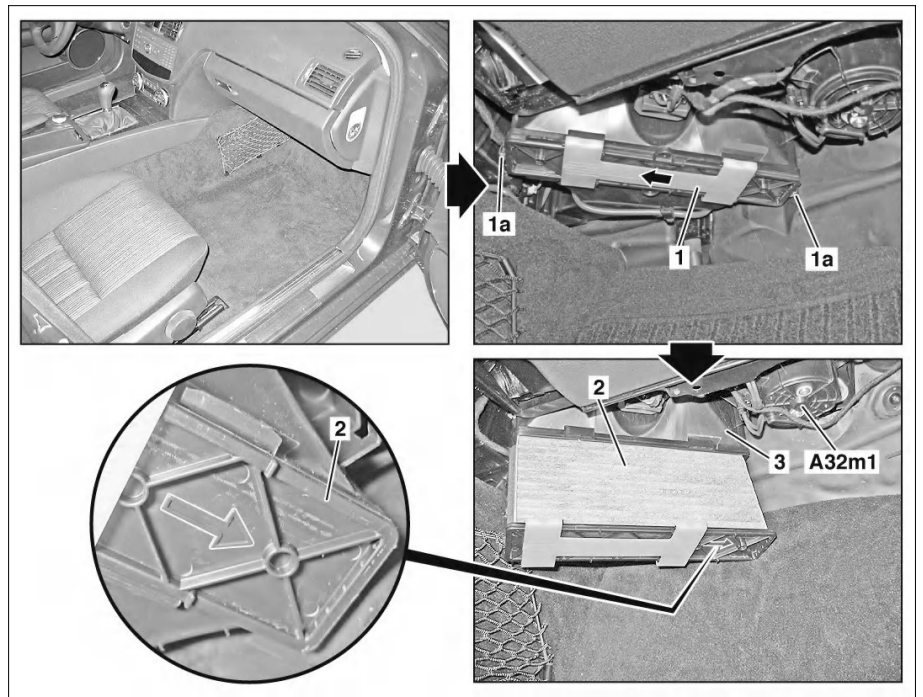

P83.00-2268-06

	Remove		
1 	Remove cover below right dashboard		AR68.10-P-1520CW
2	Lever up and remove clips (1a)		
3	Unlock slide (1) in the direction of the arrow and remove activated charcoal dust filter (2) downwards from air conditioner housing (3)		
	Clean		
4	Clean area surrounding air conditioner housing (3)		
	Disassemble		
5	Remove slide (1) from old activated charcoal dust filter (2)		
	Assemble		
6	Mount slide (1) at new activated charcoal dust filter (2)		
	Install		
7	Slide new activated charcoal dust filter (2) into air conditioner housing (A32)	i The arrow marked on the activated charcoal dust filter (2) must point toward the blower motor (A32m1).	
8	Lock activated charcoal dust filter (2) with slide (1) against the direction of the arrow	i The recess on the air conditioner housing cover must point toward the center console. Make sure that the seal is seated correctly.	
9	Press clamps (1a) together		
10 	Install cover below dashboard on right		AR68.10-P-1520CW