


MODEL 204.0, 207.4

with CODE (494) USA version

with CODE (536) SIRIUS satellite radio

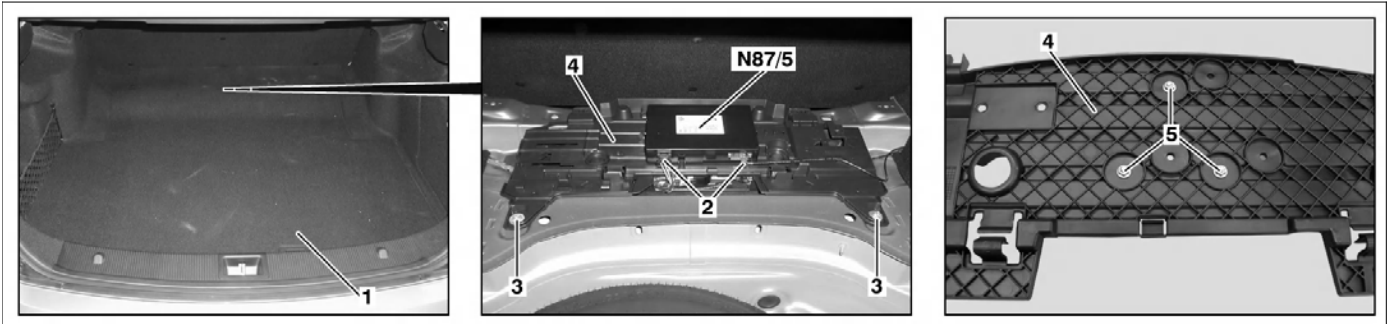

P82.60-6452-07

- 1 Trunk floor paneling
- 2 Electrical connectors
- 3 Bolts
- 4 Equipment bridge

- 5 Nut
- N87/5 Satellite digital audio radio (SDAR) control unit

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove trunk floor paneling (1)	Model 204.0	AR68.30-P-4600CW
2	Remove underbody flap		
3	Separate electrical connectors (2)		
4	Remove bolts (3) and remove equipment bridge (4)		
5	Turn equipment bridge (4) over and unscrew nut (5)		
6	Remove satellite digital audio radio (SDAR) control unit (N87/5)		
7	Install in the reverse order		