
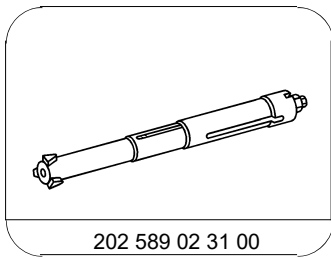


MODEL 172, 204, 207

202 589 02 31 00

Tensioning device

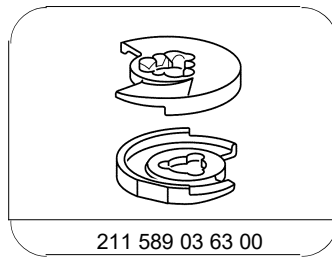

211 589 03 63 00

Clamping plates

Clamping rear spring

i When inserting the rear spring (6) make sure that the lower insert (7) and upper insert (8) are correctly seated.

1 Clamping plate (06) and Insert clamping plate (07) into rear spring.


i Insert clamping plates (06, 07) so that as many spring coils as possible can be pre-compressed.

2 Insert tensioning device (08) from below through the spring control arm (9) into Insert clamping plates (06, 07) and lock in the clamping plate (06).

3 Tension rear spring (6).

i Do not use an impact wrench.

4 Unclamp in the reverse order.

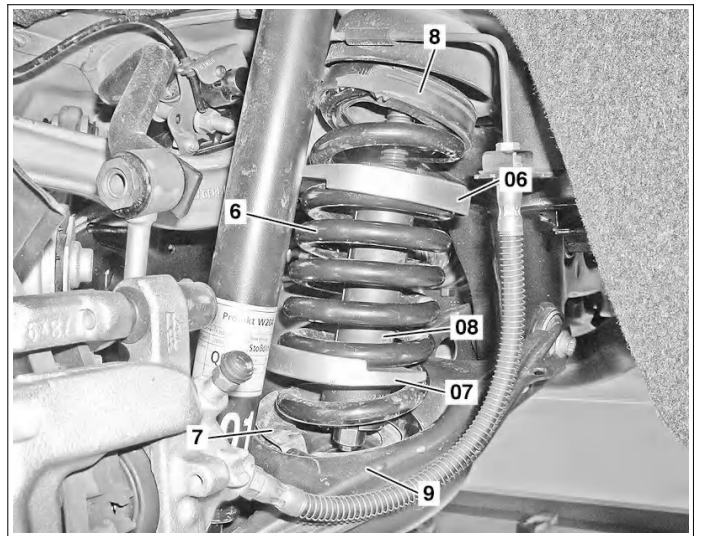

P32.20-2218-11