 


P68.50-2550-09

Shown on left side of vehicle


- 1 Retractable partition
- 2 Expansion clip
- 3 Head restraint
- 4 Cover
- 5 Partition

- 6 Bolts
- 7 Guide rail
- 8  Locating block
- 9 Gas-operated strut
- 10 Nuts

 




- 11 Electrical connector

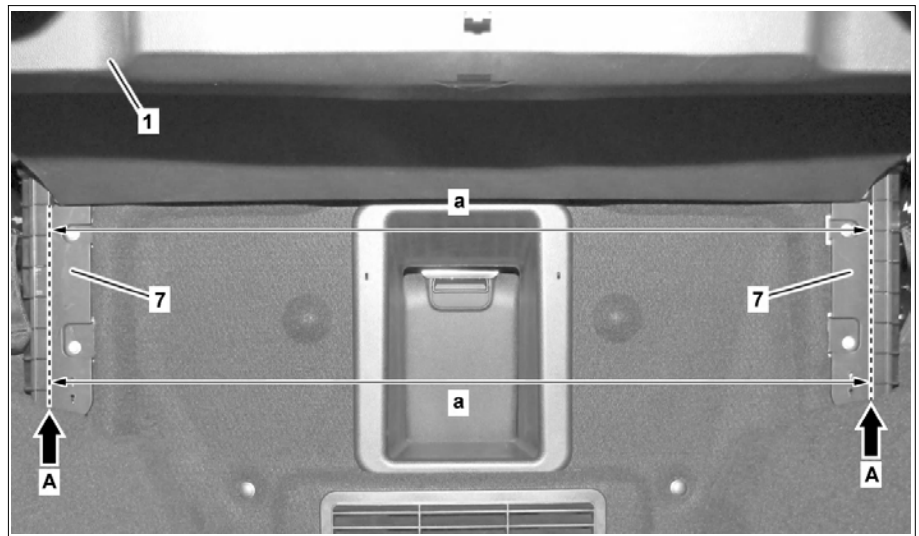- S84/9 Variable soft top compartment limit switch


- 1 Retractable partition
- 7 Guide rail



P68.50-2551-05

	Remove/install		
 Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases, even sever extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
 Danger!	Risk of injury caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	AS00.00-Z-0017-01A
1	Partially open soft top	 Leave soft top bow and soft top compartment cover in upright position	
2	Cover vehicle in rear area	 To prevent scratching the paint during assembly work.	
3	Remove expansion clip (2) below left and right head restraint (3)		

4	Take off cover (4)	i Installation: Ensure that cover (4) is seated correctly in left and right guide rail (7).	
5	Unhook left and right partition (5) at side		
6	Pivot retractable partition (1) upward		
7	Insert arresting block (8) into left and right guide rail (7) as shown	i ⚠ The retractable partition (1) is arrested in the left and right guide rail (7) by the arresting blocks (8) It may be necessary to push up the retractable partition (1) by hand so that the arresting block (8) can be inserted in the hole pattern provided in the left and right guide rail (7) Observe installation position of arresting blocks (8). ⚠ Locating block	*207589022300
8	Unscrew bolts (6) from left and right guide rail (7)	i Installation: Screw in bolts (6) on left and right guide rail (7) to stop. Determine upper gap dimension "a", align left and right guide rail (7) parallel to one another and then tighten bolts (6) on left and right guide rail (7).	
9	Remove left and right gas-filled strut (9) from retractable partition (1)	i Do not remove retainer from left and right gas-filled strut (9), otherwise the tension of the retainer is not longer ensured.	
10	Disconnect electrical connector (11) from variable soft top compartment limit switch (S84/9)		
11	Unscrew nuts (10) on left and right vehicle side from retractable partition (1)		
12	Remove retractable partition (1)		
13	Install in the reverse order		

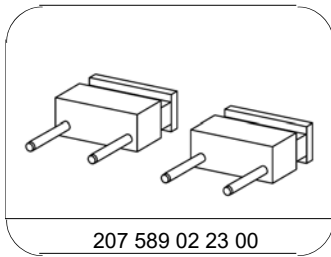

Locating block