

MODEL 207

up to model year 2014

without CODE 615 (Bi-xenon headlamp unit with integrated curve illumination)

without CODE 616 (Bi-xenon headlamp unit with integrated asymmetric curve illumination)

without CODE 621 (Intelligent Light System (left-hand traffic))

without CODE 622 (Intelligent Light System (right-hand traffic))

MODEL 212


up to model year 2014

without CODE 615 (Bi-xenon headlamp unit with integrated curve illumination)

without CODE 616 (Bi-xenon headlamp unit with integrated asymmetric curve illumination)

without CODE 621 (Intelligent Light System (left-hand traffic))

without CODE 622 (Intelligent Light System (right-hand traffic))

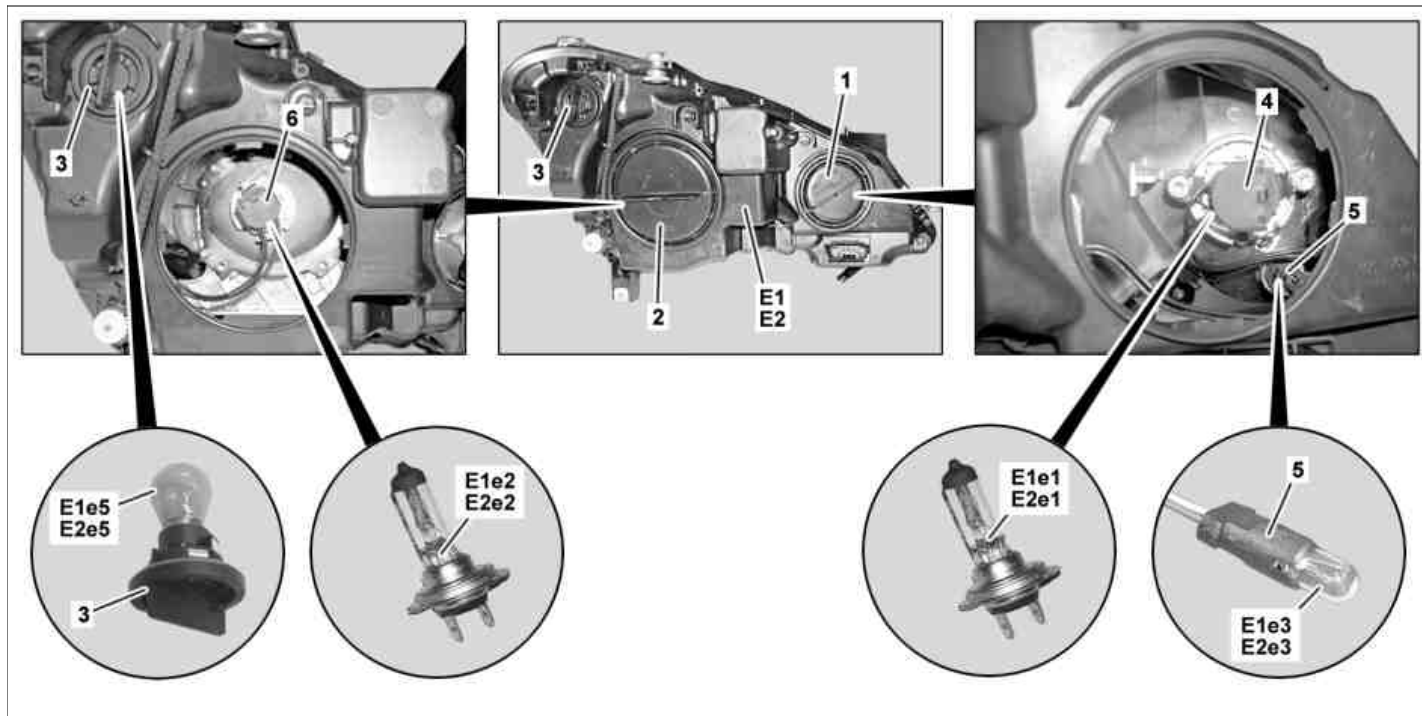

P82.10-5890-09

Shown on left front lamp unit (E1) Model 207

1	Housing cover	E1	Left front lamp unit	E2e1	Right high beam
2	Housing cover	E1e1	Left high beam	E2e2	Right low beam
3	Turn signal lamp socket	E1e2	Left low beam	E2e3	Right front standing and parking lamp
4	High beam socket	E1e3	Left front standing and parking lamp	E2e5	Right front turn signal lamp
5	Standing and parking lamp socket	E1e5	Left front turn signal lamp		
6	Low beam socket	E2	Right front lamp unit		

	Remove/install		
1	Switch off exterior lights		Always switch off exterior lights before changing bulbs. Otherwise, a short circuit may occur.
2	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit		KEYLESS-GO start/stop button only in vehicles with CODE 889 (KEYLESS-GO).

3	Open service flap in the left and right front fender liner	MODEL 207 When removing left low beam (E1e2), right low beam (E2e2), left front turn signal light (E1e5) or right front turn signal light (E2e5).	
4	Detach refrigerant line in the area of the left front lamp unit (E1) until the housing cover (2) can be removed.	MODEL 212 When removing left low beam (E1e2).	
5	Detach housing cover (1)	When removing left high beam (E1e1) or right high beam (E2e1) or left front standing light and parking light (E1e3) or right front standing light and parking light (E2e3).	
6	Detach housing cover (2)	When removing left low beam (E1e2) or right low beam (E2e2).	
7	Remove left high beam (E1e1) or right high beam (E2e1)	When removing left high beam (E1e1) or right high beam (E2e1). ⚠ Do not touch the bulb with bare fingers; use a soft cloth free of oil and grease. Otherwise, the bulbs are damaged due to overheating. ℹ Turn high beam socket (4) approx. 30° counterclockwise and remove. Pull left high beam (E1e1) or right high beam (E2e1) out of the high beam socket (4).	
8	Remove left front standing light and parking light (E1e3) or right front standing light and parking light (E2e3)	When removing left front standing light and parking light (E1e3) or right front standing light and parking light (E2e3). ⚠ Do not touch the bulb with bare fingers; use a soft cloth free of oil and grease. Otherwise, the bulbs are damaged due to overheating. ℹ Remove standing lights and parking lights socket (5) from the reflector. Pull left front standing light and parking light (E1e3) or right front standing light and parking light (E2e3) out of standing light and parking light socket (5).	
9	Remove left low beam (E1e2) or right low beam (E2e2)	When removing left low beam (E1e2) or right low beam (E2e2). ⚠ Do not touch the bulb with bare fingers; use a soft cloth free of oil and grease. Otherwise, the bulbs are damaged due to overheating. ℹ Turn low beam socket (6) approx. 30° counterclockwise and remove. Pull left low beam (E1e2) or right low beam (E2e2) out of low beam socket (6)	
10	Remove left front turn signal light (E1e5) or right front turn signal light (E2e5)	When removing left front turn signal light (E1e5) or right front turn signal light (E2e5). ⚠ Do not touch the bulb with bare fingers; use a soft cloth free of oil and grease. Otherwise, the bulbs are damaged due to overheating. ℹ Turn turn signal light socket (3) approx. 30° counterclockwise and remove. Remove left front turn signal light (E1e5) or right front turn signal light (E2e5) from turn signal light socket (3).	
11	Install in the reverse order		