


Model 238

- 1 Connection, circuit 30t "E1"
- 2 Circuit 30 "E2" connection
- F1/3 Passenger-side A-pillar fuse box

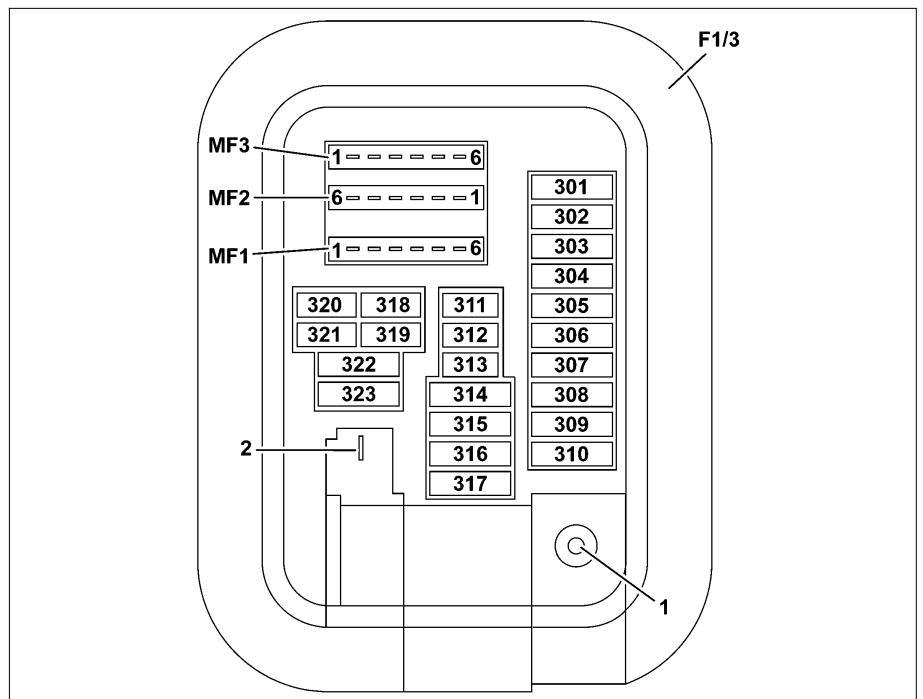

P54.15-3688-06

Slot	Fuse	Circuit	Wire Identification	Fused	Fuse rating (A)
301	Electrical fuse 301 (F1/3f301)	30t	2.5 RD	Rear control unit (N22/6)	30
302	Electrical fuse 302 (F1/3f302)	30t	2.5 RD	Right front door control unit (N69/2)	30
303	Electrical fuse 303 (F1/3f303)	30t	2.5 RDGN	With CODE 275 (Memory package): Driver's seat control unit (N32/1)	30
304	Electrical fuse 304 (F1/3f304)	30t	2.5 RDYE	With CODE 275 (Memory package): Front passenger seat control unit (N32/2)	30
305	Electrical fuse 305 (F1/3f305)	30t	0.35 RDYE	Rain/light sensor with additional functions (B38/2)	5
306	Electrical fuse 306 (F1/3f306)	30t	2.5RDGY	With code 401 (Seat climate control for driver and front passenger) or code 873 (Seat heating for driver and front passenger) and except code 275 (Memory Package): Front seat heating/seat ventilation control unit (N25/17)	30
			2.5 RD	With code 902 (Seat heater plus for driver and front passenger): Front passenger seat heater control unit (N25/4)	
307	Electrical fuse 307 (F1/3f307)	30t	0.75 RD	With code 362 (HERMES LTE): HERMES control unit (N112/9)	5
308	Electrical fuse 308 (F1/3f308)	30t	0.5 RDVT	Diagnostics connection (X11/4)	5
309	Electrical fuse 309 (F1/3f309)	30t	2.5 RDWH	With code 413 (Panoramic sliding sunroof): Panoramic sliding sunroof control module (A98)	30
310	Electrical fuse 310 (F1/3f310)	30t	4.0 RDGN	Left front reversible emergency tensioning retractor (A76)	30
			4.0 RDBK	Right front reversible emergency tensioning retractor (A76/1)	
311	Electrical fuse 311 (F1/3f311)	30t	1.0 RD	Powertrain control unit (N127)	5
				Diesel engine: CDI control unit (N3/9)	
				Gasoline engine : ME-SFI [ME] control unit (N3/10)	
312	Electrical fuse 312 (F1/3f312)	30t	0.75 RDBU	Supplemental Restraint System control unit (N2/10)	7,5
313	Electrical fuse 313 (F1/3f313)	30t	0.5 RDGN	Multimedia connection unit (A90/5)	7,5
314	Electrical fuse 314 (F1/3f314)	30t	2.5 RDBK	With code 228 (Stationary heater): Stationary heater unit (A6)	20

315	Electrical fuse 315 (F1/3f315)	30t	2.5 RD	With code M005 (4MATIC) and code M016 (Engine, high-performance): All-wheel drive control unit (N45)	-
316	Electrical fuse 316 (F1/3f316)	30t	1.5 RDWH	Model 238.3: Overhead control panel control unit (N70)	10
			0.75 RDWH	Model 238.4: Overhead control panel control unit (N70)	
317	Electrical fuse 317 (F1/3f317)	30t	1.5 RDBU	Head unit (A26/17)	15
318	Electrical fuse 318 (F1/3f318)	30	0.5 RD	With code 551 (Anti-theft alarm system (ATA)) or code 882 (Interior protection and tow-away protection): Alarm siren (H3/1)	5
319	Electrical fuse 319 (F1/3f319)	30	0.75 RDBK	With code 889 (KEYLESS-GO): KEYLESS-GO control unit (N69/5)	10
320	Electrical fuse 320 (F1/3f320)	30	0.5 RDGY	FM, AM, CL, DAB and KEYLESS-GO antenna amplifier (A2/18)	5
321	Electrical fuse 321 (F1/3f321)	30	0.75 RDYE	Electronic ignition lock control unit (N73)	10
322	Electrical fuse 322 (F1/3f322)	30	0.5 RDWH	Instrument cluster (A1)	7,5
323	Electrical fuse 323 (F1/3f323)	-	-	Spare	-
MF1	Electric multicircuit fuse 1 (F1/3MF1), pin 1	-	-	Spare	-
MF1	Electric multicircuit fuse 1 (F1/3MF1), pin 2	30t	0.75 RD	With code 513 (Traffic Sign Assist) or code 22P (Lane Tracking Package) or code P35 (Light Package) and except code 23P (Driving Assistance Package): Mono multifunction camera (A40/11)	7,5
				With code 23P (Driving assistance package): Stereo multifunction camera (A40/13)	
MF1	Electric multicircuit fuse 1 (F1/3MF1), pin 3	30t	0.5 RDYE	With code 899 (Multifunction telephony): Cellular telephone system antenna amplifier/compensator (A28/15) Front mobile phone cradle control unit (N123/8)	7,5
				With code 897 (Wireless mobile phone charging): Front mobile phone cradle control unit (N123/8)	
				With code 386 (Convenience Telephony) or code 379 (Telephone module with Bluetooth® (SAP profile)): Mobile phone contact plate (X237/1)	
MF1	Electric multicircuit fuse 1 (F1/3MF1), pin 4	30t	0.5 RDWH	With code P65 (Seat Comfort Package) or code 275 (Memory Package), except code 399 (Front multicontour seats with massage function): Driver's seat lumbar support electropneumatic controller unit (N32/23)	7,5
			0.35 RDWH	With code 399 (Front multicontour seats with massage function): Left front multicontour seat control unit (N32/15)	
MF1	Electric multicircuit fuse 1 (F1/3MF1), pin 5	30t	0.5 RDBU	With code P65 (Seat Comfort Package) or code 275 (Memory Package), except code 399 (Front multicontour seats with massage function): Front passenger seat lumbar support electropneumatic controller unit (N32/24)	7,5
			0.35 RDWH	With code 399 (Front multicontour seats with massage function): Right front multicontour seat control unit (N32/16)	
MF1	Electric multicircuit fuse 1 (F1/3MF1), pin 6	30t	0.5 RDBK	With code 239 (Active Distance Assist DISTRONIC): DISTRONIC distance pilot electric controller unit (A108/1)	7,5
				With code 23P (Driving assistance package): Short-range and long-range radar sensor (B92/12)	
MF2	Electric multicircuit fuse 2 (F1/3MF2), pin 1	-	-	Spare	-
MF2	Electric multicircuit fuse 2 (F1/3MF2), pin 2	30t	0.35 RDBK	Except code 446 (Touchpad only): Audio/COMAND control panel (A40/9)	5
			0.35 RDGY	With code 446 (Touchpad only): Touchpad (A105)	
MF2	Electric multicircuit fuse 2 (F1/3MF2), pin 3	30t	0.35 RD	With code 380 (Car telephony package): Telephone control unit (N123/9)	5

MF2	Electric multicircuit fuse 2 (F1/3MF2), pin 4	30t	0.5 RD	With code 463 (Head-up display): Heads-up display (A40/12)	5
MF2	Electric multicircuit fuse 2 (F1/3MF2), pin 5	-	-	Spare	-
MF2	Electric multicircuit fuse 2 (F1/3MF2), pin 6	30t	0.35 RDBU	With code P21 (Air quality package): Perfume atomizer generator (N59)	5
MF3	Electric multicircuit fuse 3 (F1/3MF3), pin 1	30t	0.5 RDYE	With code B01 (48V technology): Pyrofuse (F63)	5
MF3	Electric multicircuit fuse 3 (F1/3MF3), pin 2	-	-	Spare	-
MF3	Electric multicircuit fuse 3 (F1/3MF3), pin 3	30t	0.35 RD	With code 448 (Touchpad): Touchpad (A105)	5
MF3	Electric multicircuit fuse 3 (F1/3MF3), pin 4	30t	0.35 RDWH	Model 238.361/461 or with code P47 (Parking Pilot with 360° camera) and code 489 (AIR BODY CONTROL) or code P44 (Parking Package) and code 489 (AIR BODY CONTROL) or code 23P (Driving Assistance Package) or code 243 (Active Lane Keeping Assist) or code 463 (Head-up display): Driver side instrument panel button group (S6/1)	5
MF3	Electric multicircuit fuse 3 (F1/3MF3), pin 5	30t	0.35 RDVT	With CODE 581 (Automatic air conditioning): Rear air conditioning operating unit (N22/4)	5
MF3	Electric multicircuit fuse 3 (F1/3MF3), pin 6	30t	0.5 RD	With code 228 (Stationary heater): Stationary heater radio remote control receiver (A6/1)	5