


Model 238

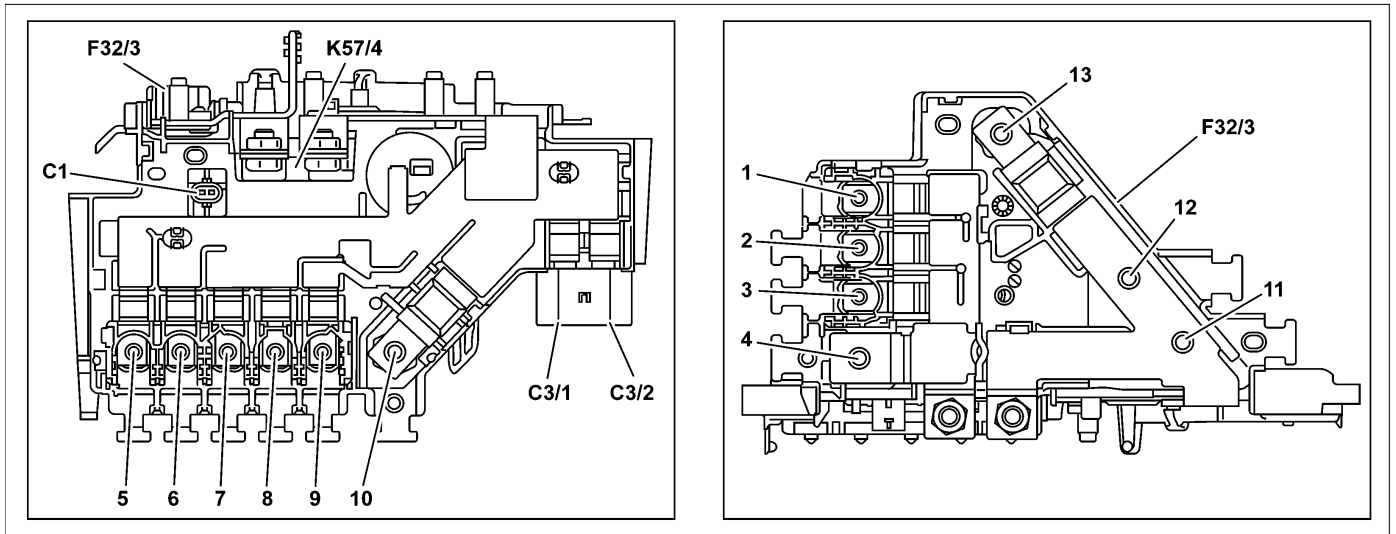

P54.15-3683-08

Side view, viewed from top

F32/3 Engine compartment prefuse box

K57/4 Battery disconnect switch relay

Vehicles up to 30.11.2017

Connection	Fuse	Circuit	Line ID (line fused)	Fused function	Rating in amperes (A)
1	Electrical fuse 1 (F32/3f1)	30t	12.0 RD	Electrical power steering control unit (N68)	100
2	Electrical fuse 2 (F32/3f2)	30t	10.0 RD (10.0 BK)	Diesel engine: Glow output stage (N14/3)	100
3	Electrical fuse 3 (F32/3f3)	30	4.0 RD	Passenger-side A-pillar fuse box (F1/3)	30
4	-	30	35.0 BK	Connection, circuit 30 from on-board electrical system battery (G1)	-
5	Electrical fuse 5 (F32/3f5)	30t	10.0 RD	Engine fuse and relay module (K40/8)	80
6	Electrical fuse 6 (F32/3f6)	30t	16.0 RDWH	Driver-side fuse and relay module (K40/6)	80
7	Electrical fuse 7 (F32/3f7)	30t	10.0 RDWH	Fan motor 600 W: Fan motor (M4/7)	80
			12.0 RD	Fan motor 850 W: Fan motor (M4/7)	
8	Electrical fuse 8 (F32/3f8)	30t	-	Spare	-
9	Electrical fuse 9 (F32/3f9)	30t	-	Spare	-
10	Electrical fuse 10 (F32/3f10)	30t	35.0 BK	Vehicle interior prefuse box (F32/4)	300
11	Electrical fuse 11 (F32/3f11)	30t	-	Spare	-
12	Electrical fuse 12 (F32/3f12)	30t	-	Spare	-
13	Electrical fuse 13 (F32/3f13)	30t	50.0 RD	LHD vehicles: Alternator (G2)	400
			50.0 BK	Right-hand steering: Alternator (G2)	
C1	-	30	-	Battery disconnect switch relay (K57/4)	-
C3/1	Electrical fuse C3/1 (F32/3fC3/1)	30t	4.0 RDBK	Electronic Stability Program control unit (N30/4)	40

C3/2	Electrical fuse C3/2 (F32/3fC3/2)	30t	6.0 RD	Electronic Stability Program control unit (N30/4)	60
------	-----------------------------------	-----	--------	---	----

Vehicles as of 01.12.2017

Connection	Fuse	Circuit	Wire Identification	Fused component	Fuse rating (A)
1	Electrical fuse 1 (F32/3f1)	30t	6.0 RD	Electronic Stability Program control unit (N30/4)	60
2	Electrical fuse 2 (F32/3f2)	30t	4.0 RDBK	Electronic Stability Program control unit (N30/4)	40
3	Electrical fuse 3 (F32/3f3)	30	4.0 RD	Passenger-side A-pillar fuse box (F1/3)	30
4	-	30	35.0 BK	Connection, circuit 30 from on-board electrical system battery (G1)	-
5	Electrical fuse 5 (F32/3f5)	30t	10.0 RD	Engine fuse and relay module (K40/8)	80
6	Electrical fuse 6 (F32/3f6)	30t	16.0 RDWH	Driver-side fuse and relay module (K40/6)	150
7	Electrical fuse 7 (F32/3f7)	30t	10.0 RDWH	Fan motor 600 W: Fan motor (M4/7)	80
			12.0 RD	Fan motor 850 W: Fan motor (M4/7)	
8	Electrical fuse 8 (F32/3f8)	30t	12.0 RD	Electrical power steering control unit (N68)	100
9	Electrical fuse 9 (F32/3f9)	30t	10.0 BK (10.0 RD)	Diesel engine: Glow output stage (N14/3)	100
			6.0 RD	Engine 264 except code B01 (48V technology): Electric coolant pump (M75/11)	60
10	Electrical fuse 10 (F32/3f10)	30t	35.0 BK	Vehicle interior prefuse box (F32/4)	300
11	Electrical fuse 11 (F32/3f11)	30t	-	Spare	-
12	Electrical fuse 12 (F32/3f12)	30t	-	Spare	-
13	Electrical fuse 13 (F32/3f13)	30t	50.0 RD	Left-hand drive vehicle except code B01 (48V technology): Alternator (G2)	400
			50.0 BK	Right-hand drive vehicle except code B01 (48V technology): Alternator (G2)	
				With code B01 (48V technology): DC/DC converter control unit (N83/1)	
C1	-	30	-	Battery disconnect switch relay (K57/4)	-