


Model 238

F32/4 Vehicle interior prefuse box

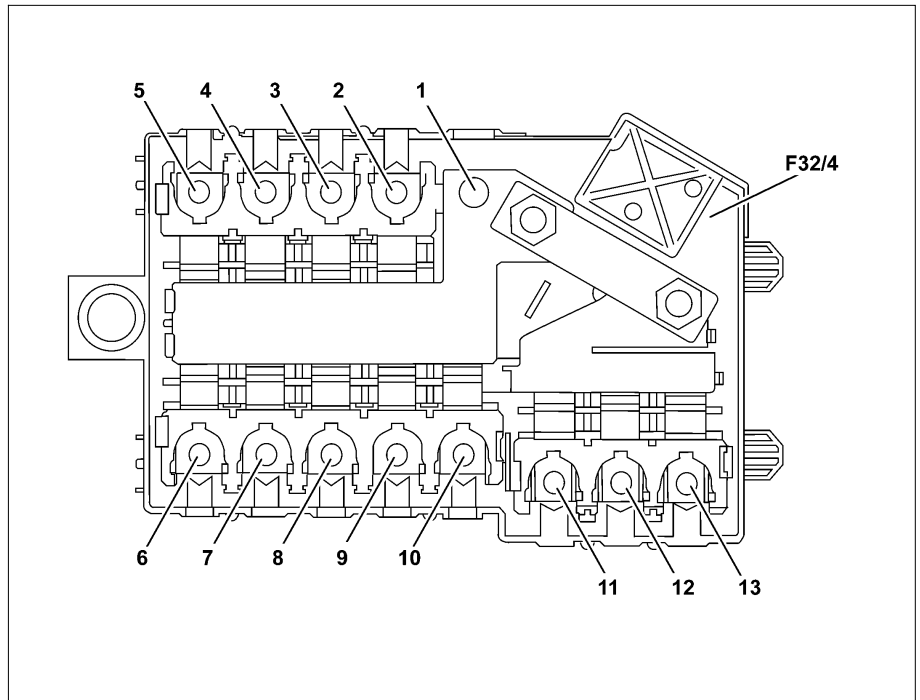

P54.15-3684-06

Connection	Fuse	Circuit	Line ID (line fused)	Fused function	Rating in amperes (A)
1	-	30t	35.0 RD	Connection, circuit 30t from engine compartment prefuse box (F32/3)	-
2	Electrical fuse 2 (F32/4f2)	30t	-	Spare	-
3	Electrical fuse 3 (F32/4f3)	30t	4.0 RD	Air conditioner housing (A32)	40
4	Electrical fuse 4 (F32/4f4)	30t	-	Spare	-
5	Electrical fuse 5 (F32/4f5)	30t	Unknown	Diesel engine: PTC heater booster (R22/3)	150
6	Electrical fuse 6 (F32/4f6)	30t	10.0 RD	Passenger-side A-pillar fuse box (F1/3)	80
7	Electrical fuse 7 (F32/4f7)	30t	16.0 RD	Rear passenger compartment fuse and relay module (K40/5)	150
8	Electrical fuse 8 (F32/4f8)	30t	-	Spare	-
9	Electrical fuse 9 (F32/4f9)	30t	-	Spare	-
10	Electrical fuse 10 (F32/4f10)	30t	6.0 BK	Transmission 725 and engine 274: Fully integrated transmission control unit (Y3/8n4)	60
			10.0 BK	Transmission 725 and except engine 274: Fully integrated transmission control unit (Y3/8n4)	100
11...13	Electrical fuse 11 (F32/4f11) - Electrical fuse 13 (F32/4f13)	30t	-	Spare	-