
Type 238

except code B01 (48V technology) except code U98 (LITHIUM-ION STARTER BATTERY (LISB))

Shown on type 238.### 1#

2 Masseleitung 3 screw 4 mounting rail 5 vent hose 6 cover

7 positive line G1 on-board battery

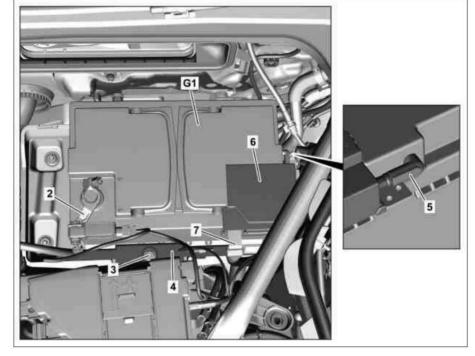

P54.10-4556-06

	burns prohibited. Wear acid protective gloves, of in battery electrolyte (contains diluted sulfuric ac	es and smoking AS54.10-Z-0001-01A oxyhydrogen. clothing from eyes, skin and mucous membranes and cid) or metal spatter due to short circuit. Danger of b trolyfiël(icosutatasletiautedappfiopricately)abretbeloorbingine	d goggles. Battery acid only urns due to short circuit.
	Notes battery		AH54.10-P-0001-01A
XX	Removal, installation		
	Disconnect the ground wire (2) of the vehicle electrical system battery (G1).		AR54.10-P-0003LWO
	Unscrew the screw (3) approx. 10 turns until the fastening rail fastening rail (4) can from the on-board power supply battery (G1); th board power supply battery (G1) is removed.	he screw (3) can be re-attached as long as the on-	
			001-01A to battery frame
	Vent hose (5) on the Disconnect the on-board battery (G1).	() Installation: Make sure the ventilation hose (5) seated correctly.	is
		Otherwise escaping battery vapors will damage the vehicle.	
	Remove cover (6).		
	Disconnect the positive line (7) of the onboard power supply battery (G1).	Nm Electrical cable nut to negative pole/ *BA5- pole on-board battery	4.10-P-1004-01A positive
	Take out the on-board battery (G1).		
	Install in reverse order		
	Confirmation of the battery change in the Front SAM control unit under the menu item Carry out controls	When replacing the on-board battery (G1).	AD00.00-P-2000-06LWO

Number	designation		Туре 238
BA54.10-P-1001-01A Sc	rew fastening rail battery to battery frame	Nm 23	

Nm Battery

Number	designation	Туре 238
BA54.10-P-1004-01A Nu	t electrical cable to negative pole/positive pole on-board battery Nm 6	