


AR82.10-P-4731CLW	Remove/install rear lamp unit	27.03.2017
-------------------	-------------------------------	------------

Model 205.3/4, 238

Shown on model 205.3

- 1 Nuts
- 2 Electrical connector
- E3 Left rear lamp unit
- E4 Right rear lamp unit

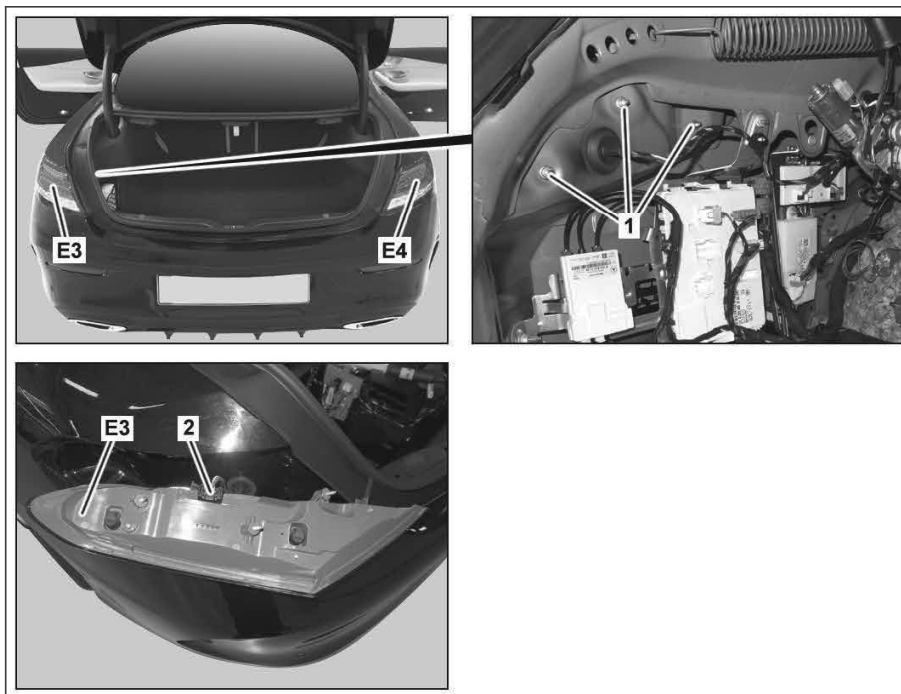

P82.10-7999-06

	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Risk of injury caused by scraping or cutting body parts on sharp vehicle parts	Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels.	AS00.00-Z-0017-01A
	Notes on sensor system for trunk lid opening/closing		AH80.61-P-0001-01A
	Remove/install		
1	Remove rear center assembly paneling		AR68.30-P-4785LW
2	Release side paneling in vicinity of left rear lamp unit (E3) or right rear lamp unit (E4) until nuts (1) are accessible	Model 238.3 Model 205.3 Model 205.4, 238.4	AR68.30-P-4800LWO AR68.30-P-4800LW AR68.30-P-4800LWR
3	Unscrew nuts (1)		
4	Remove left rear lamp unit (E3) or right rear lamp unit (E4) until electrical connector (2) is accessible		
5	Disconnect electrical connection (2) from left rear lamp unit (E3) or right rear lamp unit (E4)		
6	Remove left rear lamp unit (E3) or right rear lamp unit (E4)	Installation: Carefully position left rear lamp unit (E3) or right rear lamp unit (E4). Otherwise adjacent parts may be damaged.	
7	Install in the reverse order		