


| | | |
|-------------------|---------------------------------------|------------|
| AR82.10-P-4927CLW | Remove/install lamp unit on trunk lid | 27.03.2017 |
|-------------------|---------------------------------------|------------|

Model 205.3/4, 238

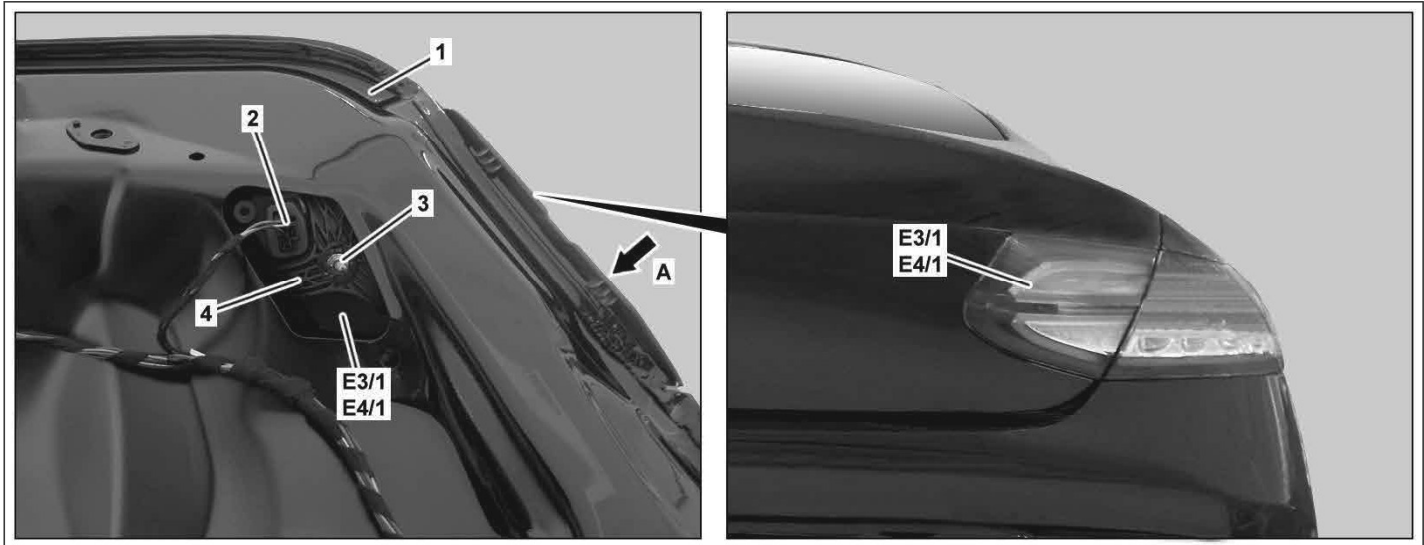

P82.10-7998-08

Shown on model 205.3

- | | | | |
|---|----------------------|------|----------------------------|
| 1 | Trunk lid | 4 | Bracket |
| 2 | Electrical connector | E3/1 | Inner left rear lamp unit |
| 3 | Nut | E4/1 | Inner right rear lamp unit |

| | | | | |
|---|----------------|--|--|---|
| | Warning | Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof. | No parts of the body or limbs should be within the operating area when the components are moving. | AS00.00-Z-0011-01A |
| | Caution | Risk of injury caused by scraping or cutting body parts on sharp vehicle parts | Always wear protective gloves when working on or near sharp and non-deburred vehicle parts. Deburr repair panels. | AS00.00-Z-0017-01A |
| | | Notes on sensor system for trunk lid opening/closing | | AH80.61-P-0001-01A |
| | Remove | | | |
| 1 | | Remove panel at trunk lid (1) | Model 238.3 Model 205.3 Model 205.4, 238.4 | AR68.30-P-8151LWE AR68.30-P-8151CLW AR68.30-P-8151LWR |
| 2 | | Disconnect electrical connection (2) | | |
| 3 | | Unscrew nut (3) | | |
| 4 | | Remove inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1) | | |
| 5 | | Remove bracket (4) outwards from the trunk lid (1) | | |
| | Install | | | |
| 6 | | Position bracket (4) onto inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1) | | |
| 7 | | Screw on nut (3) approx. 4 turns | | |

| | | | |
|----|---|--|--|
| 8 | Insert inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1) into trunk lid (1) | <p>ⓘ Do not apply pressure to the lens of the inner left rear lamp unit (E3/1) or the inner right rear lamp unit (E4/1). Otherwise damage may occur.</p> <p>ⓘ Ensure that the inner left rear lamp unit (E3/1) or the inner right rear lamp unit (E4/1) is seated correctly (arrow A).</p> | |
| 9 | Tighten nut (3) | | |
| 10 | Connect electrical connector (2) | | |
| 11 | Install panel at trunk lid (1) | <p>Model 238.3 Model 205.3 Model 205.4, 238.4</p> | <p>AR68.30-P-8151LWE AR68.30-P-8151CLW AR68.30-P-8151LWR</p> |