

Roll Bar and Head Restraints, Rear

The rear head restraints are integrated in the roll bar.

The roll bar will be automatically raised in an accident or in a potentially dangerous driving situation. A ratchet noise can be heard when the roll bar is automatically raised.

The roll bar can be lowered again after an automatic deployment by pressing the upper half (1) of the roll bar switch (for at least 8 seconds) until the roll bar drive mechanism audibly engages. Then press the lower half (2) of the switch to lower the roll bar.


Warning!

Before operating the roll bar switch make sure that the roll bar's path is clear and no persons due to inattention are injured by the moving roll bar.

For your own safety we recommend to drive with the roll bar with its integrated head restraints raised, if

- the rear seat is occupied by a passenger.
- the outside temperature is below + 5° F (-15° C).

In case of danger release the switch to immediately interrupt the operating procedure.

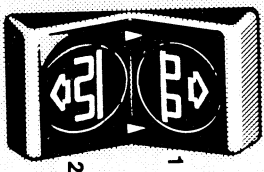

956 J023 B-1

The switches are located in the front and rear center consoles.

Turn key in steering lock to position 2.

Depress switch:

- 1 Raise roll bar.
- 2 Lower roll bar.