

MODEL 202, 208, 210, 129

- 60 Spring clips
- 61 Wire clip (model 202)
- 62 Electrical connection
- 63 Electrical connection
- A1 Instrument cluster

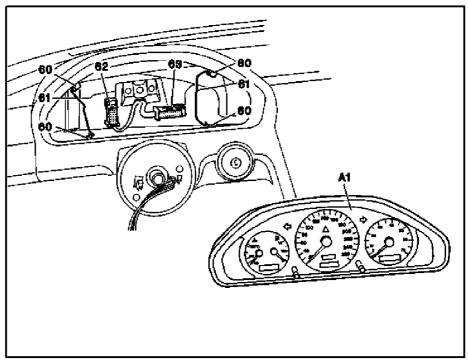

P54.30-0009-06

)()()()()()()()()()()()()()	Removal, installation		
1	Disconnect ground cable of battery	On model 210, insulate the cable terminal of the ground lead to prevent unintentional contact between the disconnected ground lead and ground point W10	AR54.10-P-0003A
2.1	Remove steering wheel	© Caution when handling the airbag unit. Improper handling may result in damage to the airbag unit Vehicles without adjustable steering wheel	AR46.10-P-0100B
2.2	Pull steering wheel completely out	Vehicles with adjustable steering wheel	
3	Pull out instrument cluster	③ Do not damage the dashboard i Installation: Press in instrument cluster evenly	AR54.30-P-6015-01Z
4	Unlock and remove electrical connections (62, 63)		
 5	Install in the reverse order		

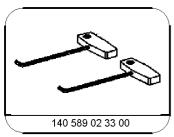

Extractor hook