

Funktion	Sich.-Nr.	Funktion	Sich.-Nr.	Funktion	Sich.-Nr.
ADS (SA)	(4)*	Innenraumschutz (SA)	5,11,19,(41)*	Schließrückmeldung	5,19,(41)*
Anhänger Dauerplus (SA)	12	Innenspiegel abblenden (SA)	4	Servoschließung (T-Limousine)	5,7,19
Außenspiegel abblenden (SA)	4	Kofferraumleuchte	3,19	Sitzbelüftung (SA)	3
Ausstiegsleuchten (SA)	1,2,19,(16,18)*	Komfortschließung	1,4,19,(16,41)*	Sitzheizung (SA)	17,18,(12)*
Auto - Pilot - System (SA)	5	Kopfstützenentriegelung hinten	5,19,(41)*	Sitzverstellung	8,9,(11)*
COMAND (SA)	5	Kraftstoffpumpe	6	Sitzverstellung Memory (SA)	1,8,9,13,14,(16)*
Deckenleuchten	3,4,19	Lenksäulenverstellung (SA)	8,9,13,14	Soundsystem (SA)	16
EDW m. Abschleppschutz (SA)	5,11,19,(41)*	Make - Up - Spiegel (SA)	4	Spiegelheizung Beifahrer	1
Fensterheber	1,2,3,(16,18)*	Radio	5	Spiegelverstellung	1,3,(16)*
Fondeseleuchte (SA)	3,(11)*	Regensensor (SA)	4	Sprachbediensystem (SA)	15,(4,7,10)*
Garagentoröffner (SA)	4	Reifendruckkontrolle (SA)	15,(14)*	Telefonsysteme (SA)	15,(23)*
Heckdeckelfernentriegelung	3,5,19	Rückwärtsgangerkennung	3	TV/Video (SA)	10
Heckwischer (T-Limousine)	19,(12,41,44)*	Scheibenwaschpumpe	5,19,(41,43)*	Zentralverriegelung	1,4,5,19,(16,41)*
Heizbare Heckscheibe	19,(41)*	Schiebe - Hebe - Dach (SA)	4,(41)*	....	....

Sicherungs Nr.	Si.-Wert+Farbe
11,15,(23,42)*	7,5A – braun
3,10,(4,10,12,13,40,43)*	10 A – rot
(2,3,5,7,9,11,14,15,41)*	15 A – blau
1,2,7,17,18,(16,17,18)*	20 A – gelb
4,5,6,8,9,12,13,14,16	25 A – klar
19,(19,44)*	40 A – orange

**Bitte beachten:**

Weitere Sicherungen auf Seite 2 !

\* Hinweise: Eingeklammerte Sicherungen (dünne Schrift) befinden sich in der vorderen Sicherungsdose.  
 Weitere Sicherungen befinden sich im Cockpit neben dem Lichtschalter.  
 Die Sicherungsabziehhilfe befindet sich im Bordwerkzeug.  
 (SA) = Funktion gehört zu einer Sonderausstattung.

**Achtung: Überlastungsgefahr!**  
 Nur vorgeschriebene Sicherungen verwenden.

30.09.1998

Side 1 **A** Fuse designation

⊕ A 210 545 25 00

Side 2 **A** Fuse designation

⊕ A 210 545 25 00

function	fuse - no.	function	fuse - no.	function	fuse - no.
Adjustable mirrors	1,3,(16)*	Heated mirror, passenger side	1	Seat heater (SE)	17,18,(12)*
Adjustable steering column	8,9,13,14	Heated rear window	19,(41)*	Seat ventilation (SE)	3
ADS (SE)	(4)*	Language control system (SE)	15,(4,7,10)*	Sound system (SE)	16
Anti-theft alarm system (SE)	5,11,19,(41)*	Locking check - back	5,19,(41)*	Tail gate closing assist (T-model)	5,7,19
Autom. dimming ext. mirror (SE)	4	Make - up mirrors	4	Telephone systems (SE)	15,(23)*
Autom. dimming int. mirror (SE)	4	Power windows	1,2,3,(16,18)*	Tilting / sliding roof (SE)	4,(41)*
Central locking system	1,4,5,19,(16,41)*	Radio	5	Tire pressure monitor (SE)	15,(14)*
COMAND (SE)	5	Rain sensor (SE)	4	Trailer power supply (SE)	12
Convenience locking	1,4,19,(16,41)*	Rear head release	5,19,(41)*	Trunk light	3,19
Courtesy lights	1,2,19,(16,18)*	Rear reading lamp (SE)	3,(11)*	TV/Video (SE)	10
Dome lights	3,4,19	Rear window wiper (T-model)	19,(12,41,44)*	Windshield washer system	5,19,(41,43)*
E-Call	15,(23)*	Remote trunk release	3,5,19	****	****
Fuel pump	6	Reverse gear recognition	3		
Garage door opener	4	Seat adjustment Memory	1,8,9,13,14,(16)*		

fuse - no.	fuse rating+col.
11,15,(23,42)*	7,5A -- brown
3,10,(4,10,12,13,40,43)*	10 A -- red
(2,3,5,7,9,11,14,15,41)*	15 A -- blue
1,2,7,17,18,(16,17,18)*	20 A -- yellow
4,5,6,8,9,12,13,14,16	25 A -- natural
19,(19,44)*	40 A -- orange

**Please note:**  
Further fuses on side 2 !

30.09.1998

**\* Note:** Fuses in brackets (thin lettering) are to be found in the front fuse box.  
Further fuses are to be found in the cockpit near the light switch.  
The fuse extractor is to be found in the vehicle tool kit.  
(SE)=function of a special equipment item.

**Warning: Danger of overloading!**  
**Only use specified fuses.**