


⊕ 210 545 02 00 SB 01.95

## Allocation of fuses

- Fuse 7,5 A (brown)
- △ Fuse 15 A (light blue)

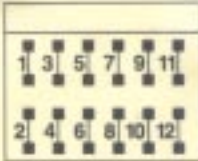

Fuse extractor in tool kit  
Electrical accessories written in  
brackets are special options

### Fuse no.    El. accessory

- |      |   |
|------|---|
| 1    | Not assigned  |
| 2 △  | Brake lamp/ (Tempomat-cruise control)   |
| 3 ○  | Right high beam<br>High beam indicator lamp   |
| 4 △  | Reversing lamp/turn signal lamp<br>(Control, rear wiper/anti-dazzle rear view mirror<br>Control, parking aid) |
| 5 ○  | Left high beam  |
| 6 △  | Right low beam  |
| 7 ○  | Right parking/tail lamp side maker  |
| 8 △  | Left low beam   |
| 9 △  | Fog lamp  |
| 10 ○ | Left parking/tail lamp side maker   |
| 11 ○ | Licence plate/instrument cluster<br>lighting/symbol lighting  |
| 12 ○ | Rear fog lamp   |

**NOTE: Observe Amperage!**

**Located under cover at left end  
of dash. Door must be open.**