

Side 1 <b>A</b> Fuse designation		Ⓢ210 545 17 00		Side 2 <b>A</b> Fuse designation		Ⓢ210 545 17 00	
function	fuse - no.	function	fuse - no.	function	fuse - no.	function	fuse - no.
Adjustable mirror, driver's side	3,(16)*	Engine residual heat sys. (SE)	5,19,(4,7)*	Reverse gear recognition	3		
Adjustable mirror, passen. side	1,3	Fuel pump	6	Seat adjustment (SE)	1,8,9,13,14,(16)*		
Adjustable steer. column (SE)	8,9,13,14	Garage door opener	4	Seat heater (SE)	17,18,(12)*		
ADS (SE)	11	Heated mirror, passen. side	1	Sound system (SE)	16		
Anti-theft alarm system (SE)	5,11,19	Heated rear window	19,(41)*	Tail gate closing assist (T-model)	5,7,19		
Autom. dimming ext. mirror (SE)	4	Locking check - back	5,19,(41)*	Telephone (SE)	15,(23)*		
Autom. dimming int. mirror (SE)	4	Make - up mirror (SE)	4	Tilting / sliding roof (SE)	4,(41)*		
Central locking system	1,4,5,19,(16,41)*	Passen. side power window	1,3	Trailer power supply (SE)	12		
Convenience locking	1,4,19,(16,41)*	Power window, rear right	2,3	Trunk light	3,19		
Cooler box (SE)	10	Radio (SE)	5,(11)*	Windshield washer system	5,19,(41,43)*		
Courtesy lights	1,2,19,(16,18)*	Rain sensor (SE)	4	****	****		
Dome light front	4	Rear head release	5,19,(41)*				
Dome light rear	3,19	Rear window wiper (T-model)	19,(12,41,44)*				
Elect. Stability Program (SE)	11	Remote trunk release	3,5,19				

fuse - no.	fuse rating+col.
3,11,15,(2,10,23,42)*	7,5A - brown
10,(4,12,43)*	10 A - red
(1,3,6,7,9,11,14,15,19,41)*	15 A - blue
1,2,7,17,18,(16,17,18)*	20 A - yellow
4,5,6,8,9,12,13,14,16	25 A - natural
19,(44)*	40 A - orange

**Please note:**  
Further fuses on side 2 III

01.04.1997

**\*Note:** Fuses in brackets (thin lettering) are to be found under the rear seat. Further fuses are to be found in the cockpit near the light switch. The fuse extractor is to be found in the vehicle tool kit. (SE)=function of a special equipment item.

**Warning: Danger of overloading!**  
Only use specified fuses.

**Located under rear seat cushion on passenger side. Lift seat cushion and remove felt covered pane. Card is in slot on side of fuse panel.**