


AR54.30-P-6015EA

Removing and installing instrument cluster




9.7.93

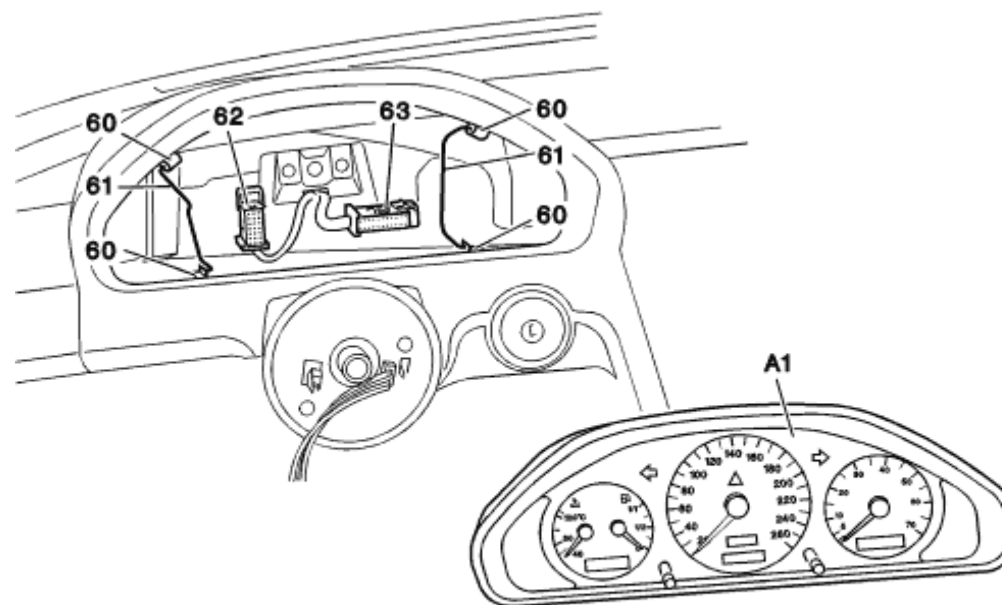


 
MODEL 210


60 Spring clips
 61 Wire clip (model 202)
 62 Electrical connection
 63 Electrical connection
 A1 Instrument cluster



P54.30-0009-06

 	Removal, installation		
1	Disconnect ground cable of battery	 On model 210, insulate the cable terminal of the ground lead to prevent unintentional contact between the disconnected ground lead and ground point W10	AR54.10-P-0003A
2.1	Remove steering wheel		

		 Caution when handling the airbag unit. Improper handling may result in damage to the airbag unit	
		Vehicles without adjustable steering wheel	
2.2	Pull steering wheel completely out	Vehicles with adjustable steering wheel	
3	Pull out instrument cluster	  Do not damage the dashboard	AR54.30-P-6015-01Z
		 Installation: Press in instrument cluster evenly	
4	Unlock and remove electrical connections (62, 63)		
5	Install in the reverse order		

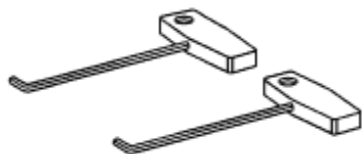

140 589 02 33 00

Extractor hook